

## PARTS LIST

Description	Qty.
Lightbar Assembly, N944	1
Connectors, Scotchlok	6
10-24 Screw	4
M8 x 35 Screw	2
Washer, Flat	2

## PREPARATION

1. Make certain the motorcycle is securely positioned for this installation. Cover the front fender with a protective cloth to avoid scratches.
2. Remove Headlight from Headlight Shell (screwdriver), set aside.
3. Disconnect Turn signal wires inside Headlight Shell.
4. Remove the nuts holding the headlight shell to the lower triple clamp. Nuts will be reused. (12mm socket and ratchet)
5. Remove Turn signals from motorcycle, set aside they will not be reused.
6. Use the 10-24 screws to mount the Turn Signals to the light bar.

## INSTALLATION

**NOTE:** An assistant will make steps 1 (A through B) easier.

1. Mount the Light Bar Assembly:
  - A. Place the Light Bar assembly so the center mount bracket is between the lower Triple Clamp and the mounting bracket for the Headlight Shell.
  - B. From the top, insert the M8 x 35 screws provided through the Light Bar center mount bracket and into the triple clamp. From underneath, install a flat washer and secure with stock nut. Tighten to manufacturers specified torque. **Figure 1 & 2.**
2. Wire the Light Bar assembly:

**NOTE:** check vertical aim of the lamps. They should aim approximately 5° downward. If adjustment is required see "Adjustment" page 2 of this instruction otherwise proceed with wiring step 2.

- A. Route Spotlight wires into Headlight Shell.
- B. Attach wires as recommended in the following list. Do one at a time and check for correct operation. You may need to change wire connections to get the correct operation. (Connectors and Pliers).

	Light Bar	Motorcycle
Turnsignal, Left	Short Red	= Orange
Turnsignal, Right	Short Red	= Blue
Running Light, Left	Short Black	= Orange/White
Running Light, Right	Short Black	= Blue/White
Passing Lamps	Long Blue	= White (lo beam)
Ground		= Green

3. Reinstall the headlight and rim.
4. Verify proper operation of all lights before riding.

**NOTE:** Grounding is through the fork and frame.

**NOTE:** Check local regulations for proper passing lamp operation. Some states require passing lamps be lit only with hi-beam.

## INSTALLATION AND OWNER'S MANUAL N944 LIGHT BAR for Honda® VTX1300 S



Screwdriver, #2 Phillips  
Socket, 12mm, and Ratchet Wrench  
Wrench, 12mm  
Pliers, Slip Joint  
Hex Key 5/32" or 4mm

**NOTE:** The service manual may be helpful in the installation.

**NOTE:** right and left on the motorcycle are determined from the rider's position.



Figure 1. Attach Turn Signal with 10-24 Screws.



Figure 2

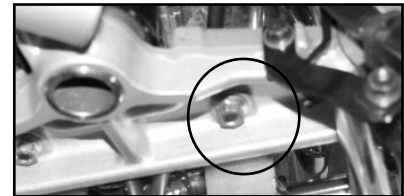


Figure 3

### Note, Light Bar Wiring Helpful Hints:


The **long Blue** wire is the main power wire for the spotlights on the light bar. Connect that to the main power source from the headlight. Either the High Beam wire or the Low Beam wire. The choice is your preference. Turn on bike and Check.

The two short **RED** wires are for the turn signals. One **RED** wire for the Left side turn signal and one for the Right side turn signal. Turn on bike and check.

The two short **BLACK** wires are for the running lights. One **BLACK** wire for the Left side running light and one for the Right side running light. Turn on bike and check.

The Light Bar attached to the front fork of the motorcycle serves as the ground in most cases. A precautionary step to insure proper grounding is to take one of the Green Ground wires from the existing turn signals and ground that between the Light Bar Mount and the Triple Tree Bracket.

Always start by doing one side at a time. Preferably the right side or high side of the bike first.

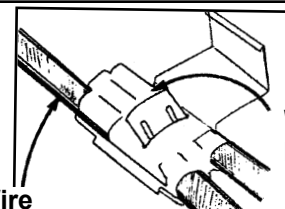

Wire From Light Bar  
Insert To Stop.

Through Wire

## WARNING

After wiring the light bar check for clearance. Make sure the wires can not get pinched when the fork is turned to a full fork lock left and right.

Check all lights for proper operation.

Check the tightness of all fasteners that have been involved in this installation.

## MAINTENANCE

The high quality chrome finish of your National Cycle light bar can be maintained with any quality chrome cleaner and /or polish.

## REPLACEMENT PARTS and ACCESSORIES

Order parts through your local dealer or contact National Cycle.


Description	Part No.
Light Head Assembly	90-910501-000
Lamp Assembly E13/DOT	
Reflector, Lens and Bulb	90-901011-000
Turn Signal Assembly	90-930920-000
Turn Signal Lens	90-930213-000

Turn Signal Bulb Only: Bulb 1157 Available at Most Auto Parts Stores.

### Light Bar Accessories

Chrome Visor	N9005
Alternate Thumb Switch	N9001

## ADJUSTMENT

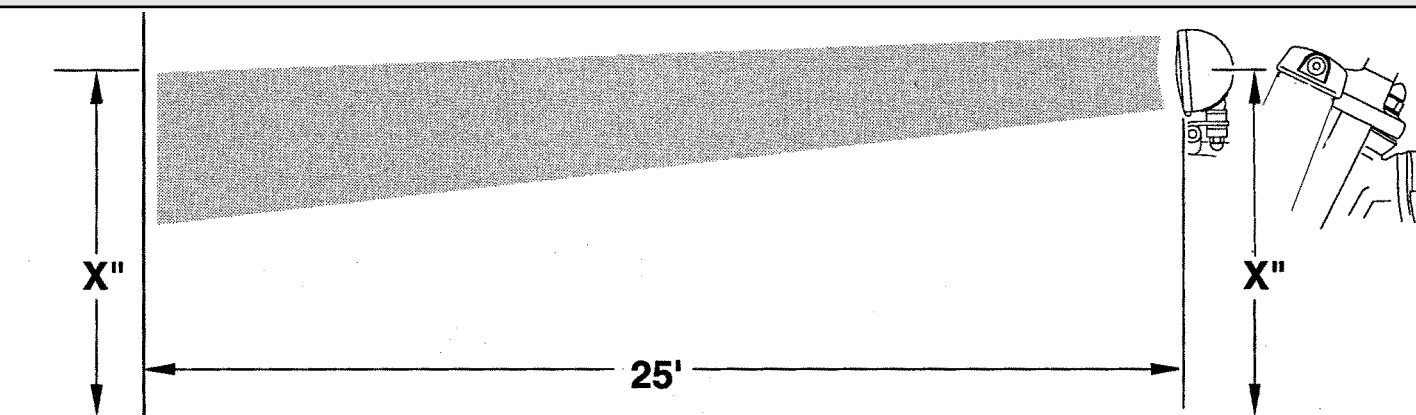

### 1. HORIZONTAL AIM

**A.** To adjust the Spotlights or Turnsignals right or left gently rotate the lamp into the correct position. In the event that the lamps become loose, refer to the procedure for vertical adjustment.

### 2. VERTICAL AIM

- A.** Disconnect wire connections inside the Headlight Shell.
- B.** Pull the wires out of the Light Bar tube.
- C.** Turn the Turn signal to provide access to the mounting screws.
- D.** Unscrew the Turn signal mounting screws and remove the Turnsignal (Hex Key).
- E.** Push the Spotlight wire up into the Spotlight Shell.
- F.** Loosen the nut on the Spotlight stud (Deep Socket).
- G.** Now, adjust the Spotlight. Reconnect the spotlight wire and illuminate to verify its projection.
- H.** Push wire into the Spotlight Shell.
- I.** Firmly retighten the nut on the Spotlight stud.
- J.** Pull the wire out of the Spotlight Shell.
- K.** Reassemble in reverse order of disassembly.
- L.** Adjust the Spotlights and Turn signals horizontally by rotating into position.
- M.** Verify operation of the lights.



To adjust vertical aim you will need these

**additional tools:** Hex Key, 5/32" or 4mm  
Deep Socket and Socket, 9/16" (14mm) or a 9/16"  
Slotted Socket.

**NOTE:** As a substitute for the deep socket you may use a slotted socket such as Snap On Brand part number FRX181 used in the auto trade as an OXY Sensor Socket. This eliminates the need to disconnect and move the wires.

### Installing optional N9005 Light Head Visor.

- 1.** Loosen the rim of the light head assembly. (Phillips Screw Driver).
- 2.** Slip tabs of Visor under rim. Item E.
- 3.** Shape Visor / Visor Tabs to conform to contours of light head assembly.
- 4.** Retighten rim.

