



www.barkbusters.net

Preparation

Remove the original handguards (if fitted). For the Tenere, also remove original bar end weights.

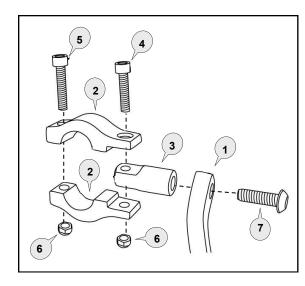

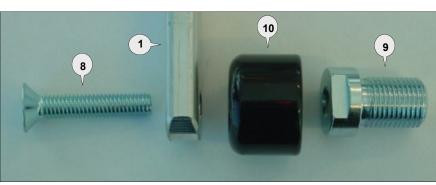

FITTING INSTRUCTIONS

for...

<u>Note:</u> BMW R1100GS / R1150GS:

YAMAHA Tenere:

Items (9) and (10) are not required. Fit backbone (1) directly to original bar end weight with bolt (8).

When fitting to Tenere you may need to adjust the handlebar position back or forward a little to clear fairing and tank when the steering is at full lock.

Bar Side View

YAMAHA XTZ660 Tenere ('08 on)

BMW R1100GS

BMW R1150GS

BMW R1150GSA

 Personalise Your Protection

 Guard options sold separately

 JET-003

 YPS-003

 Storrm

 STM-003

 CARBON



Phone: +61 (0)2 4271 8244 Email: info@barkbusters.net

Important Fitting Procedure


Loosely assemble the clamp to the handlebar as per diagram. Attach the handguard with applicable parts to the handlebar end and also to the clamp connector (3).

Position backbone so it is horizontal when viewed from the side and tighten bolt (8).

The clamp bolts must be tightened in the following order:

Tighten bolt (7) through the aluminium bar (1) to the clamp connector (3) of the clamp assembly. **Tighten bolt (4)** to solidly lock the swivel section (3) between the clamp saddles (2). **Tighten bolt (5)** to secure the clamp assembly firmly to the handlebar.

Note: The clamp is designed to allow the nut on bolt (4) to pull into the recessed hole. This eliminates the need for a wrench after the bolt starts to tighten.

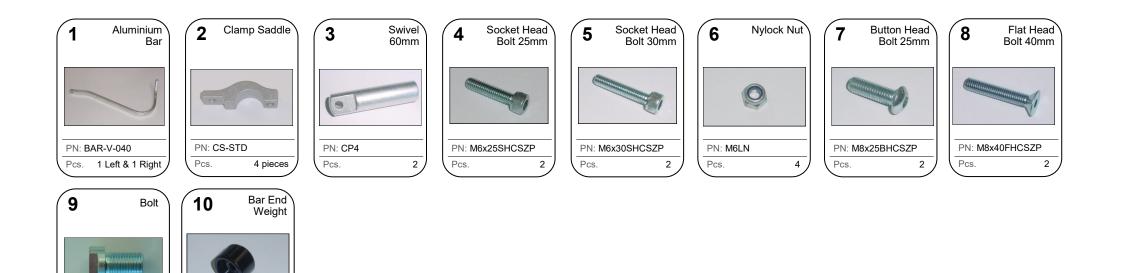

CAUTION:

PN: BESF2

Pcs.

PN: BEW-35

2

Pcs.

2

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the below table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

It is important there is a working clearance (approx 3mm) between the throttle grip end and the handguard to ensure a free closing throttle. Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight.

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	20 Nm (14.8 lbf ft)





Phone: +61 (0)2 4271 8244 Email: info@barkbusters.net Web: www.barkbusters.net



Disclaimer:


A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.



FITTING INSTRUCTIONS for... BBZ Fabric Guards

"built for **BLIZZARD** conditions"

Installation to a Handlebar with Bar End Weight / Cap

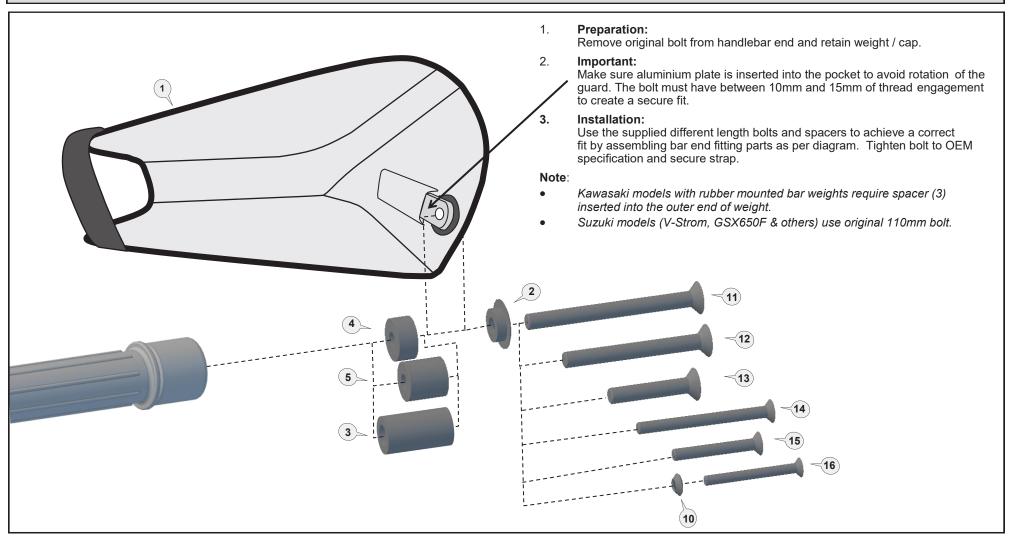



Installation to a Hollow Handlebar 1. Preparation: If the handlebar grips are not open at the end they will need to be cut open for the handguard to be fitted. See *Fitting Tips* page for details. 2. Important: Make sure the aluminium plate is inserted into the pocket to avoid rotation of the guard. Installation: Assemble bar end fitting parts as per diagram. Different length spacers and bolts can be used to space the guard out for additional lever clearance. Tighten bolt to recommended torque and secure strap. 2 (11) (7) 6 (12) 5 9



www.barkbusters.net

FITTING TIPS

• The Barkbusters BBZ fabric handguard is designed to flex around the windscreen / fairing if it makes contact when the steering is at full lock.

Closed Grip Preparation:

If the handlebar grips are not open at the end they will need to be cut open for the guard to be installed. Use a sharp knife to cut a hole in the end of each handgrip. On the right side the hole size should be neat and no smaller than the inside diameter of the throttle tube. Loosen the throttle assembly to move it outward about 20mm. Roll back the end of the grip and use a hacksaw to carefully cut off the end cap of the plastic throttle tube. Do not remove more than 3mm and take care not to cut the underlying handlebar. Before refitting, remove any burrs that could restrict throttle movement.

 Installation over Two Point Mount Aluminium Backbone (sold separately): Remove backbone from handlebar and remove plastic guard from backbone, if installed.

Insert appropriate length bolt through collar (2), BBZ Guard (1) and outer end of backbone.

Fit expander parts and insert into handlebar or attach to threaded bar end, as required: (spacers and aluminium plate not required). Re-install backbone and tighten bolts. Secure strap.


• Honda models with rotating bar weight.

The bar weight on many Honda models can rotate. If you experience rotation (up and down) of the handguard we recommend removal of the weight and internal handlebar parts to create a hollow handlebar. After the below removal procedure has been performed the guard can be installed using the hollow handlebar installation procedure.

Left side, roll back hand grip and depress the two retaining clips through the holes in the handlebar with a screwdriver. There is one top and one bottom. To access holes on right side, unscrew throttle housing and separate the two halves enough to slide the twist grip in from the end. Leave handlebar weight connected to the internal weight to help with removing the internal parts. Pull on weight while pressing clips through hole. See pictures below.





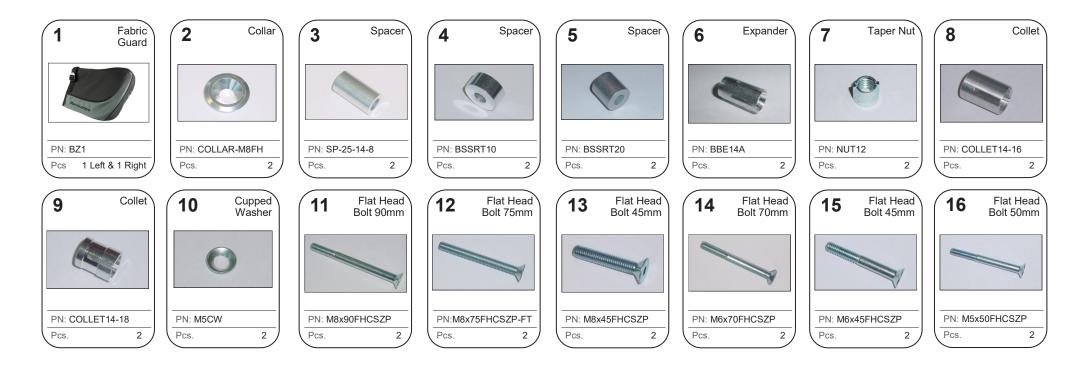

NOTE:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician.

WARNING:

Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. This check should be performed with the steering straight and also when it is at left and right full lock. If the lever end touches the guard extra spacers may be required at the handlebar end mounting point. On some motorcycles the guard may touch near the levers pivot point and hinder its function. If this occurs reposition the handguard to avoid interference. Do not ride the motorcycle with the guards installed if any controls are not operating correctly. Check periodically that all bolts are tight.

CAUTION:

Rideworx accepts no liability for damages caused by improper mounting. All bolts including all provided by Rideworx, should be tightened to the torque settings recommended by your motorcycle's manufacturer. If unavailable, use torque settings in the table provided. After the first 50km of riding check all bolts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

Recomm	ended Torque Settings
M5	6 Nm (4.4 lbf ft)
M6	10 Nm (7.4 lbf ft)
M8	20 Nm (14.8 lbf ft)



Phone: +61 (0)2 4271 8244 Email: info@barkbusters.net Web: www.barkbusters.net



<u>Disclaimer</u>:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.