



12414/12415 Yamaha MT-10 (SP) Seat Cowl Fitting Instructions

Please note: this Seat Cowl is designed to fit the standard MT-10 seat and not the comfort seat.

- Remove seat & seat strap.
- Slide Seat Cowl on from the rear of the seat.
- Re-fit the seat to the bike.

Any questions?
support@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



12414/12415 Yamaha MT-10 (SP) Seat Cowl Fitting Instructions

Please note: this Seat Cowl is designed to fit the standard MT-10 seat and not the comfort seat.

- Remove seat & seat strap.
- Slide Seat Cowl on from the rear of the seat.
- Re-fit the seat to the bike.

Any questions?
support@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



12414/12415 Yamaha MT-10 (SP) Seat Cowl Fitting Instructions

Please note: this Seat Cowl is designed to fit the standard MT-10 seat and not the comfort seat.

- Remove seat & seat strap.
- Slide Seat Cowl on from the rear of the seat.
- Re-fit the seat to the bike.

Any questions?
support@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



12414/12415 Yamaha MT-10 (SP) Seat Cowl Fitting Instructions

Please note: this Seat Cowl is designed to fit the standard MT-10 seat and not the comfort seat.

- Remove seat & seat strap.
- Slide Seat Cowl on from the rear of the seat.
- Re-fit the seat to the bike.

Any questions?
support@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



12414/12415 Yamaha MT-10 (SP) Seat Cowl Fitting Instructions

Please note: this Seat Cowl is designed to fit the standard MT-10 seat and not the comfort seat.

- Remove seat & seat strap.
- Slide Seat Cowl on from the rear of the seat.
- Re-fit the seat to the bike.

Any questions?
support@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk

