

Revision: 02

Schutzbügel SUZUKI GSF 1250 Bandit Bj. '07 Crash Bar SUZUKI GSF 1250 Bandit Bi. '07

Montagehinweise

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

M8	23 Nm
M10	46 Nm

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.

SW-MOTECH GmbH & Co. KG Ernteweg 8/10 35282 Rauschenberg Germany

Tel. +49 (o) 64 25/8 16 8-00 Fax +49 (o) 64 25/8 16 8-10

info@sw-motech.com www.sw-motech.com

Mounting Instructions


SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW-MOTECH takes no responsibility for damages caused by improper installation.

All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:


M8	23 Nm
M10	46 Nm

proper torque.

(i.e., "Locktite") should be used to

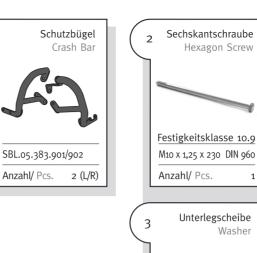

A 10,5

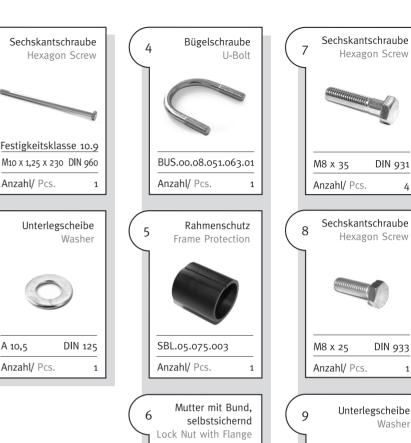



Hexagon Screw

DIN 931

DIN 933

5

Hexagon Screw

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the

Medium strength liquid thread-locker secure all screws, bolts and nuts.

