

Read these instructions carefully and thoroughly before beginning work. Dealers if installing this windshield for a customer please give them this manual. It contains information needed to properly maintain and use this product.



Attention:

Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.



Note:

Tips for facilitation of operation, control and adjustment, as well as maintenance work.

TOOL REQUIRED:

6mm Hex Key
2, 17mm Combination or Open End Wrenches



Figure 1




Figure 2



Figure 3

CONTENTS OF KIT

Item	Description	Qty.
Z5300 Kit Contains:		
37-375450-000	Extender Bracket	2
51-515820-000	Screw, M10	2
49-491010-000	Washer Split	2

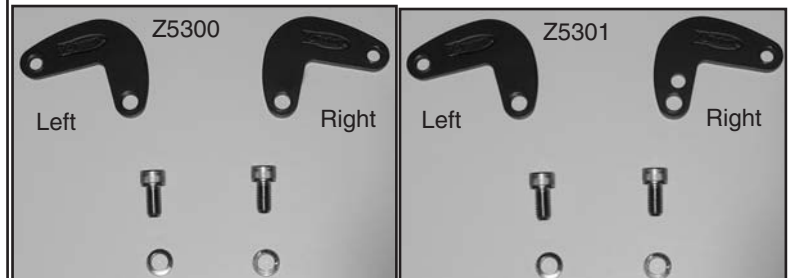

Item	Description	Qty.
Z5301 Kit Contains:		
37-375450-000	Extender Bracket, Left	1
37-375451-000	Extender Bracket with Hole, Right	1
51-515820-000	Screw, M10	2
49-491010-000	Washer Split	2

PREPARATION



All Stock hardware will be re-used.

1. Remove the stock mirrors.

INSTALLATION

1. Use the M10 Screw and Split Washer to install the Left Extender Bracket. **Tighten Firmly (6mm Hex Key) Figure 1**
2. Install the stock mirror mount hardware to the hole in the Extender Bracket and tighten firmly. **(17mm Wrench) Figure 2**
3. Install mirror. **(17mm and 11/16" Wrench) Figure 3**
4. Repeat procedure on Right side.