

# **INSTALLATION INSTRUCTIONS** For Harley-Davidson FLT

N7047, Rear of Rear Fender Tip

## **Attention**



Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.

#### Note:



Tips for facilitation of operation, control and adjustment, as well as maintenance work.

## PARTS LIST FOR N7047

Part 70-710091-000	Description Rear of Rear Fender	<u>Qty.</u> 1
BAG #588 42-423050-000	Nut, Nylok	2
49-490531-000	Washer	2
55-568216-000	Screw, M5	2


## PREPARATION:

# Thank you for purchasing a National Cycle product.

- 1. Position motorcycle securely on its stand or a work
- 2. Clean the fender thoroughly.

#### INSTALLATION of REAR FENDER TIP

- 1. Cover the area of the fender where the Fender Tip will mount with a thin layer of masking tape. Make certain the tape is smooth.
- 2. Carefully, position the Rear Fender Tip on the fender, make sure the Tip is centered on the fender. Figure 1
- 3. Mark the hole locations with the marking pen. Figure 2
- 4. Remove the Fender Tip.
- 5. To avoid the drill slipping on the fender, use the Center Punch to make an impression at the center of your mark. Drill holes through the fender at the marks. Figure 3



- 6. Remove the masking tape.
- 7. Position the Fender Tip, and squeeze fender toward tip. Insert the Screws from the outside. Install the Washers and Nuts to the inside. Tighten securely. Figure 4

#### **MAINTENANCE**

Clean and polish with a chrome cleaner/polish. Check tightness of the nuts regularly.

# Marking Pen

**TOOLS REQUIRED:** 

Small Wood Block 1/2" Thick (not shown)

Center Punch

Masking Tape

Power Drill with 7/32" Drill Bit 5/16" Wrench

No. 2 Phillips Screwdriver

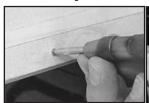





Figure 1 (The photos used are stock installation photos)



Figure 2





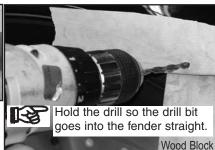



Finished Installation, FLT

