

**Attention**



Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.

**Note:**



Tips for facilitation of operation, control and adjustment, as well as maintenance work.



**TOOLS REQUIRED:**  
 Phillips Screwdriver  
 4mm Hex Key Wrench

**PARTS LIST**

<u>Index</u>	<u>Description</u>	<u>Qty.</u>
1	Windshield, FMR Coated polycarbonate	1

**INSTALLATION**



**Retain all fasteners and front plates, as they will be reused.**

1. Remove outer plates and stock windshield. (**Phillips Screw Driver**)
2. Place VStream Windshield into position on motorcycle. Install windshield using stock screws and front plates. (**Phillips Screw Driver**) Tighten the screws firmly. **Do not over tighten**



The VStrom has a height adjustable mount plate. The National Cycle N20213 will function in any position. To change mount plate to higher position remove the Hex Screws and Washers from 4 locations, slide mount plate upward and re-install hardware. **Tighten firmly, do not over tighten (4mm Hex Key Wrench). Figure 1**



Final adjustment. Check clearance at full fork lock left and right. VStream is designed to clear mirrors. Adjust mirrors if necessary. **Figure 2**

**MAINTENANCE**

**Cleaning:** Wash with a clean soft cloth, plenty of warm water and, if necessary, a non-abrasive soap such as dish-washing liquid. Flannel or soft chamois make good cleaning cloths. Do not use rain protective products on the screen due to the solvent action of the alcohol in these products. Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

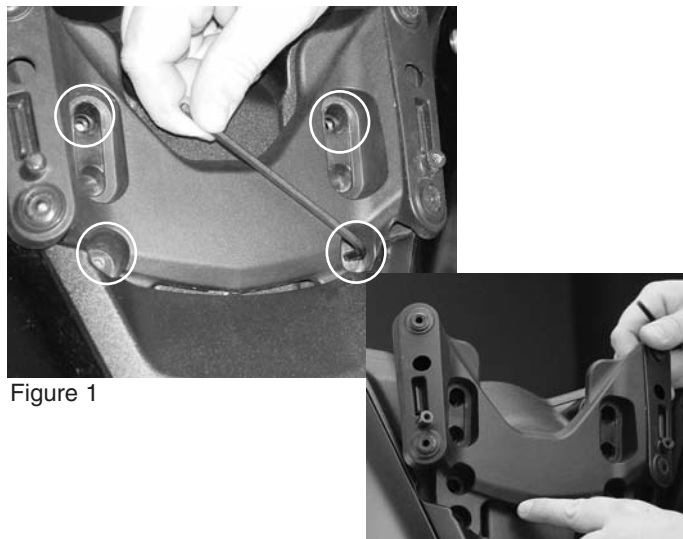


Figure 1



Figure 2