

# INSTALLATION INSTRUCTIONS For Yamaha XV1600 Roadstar

N7033, Rear of Rear Fender Tip

## **Attention**



Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.

## Note



Tips for facilitation of operation, control and adjustment, as well as maintenance work.

## PARTS LIST FOR N7033

Part	Description	Qty
70-710095-000	Rear of Rear Fender	1
BAG #588		
42-423050-000	Nut, Nylok	2
49-490531-000	Washer	2
55-568216-000	Screw, M5	2

Thank you for purchasing a National Cycle product.

#### **PREPARATION**

- 1. Position motorcycle securely on its stand or a work stand.
- 2. Clean the fender thoroughly.
- 3. Cover the area of the fender where the Fender Tip will mount with a thin layer of masking tape. Make certain the tape is smooth.

## **INSTALLATION of REAR FENDER TIP**

- 1. Carefully, position the Rear Fender Tip on the fender, make sure the Tip is centered on the fender. Figure 1
- 3. Mark the hole locations with the marking pen. Figure 2
- 4. Remove the Fender Tip.
- 5. To avoid the drill slipping on the fender, use the Center Punch to make an impression at the center of your mark. Drill holes through the fender at the marks. Figure 3



Due to close clearances between front fender and tire, place block of wood between the fender and the tire to avoid tire damage. Figure 3

- 6. Remove the masking tape.
- 7. Position the Fender Tip, and squeeze fender toward tip. Insert the Screws from the outside. Install the Washers and Nuts to the inside. Tighten securely. Figure 4

### **MAINTENANCE**

Clean and polish with a chrome cleaner/polish. Check tightness of the nuts regularly.

#### **TOOLS REQUIRED:**

Masking Tape Marking Pen Small Wood Block 1/2" Thick (not shown) Center Punch Power Drill with 7/32" Drill Bit 5/16" Wrench No. 2 Phillips Screwdriver



Note: Stock installation photos used.




Figure 1



Figure 2





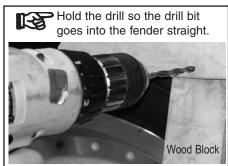



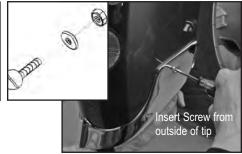


Figure 4