

## CB650F 2014> Belly Pan

### Kit contents:

2x mounting brackets

3x M6 x 16 flange head socket

3x M6 nylock nut

3x M6 flat steel washer

4x M6 black plastic washer

1X M6 x 30 flange head socket

1x 20mm black plastic spacer



### Method:

- ! Refer to figs 1 and 2 for general layout of brackets. Attach the two brackets as shown – Using original engine bolts – Fully tighten.
- ! Loosely attach belly pan to these brackets with 3 x M6 x 16 screws, with black plastic washer, flat steel washer and nylock nut.
- ! The fourth fixing point is into a pre-drilled and taped hole at the bottom right hand side of the bike chassis. Use the M6 x 30 screw and black plastic washer along with the 20mm black plastic spacer provided.
- ! Now tighten all four mountings checking for even clearance of the belly pan – especially around the exhaust.

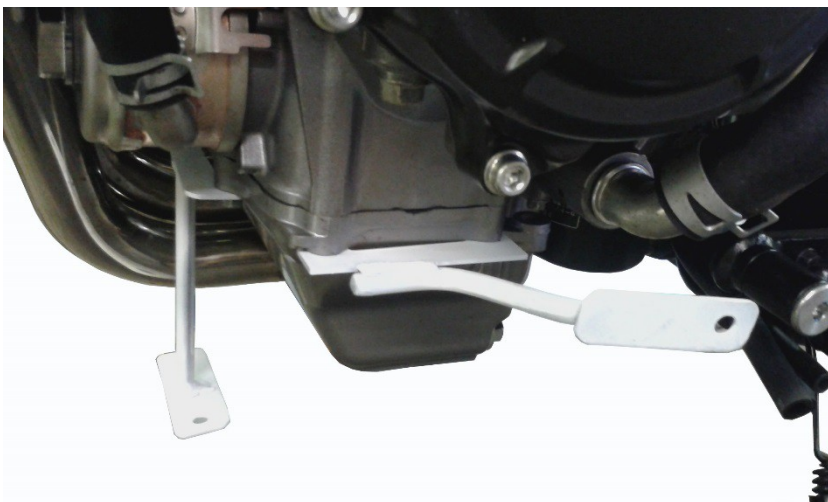


Fig 1



Fig 2