




| Push-Rivet | Extenda Fenda & Hugger Extension Fitting Instructions

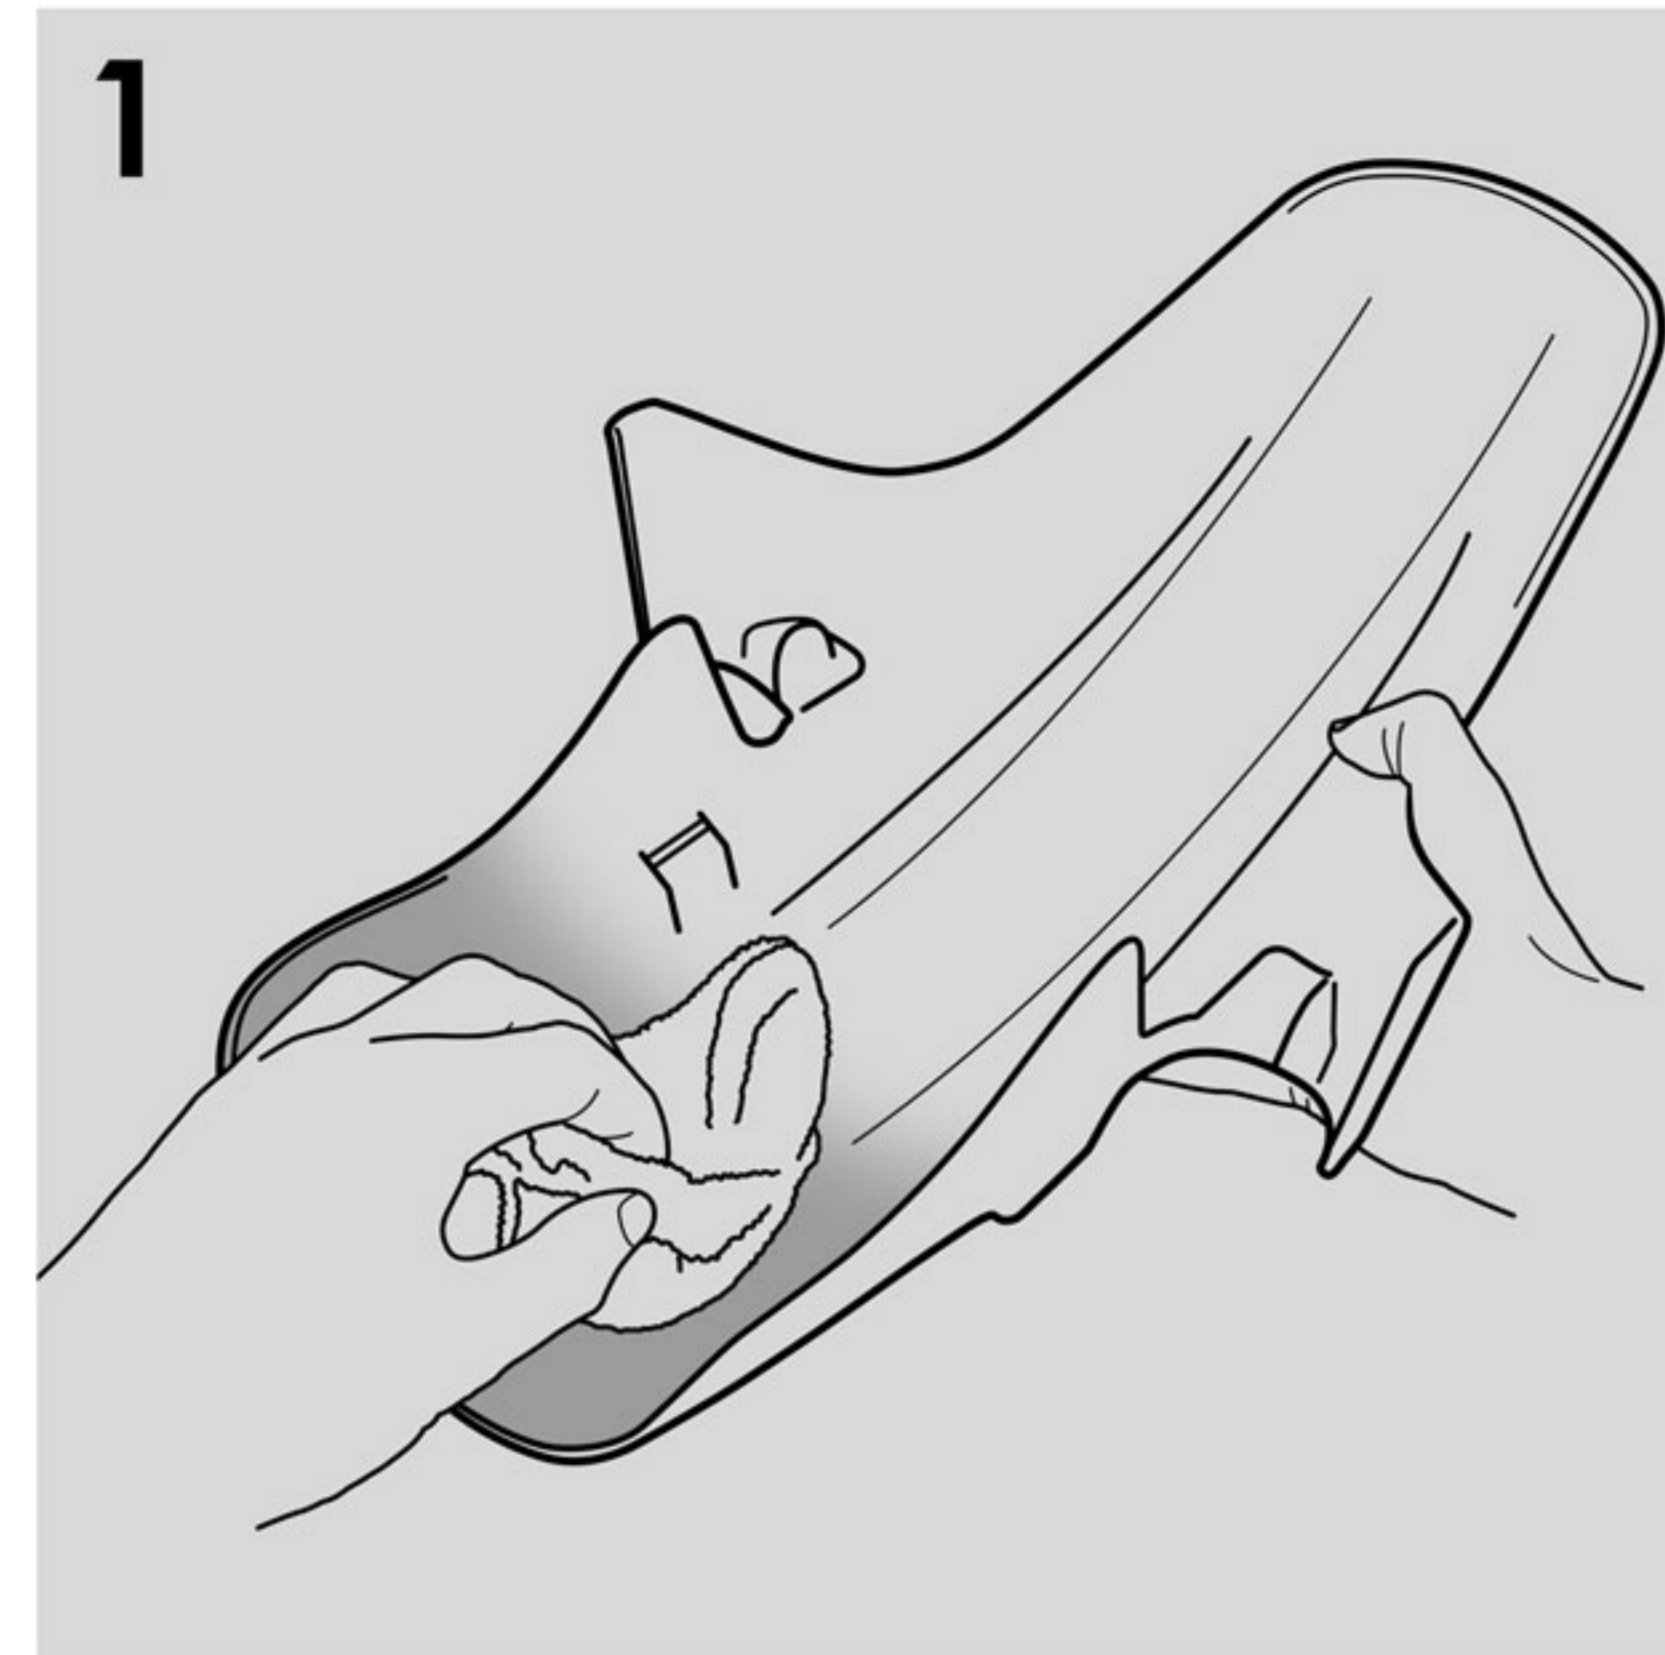


Remove mudguard from bike & clean inside.

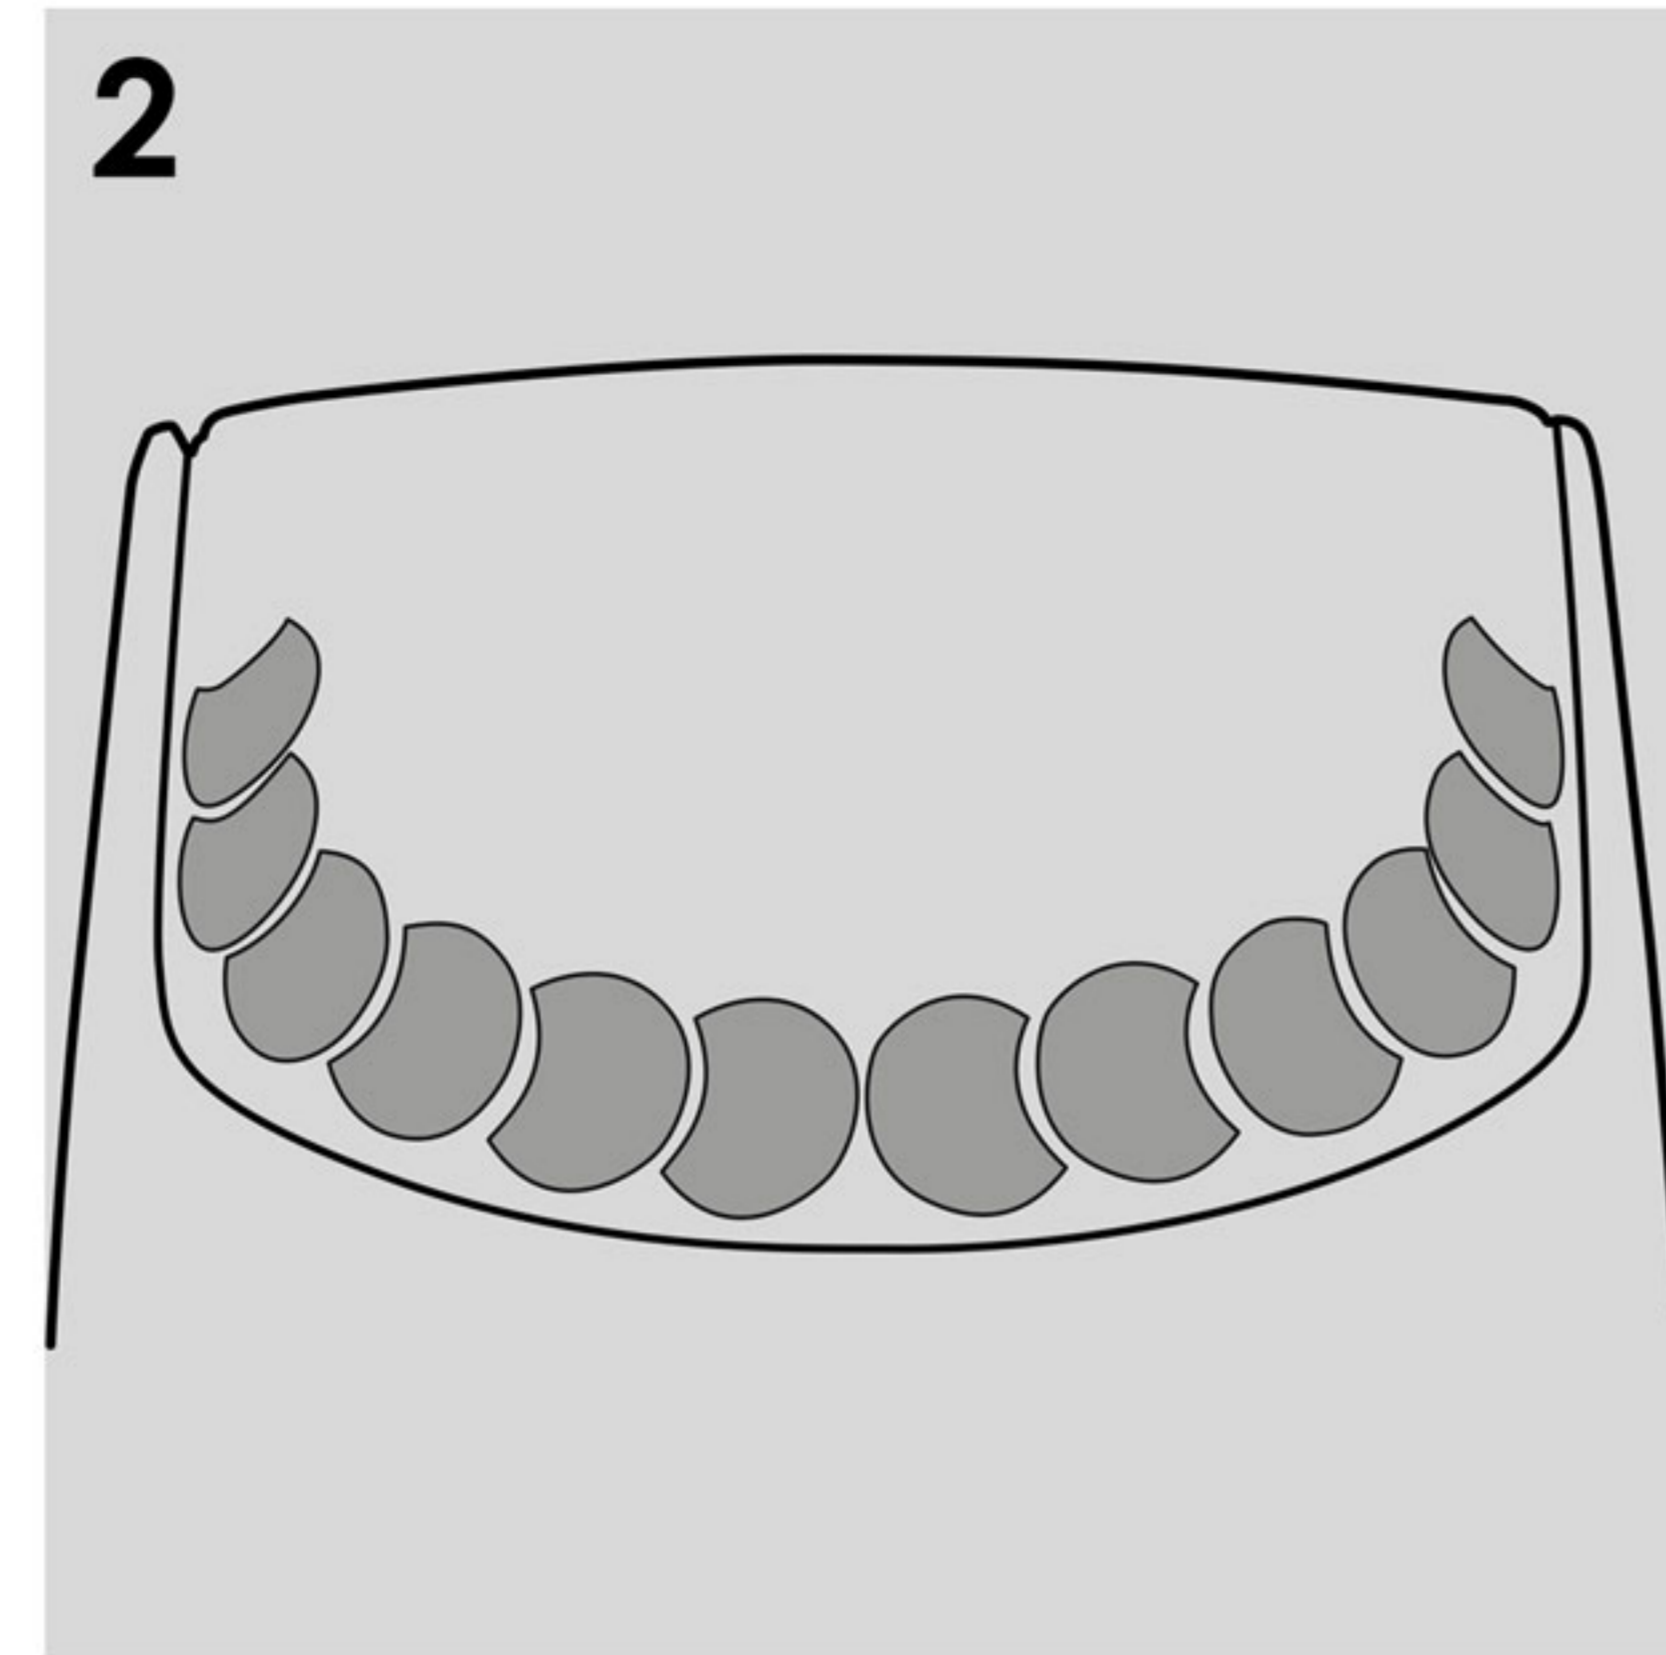


Attach a few Stick-Fit pads to the Extenda Fenda /Hugger Extension in area shown to create a gasket.

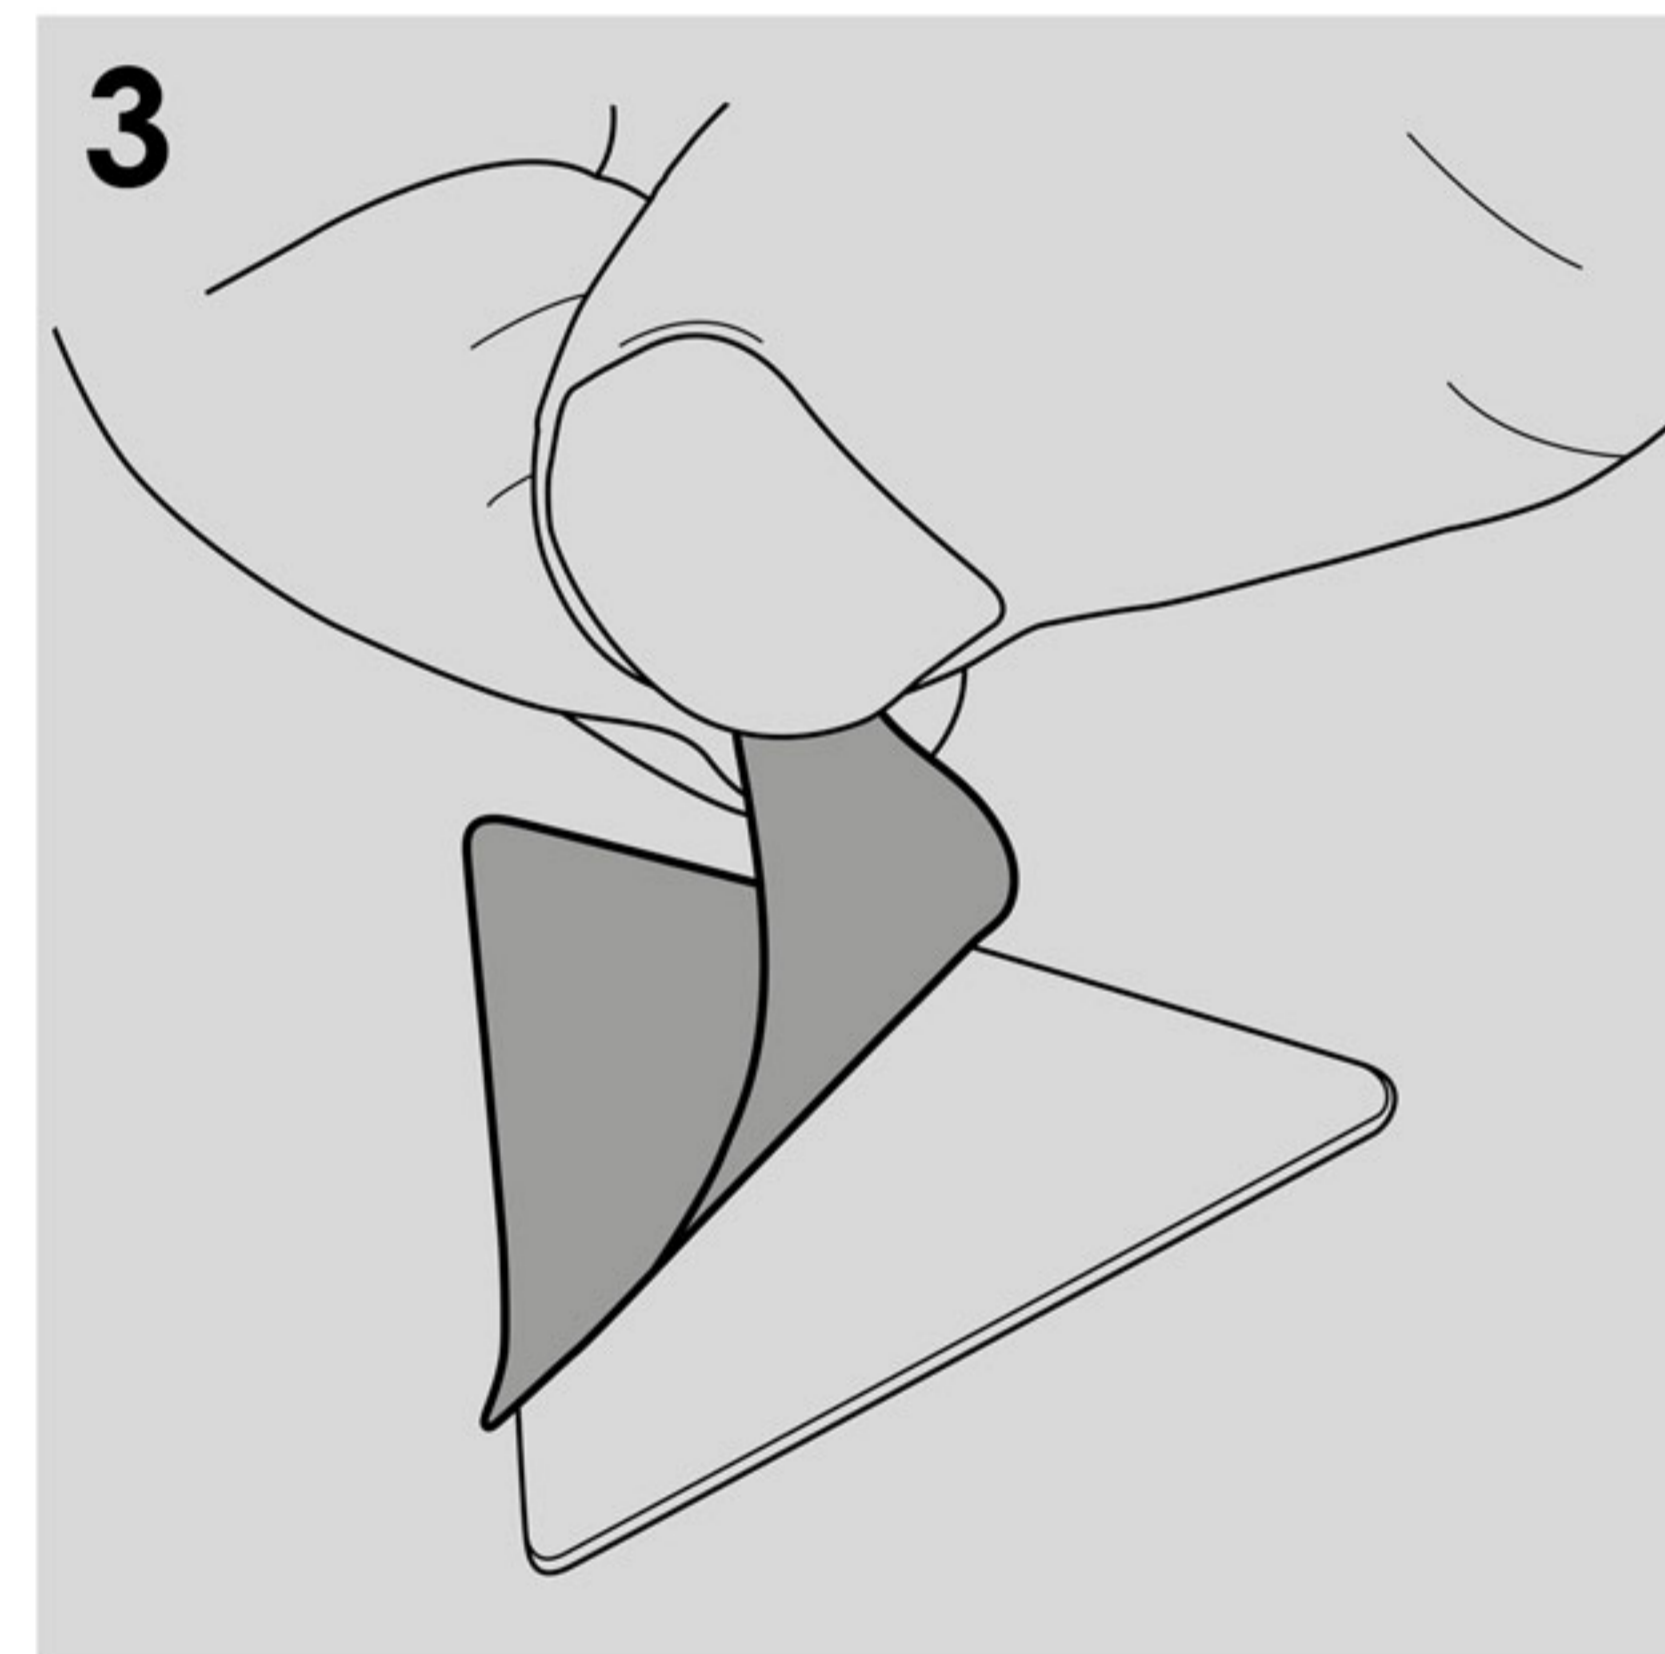


Peel backing paper from Stick-Fit pads.

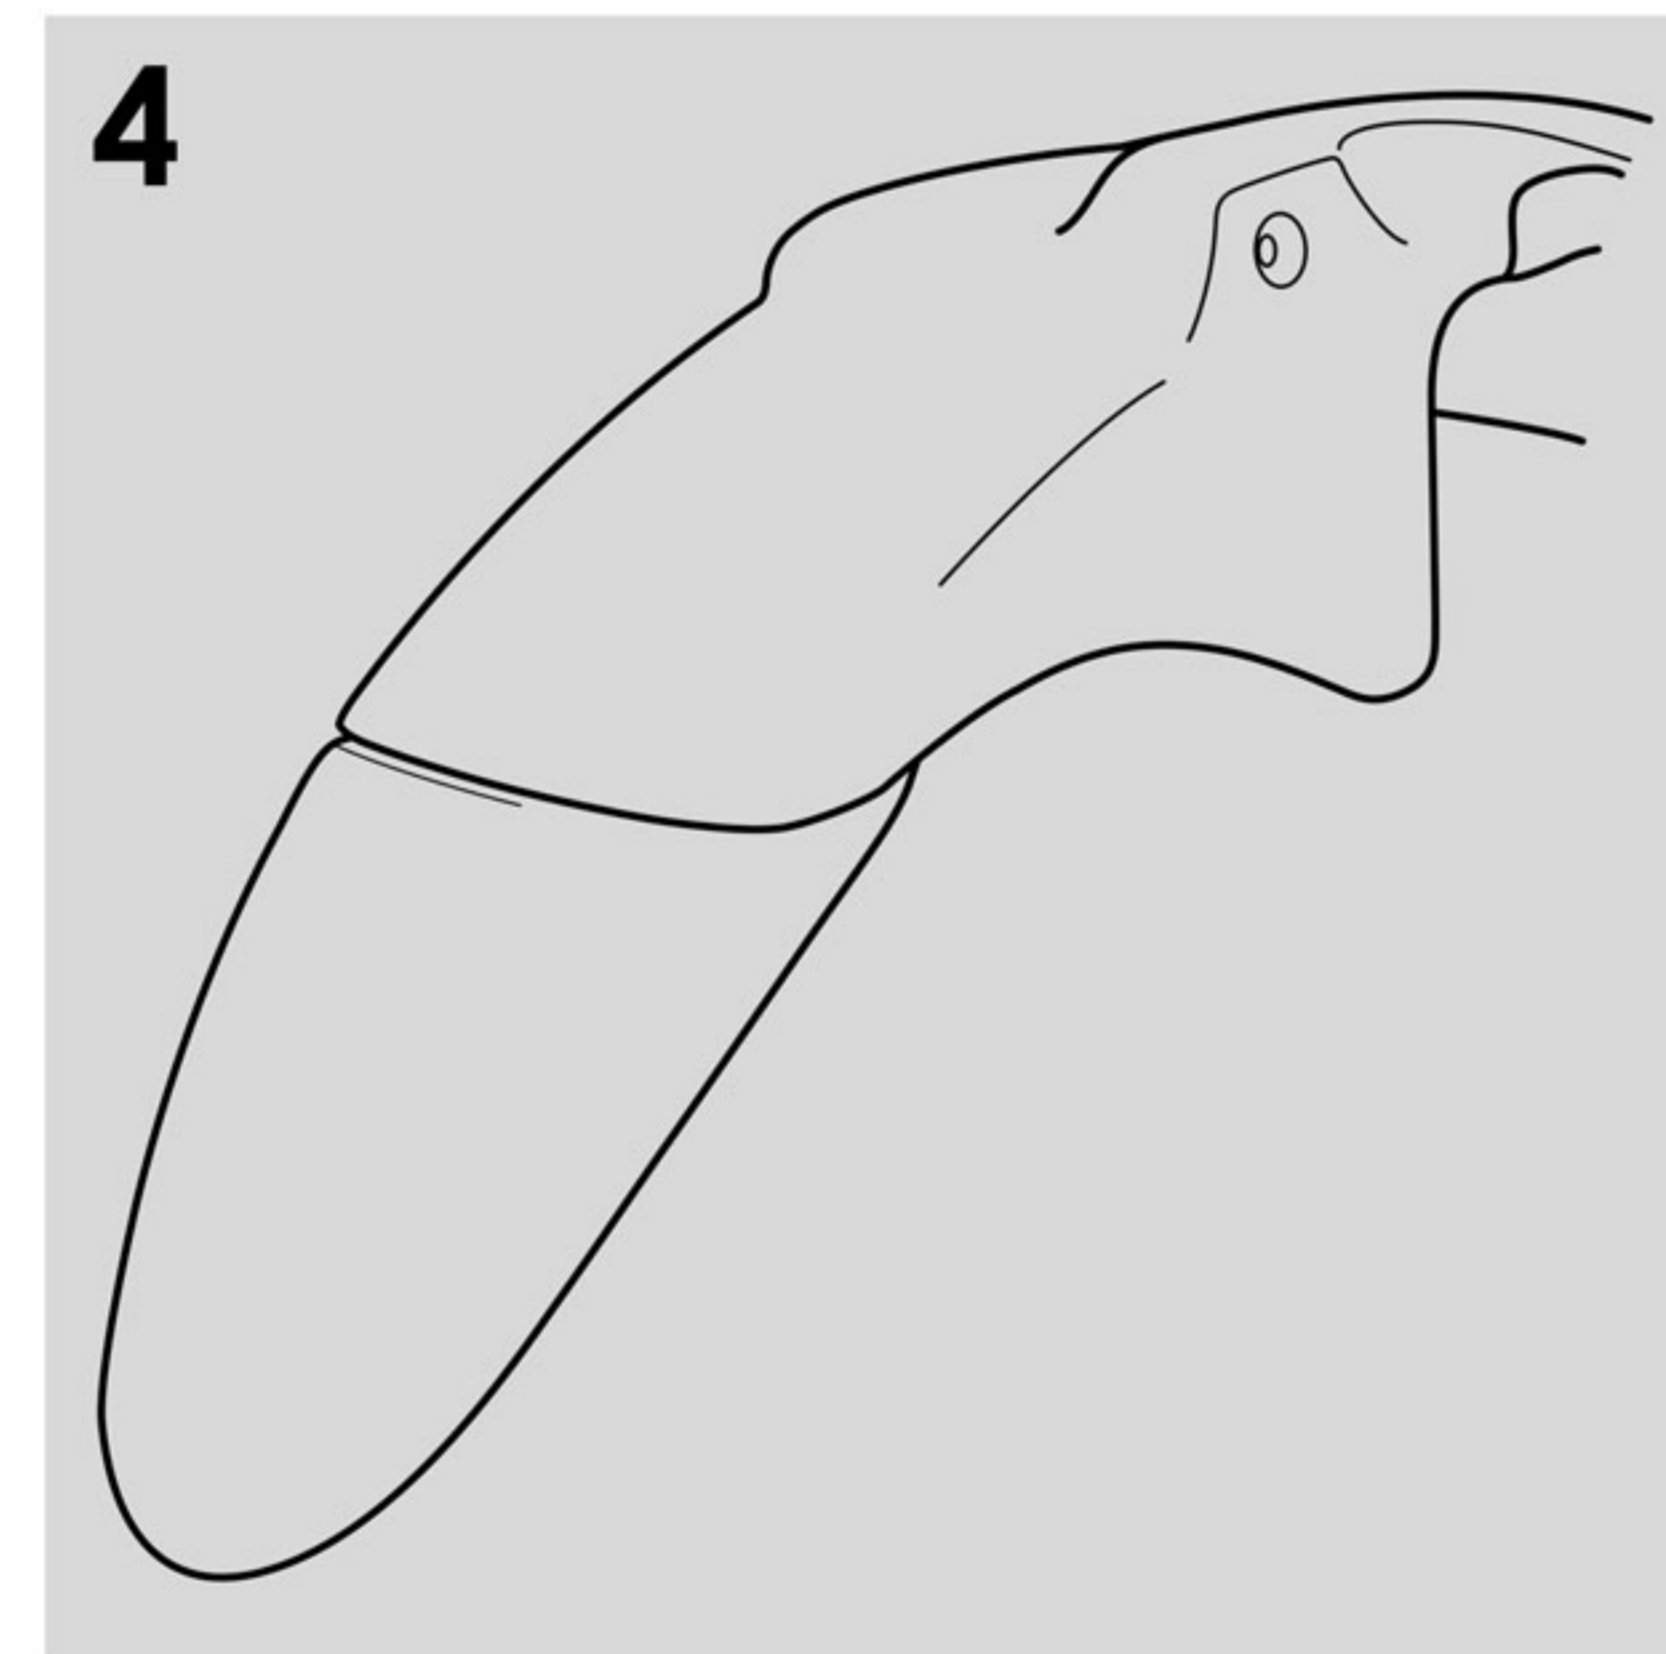

Fit Extenda Fenda/Hugger Extension to mudguard.

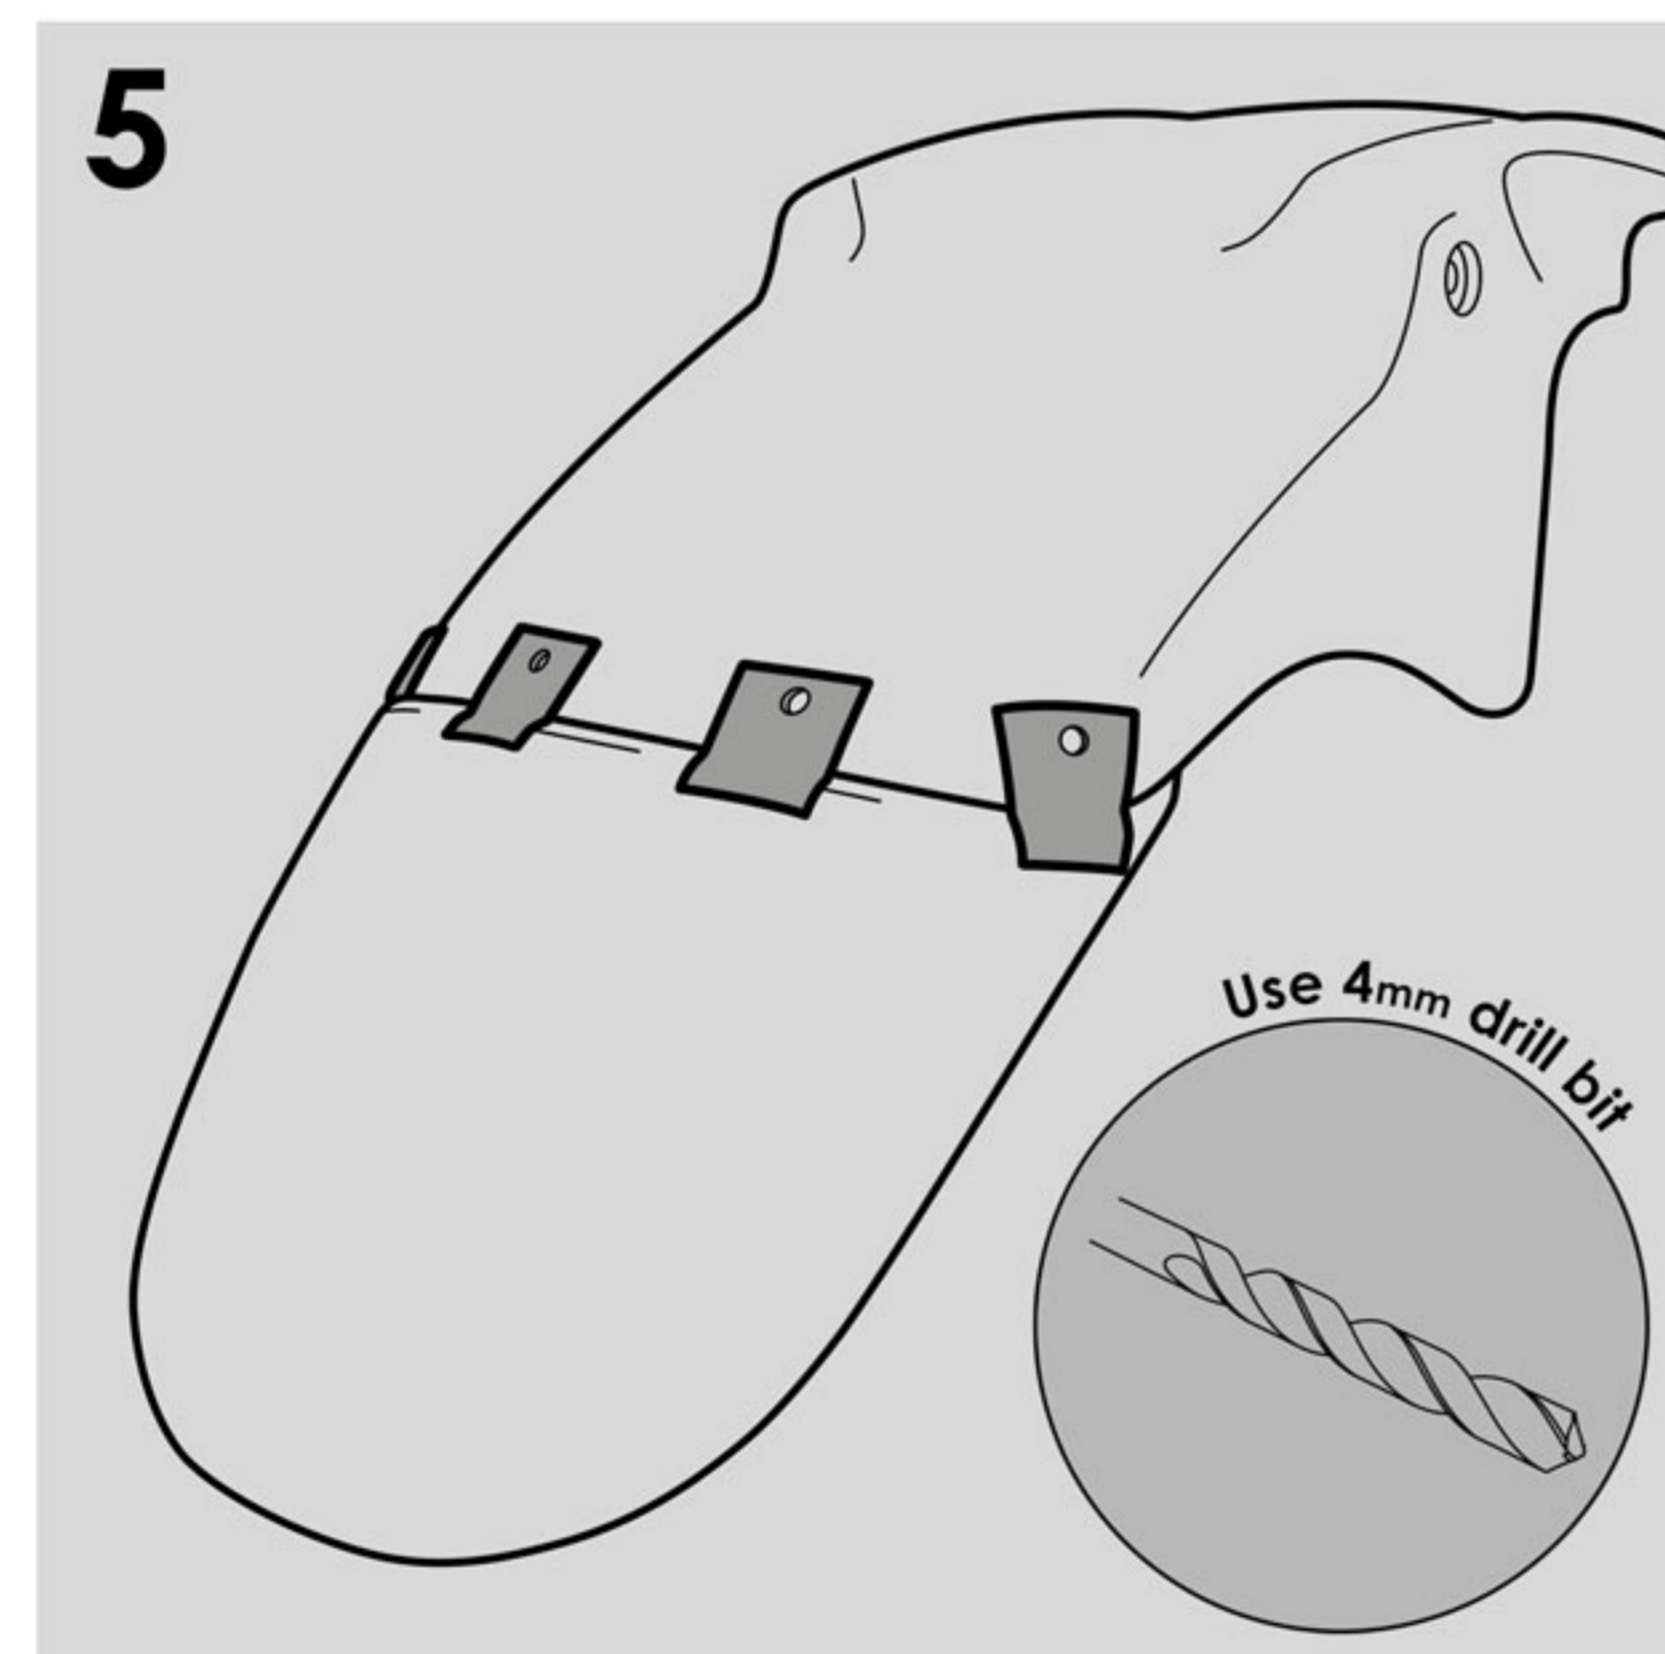

Use masking tape to mark equally spaced drilling points. Drill through the Extenda Fenda/Hugger Extension & mudguard at each point.

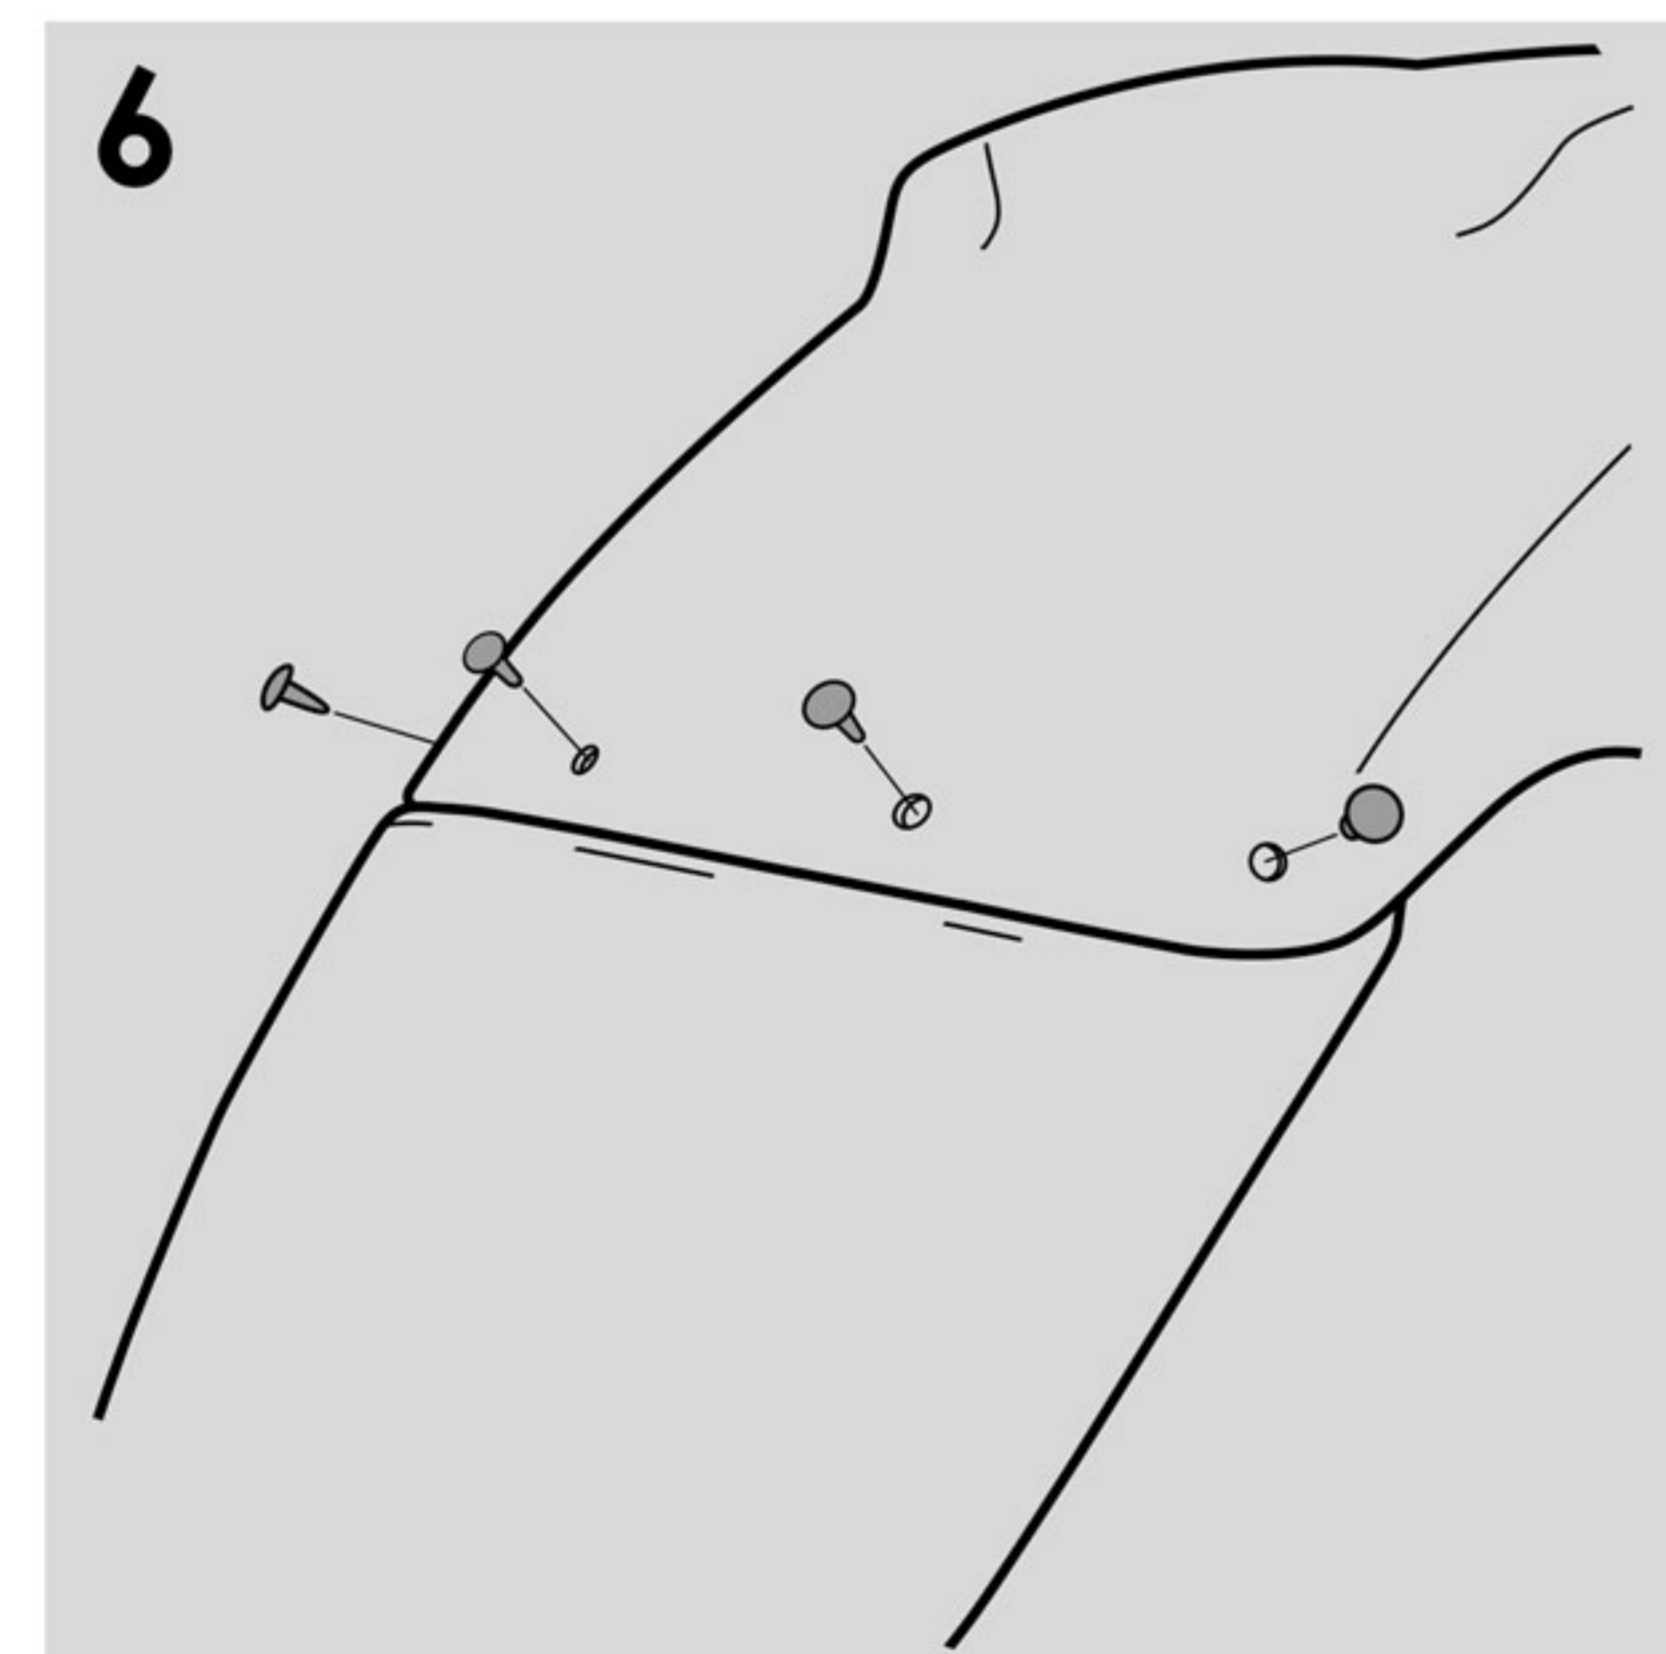


Fit Push-Rivets provided and re-fit mudguard to bike.

Visit [youtube.com/pyramidplastix](https://www.youtube.com/pyramidplastix) for our video tutorial on fitting a Push-Rivet Extenda Fenda/Hugger Extension


Alternatively you can contact us:
sales@pyramid-plastics.co.uk
 +44 (0)1427 677990

www.pyramid-plastics.co.uk


| Stick-Fit | Extenda Fenda & Hugger Extension Fitting Instructions

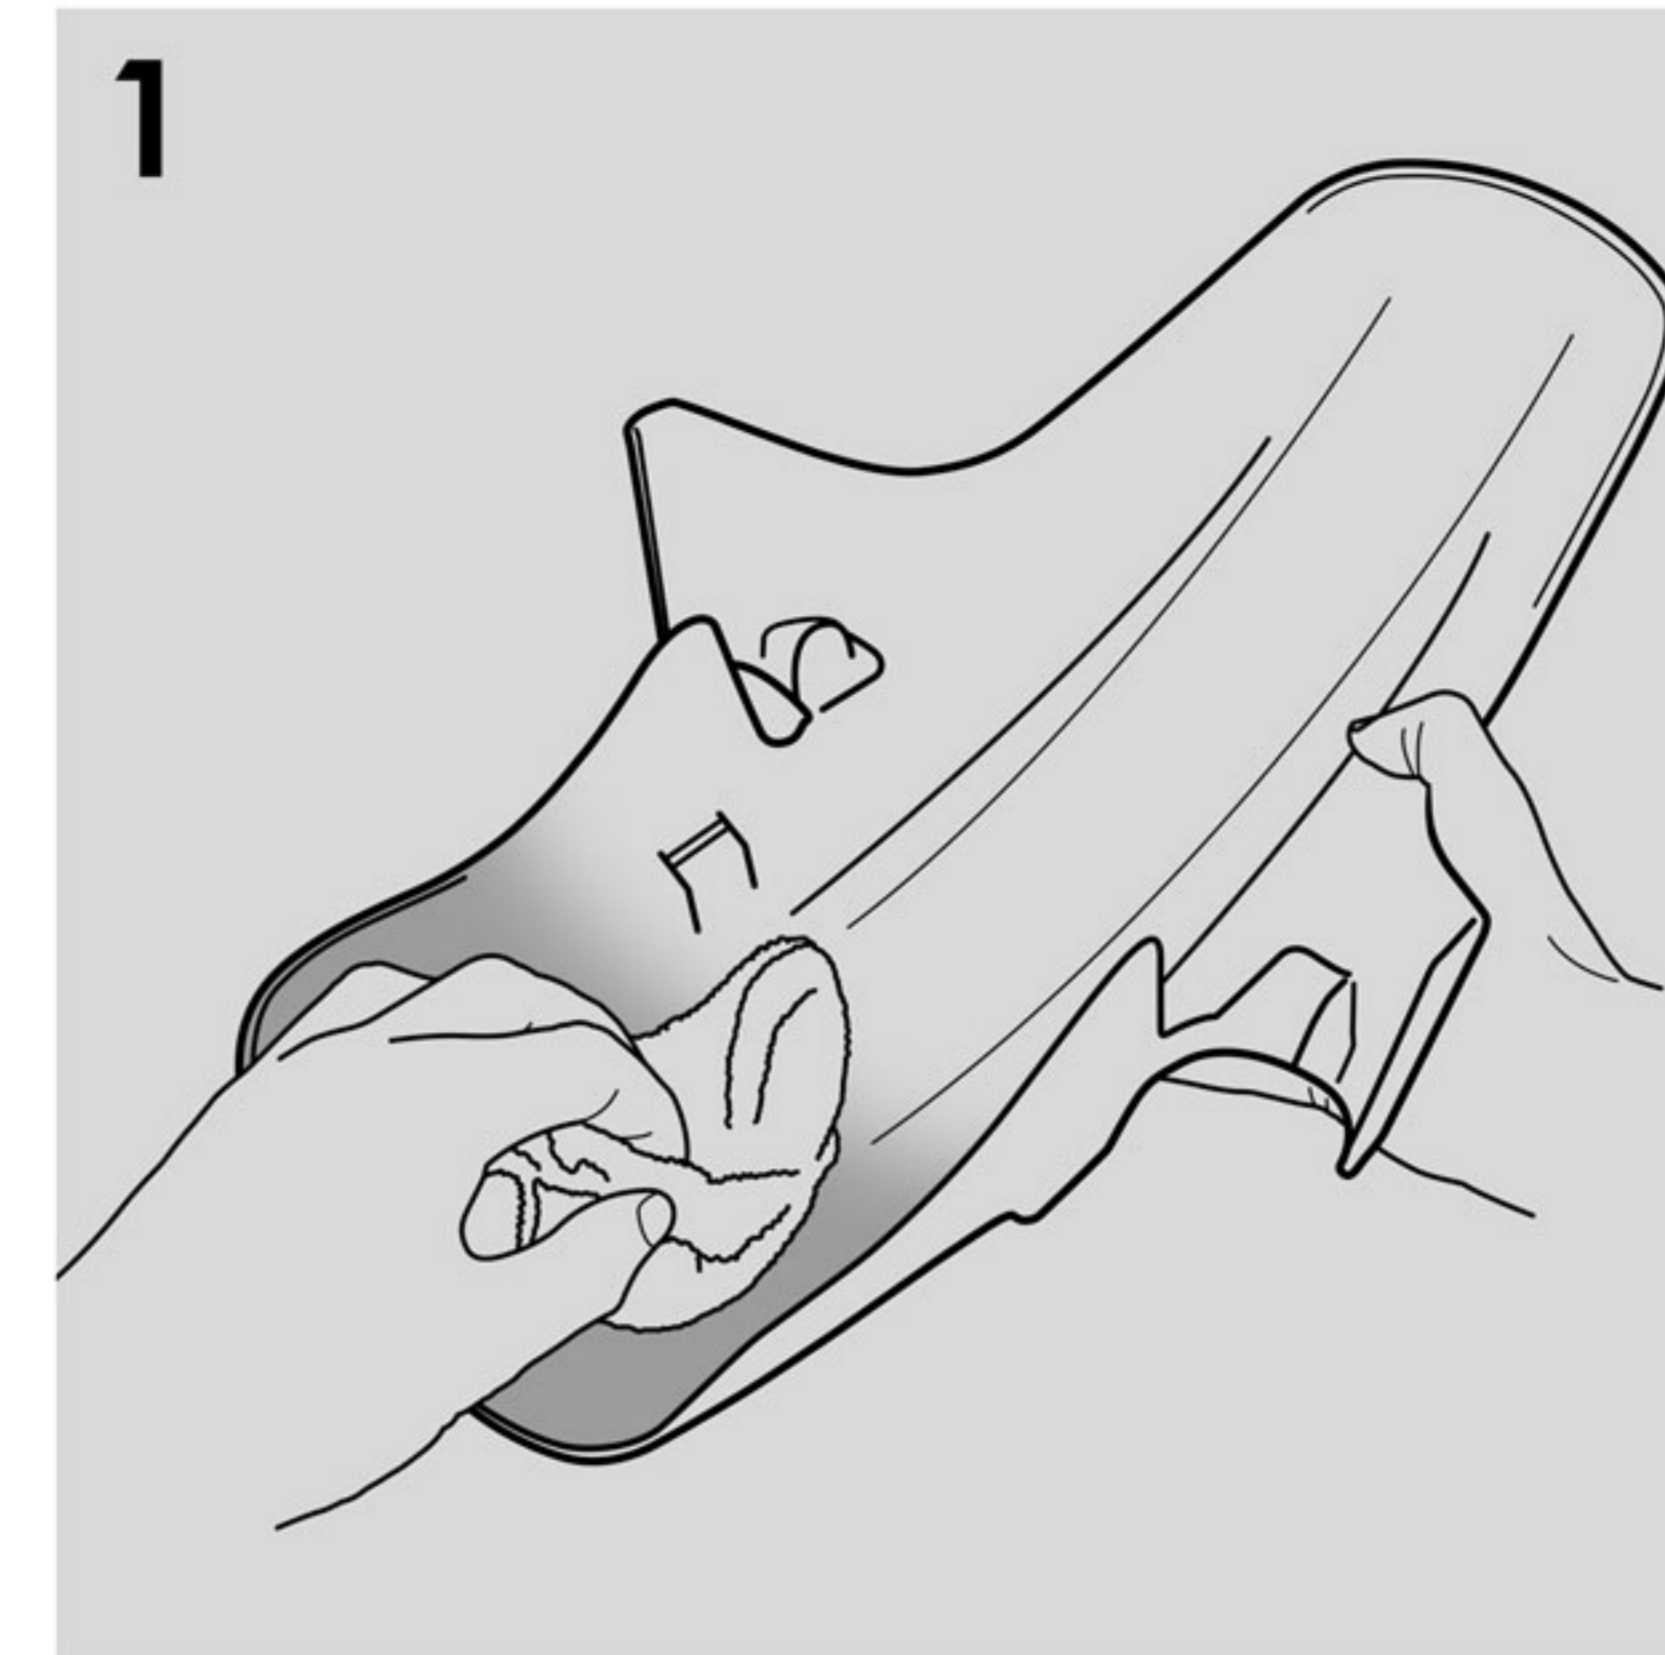


Remove mudguard from bike & clean inside.

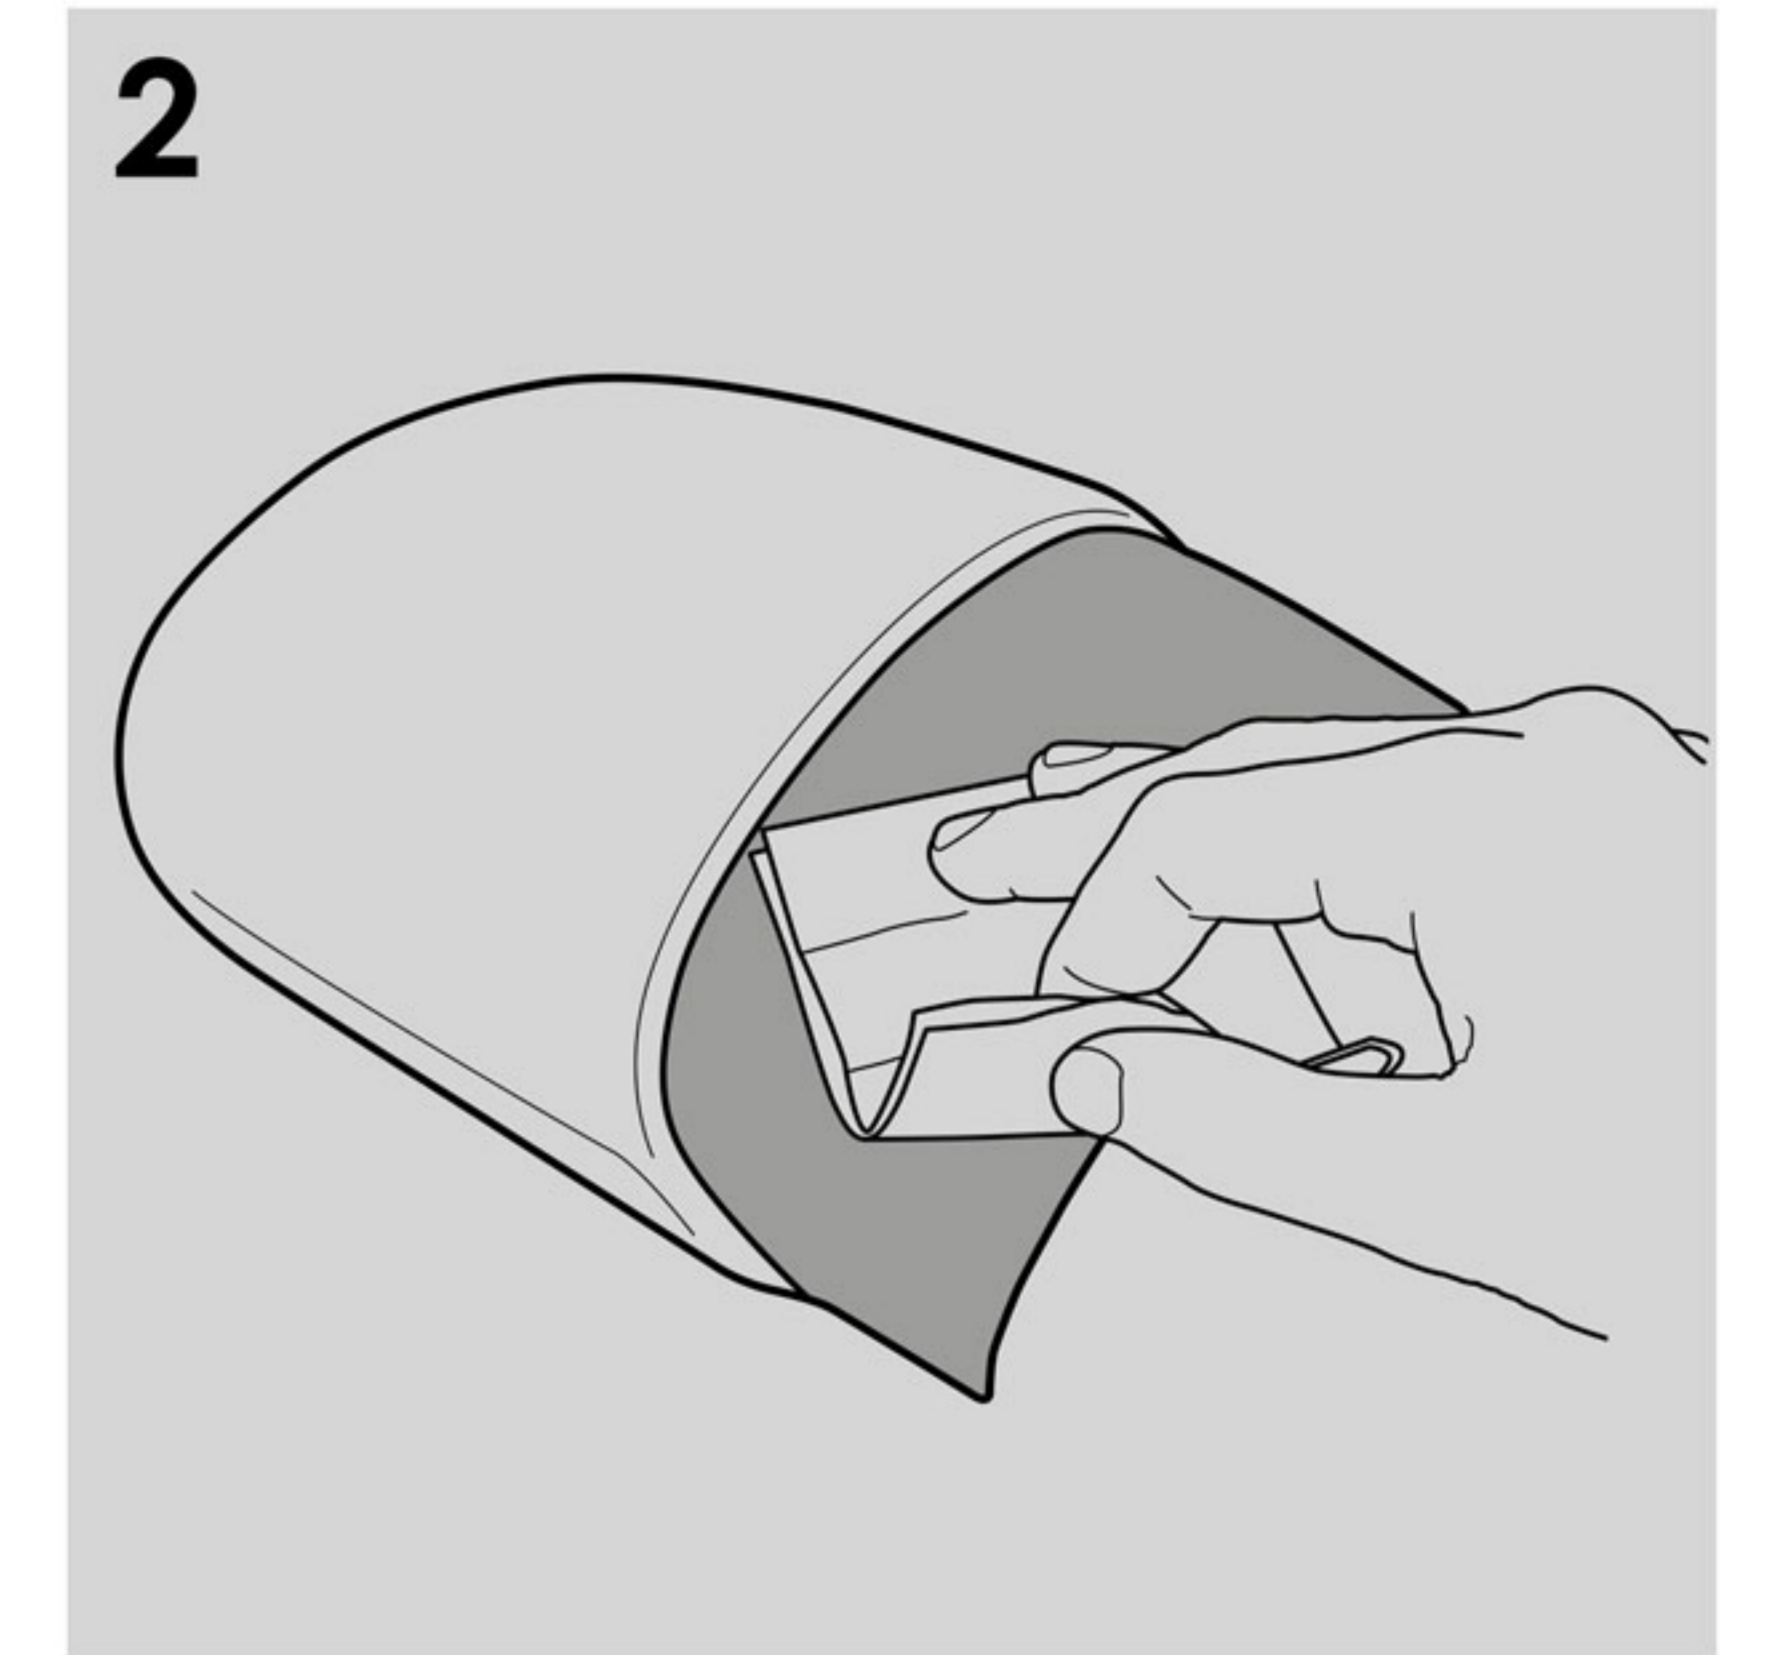


Clean Extenda Fenda/Hugger Extension with alcohol wipe in area shown.

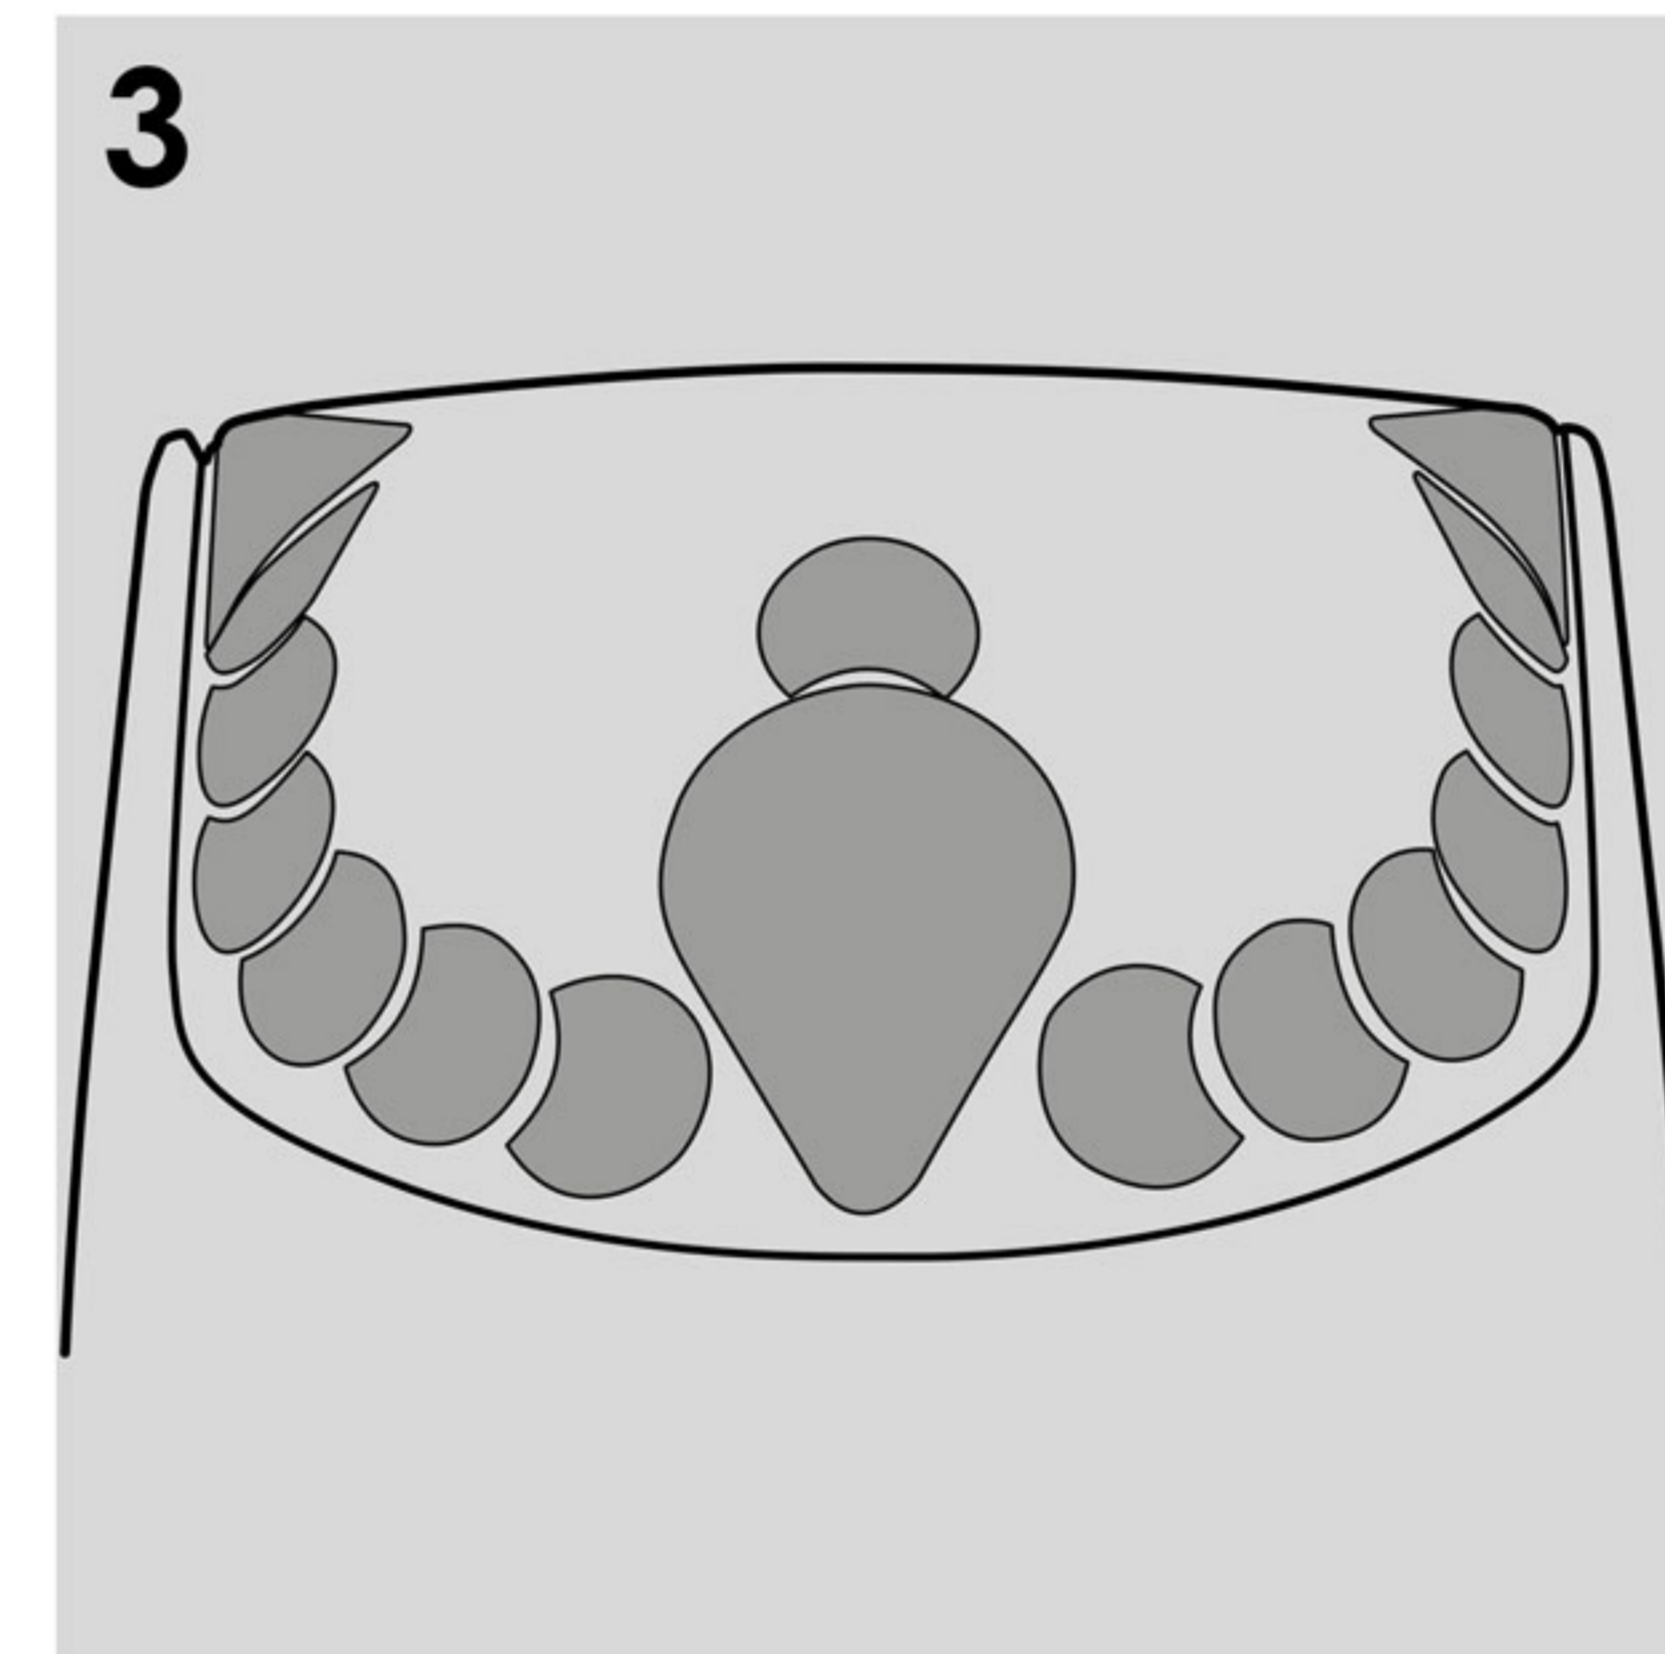


Attach Stick-Fit pads to the Extenda Fenda/ Hugger Extension using this image as a guide.

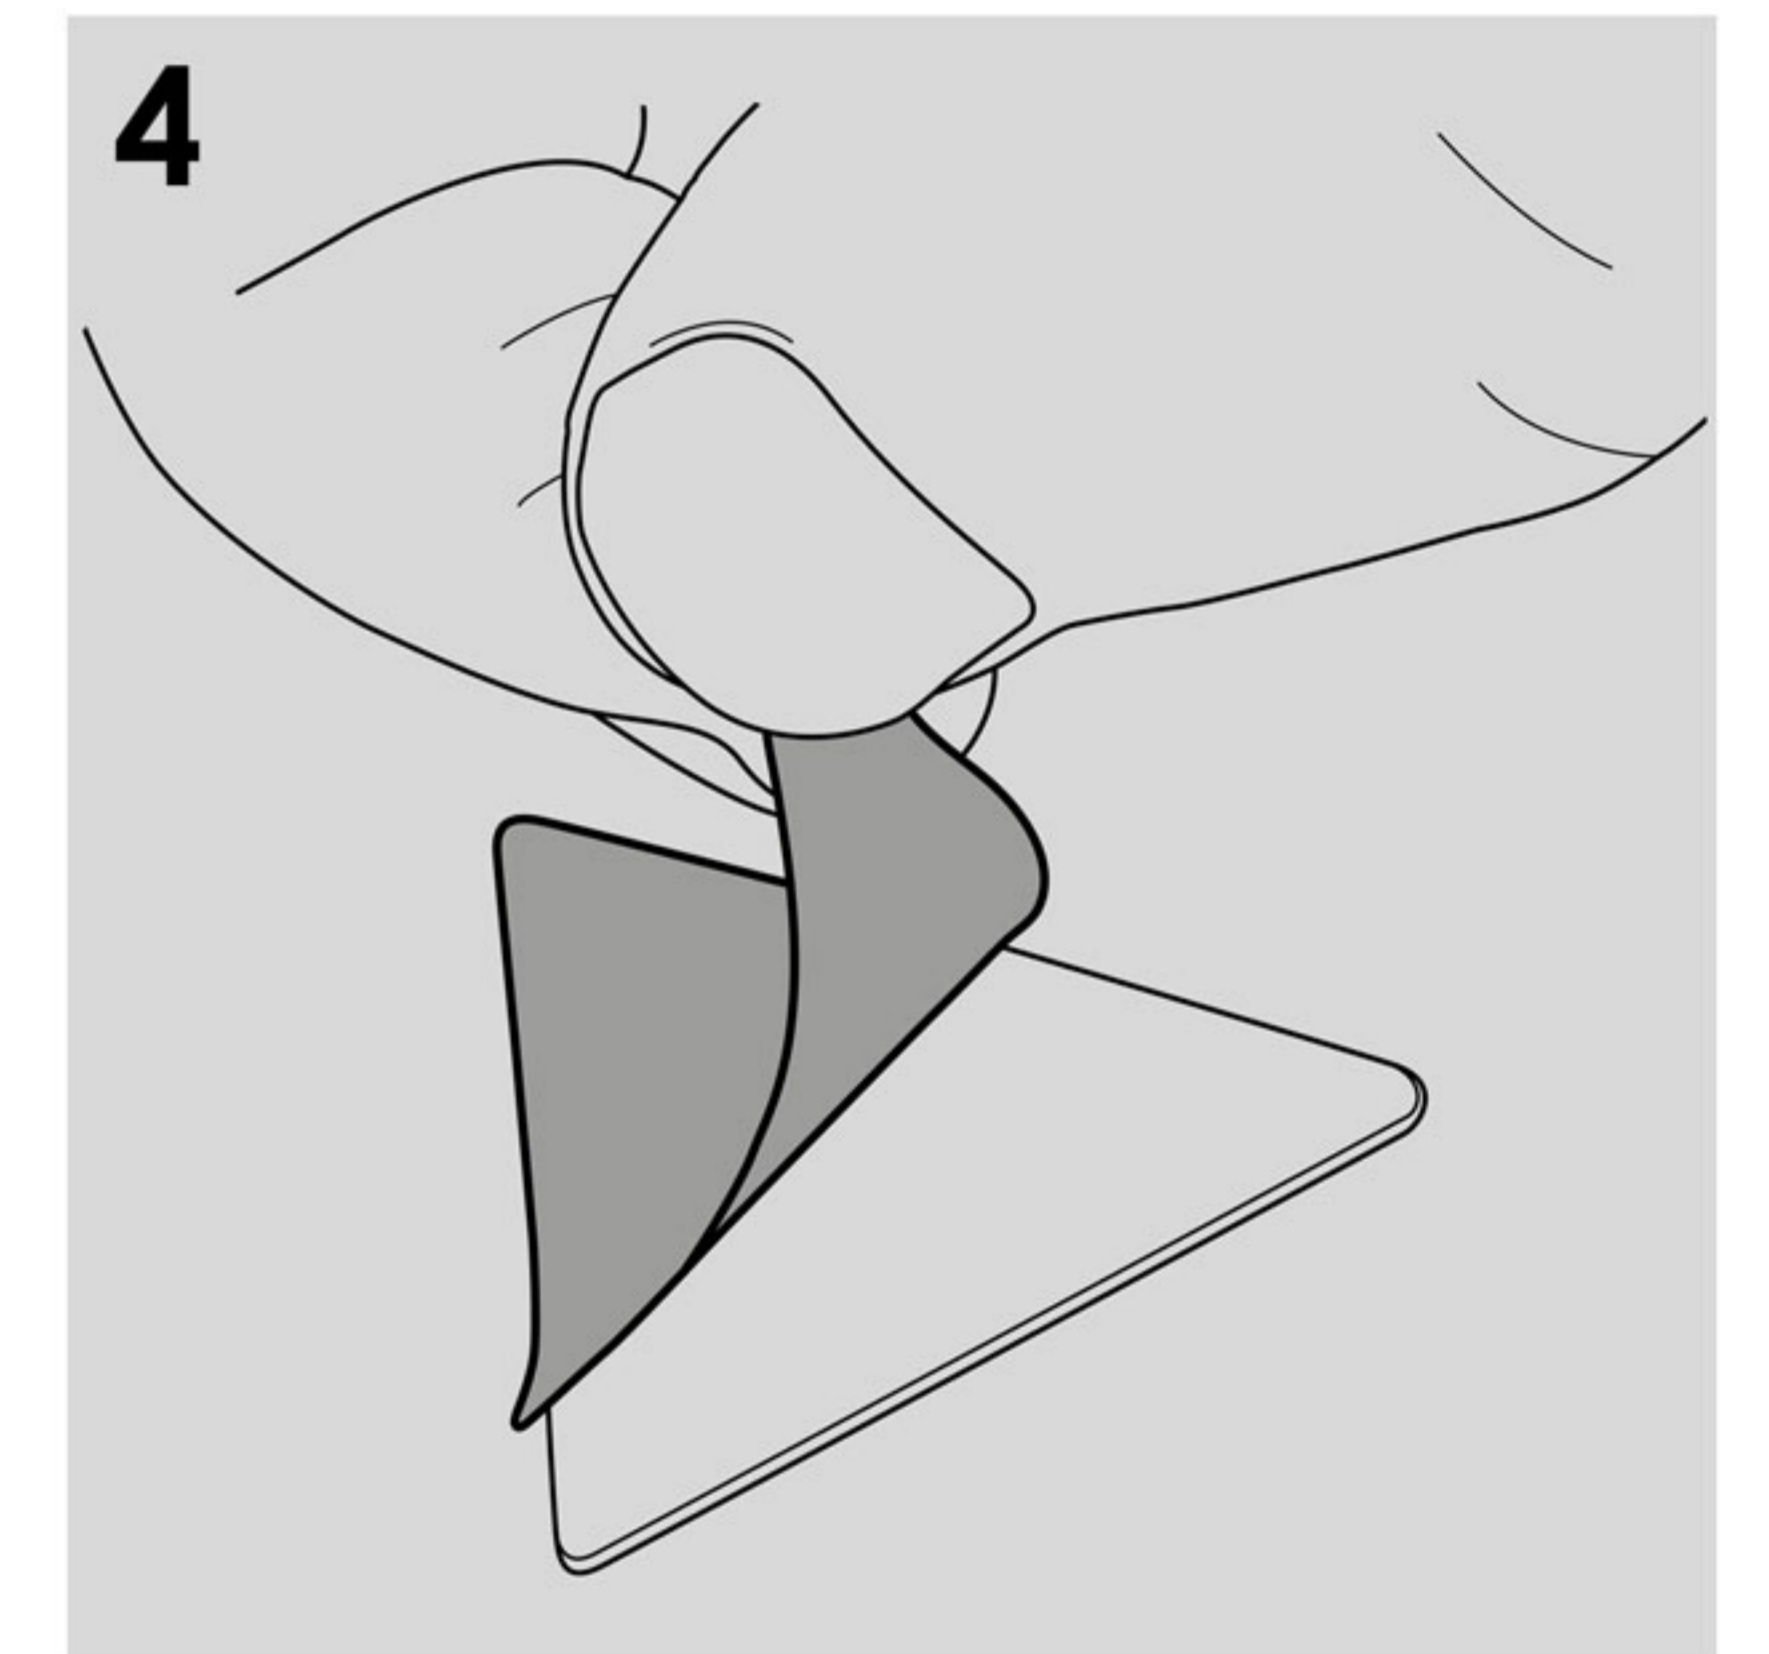

Peel backing paper from Stick-Fit pads.

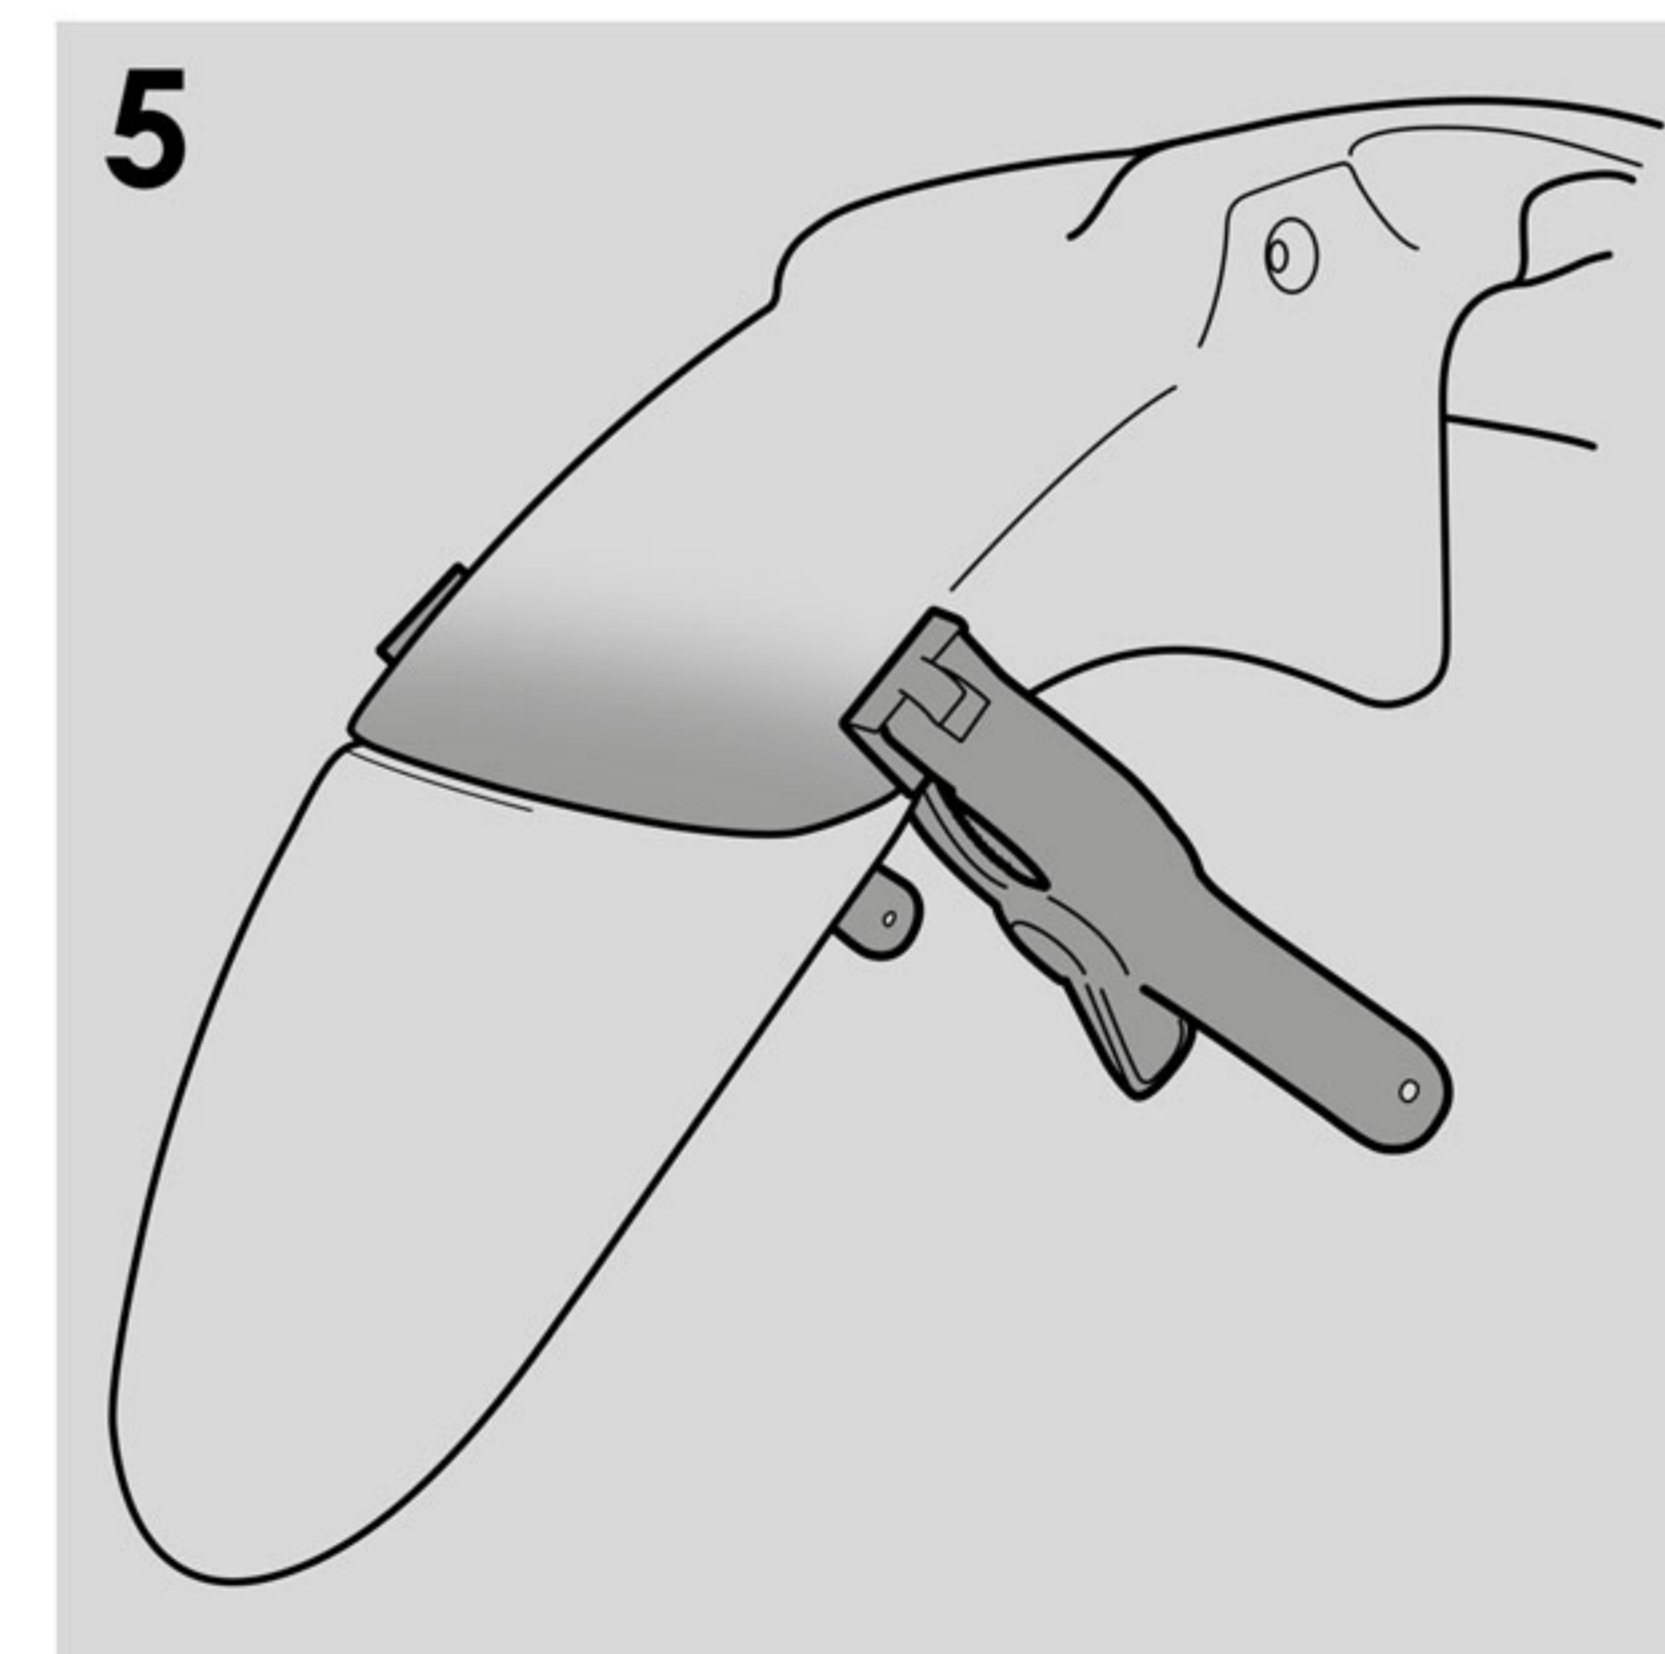

Re-fit mudguard using clips provided or clamps if available.

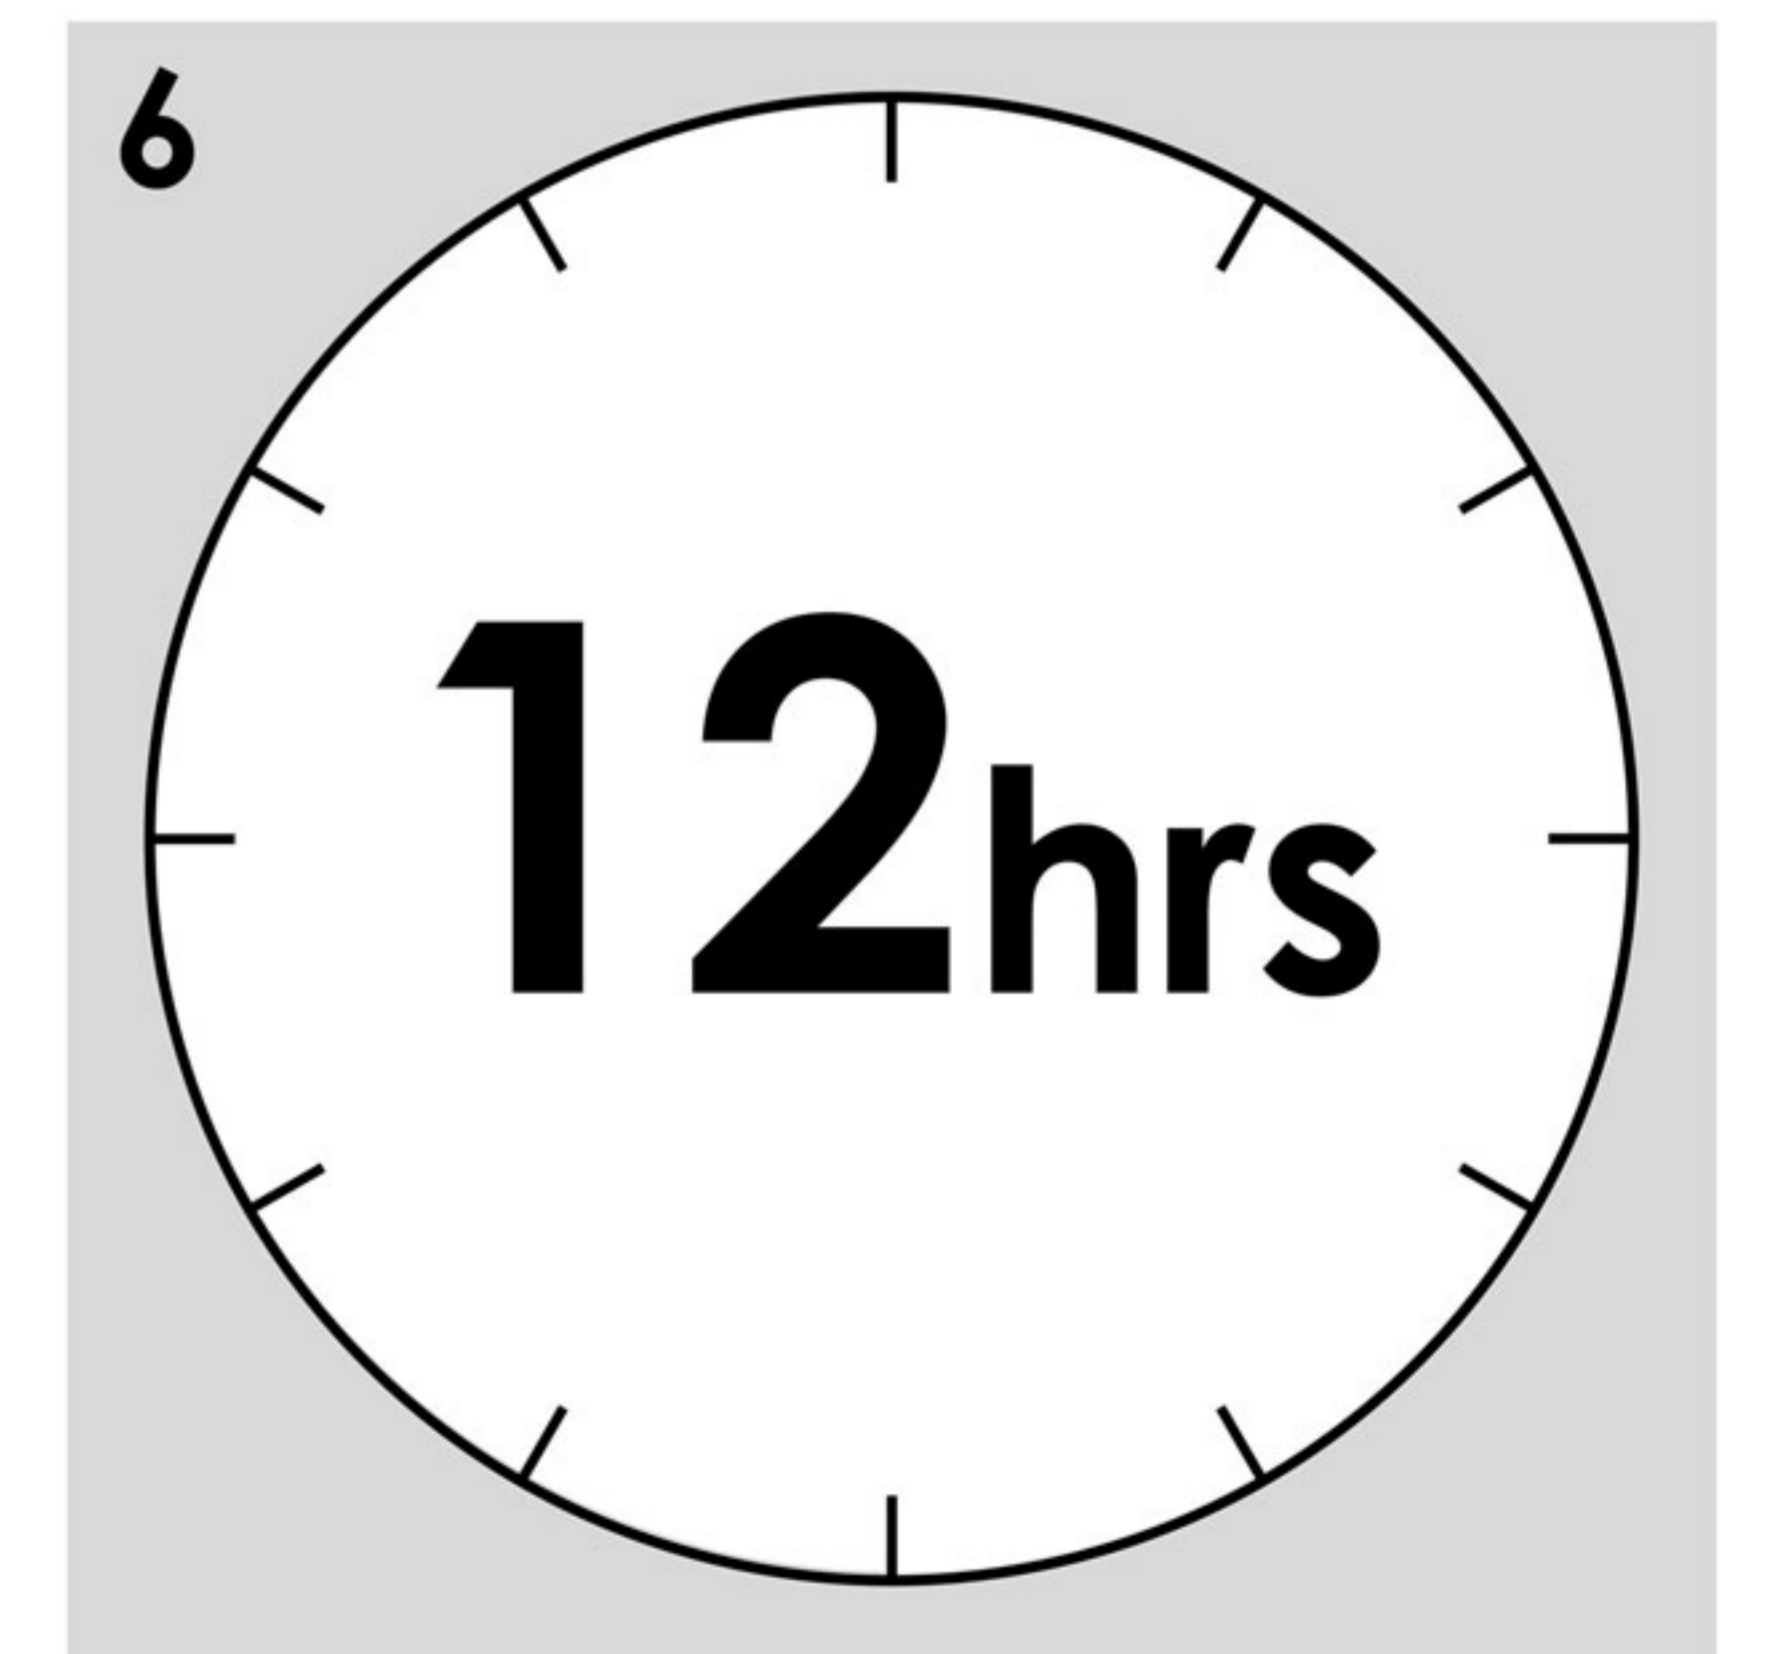

Allow to cure for 12 hours.

Visit [youtube.com/pyramidplastix](https://www.youtube.com/pyramidplastix) for our video tutorial on fitting a Stick-Fit Extenda Fenda/Hugger Extension

Alternatively you can contact us:
sales@pyramid-plastics.co.uk
 +44 (0)1427 677990

www.pyramid-plastics.co.uk