

Kit includes:-

- 4x M6x16mm Flange headed bolt
- 2x M8x35mm countersunk bolt
- 2x M8 Nylock nuts
- 4X13mm Grommet and Spacer

Remove the centre allen bolt from the sump on both sides (fig1).

Place the M8 bolt and nut through the bracket and un-used mounting points on the front of the engine (fig2) then add original bolt you removed and fit the bracket to the bike (fig3)

Repeat this process on both sides, make sure tightened all round.



Fig1



Fig2

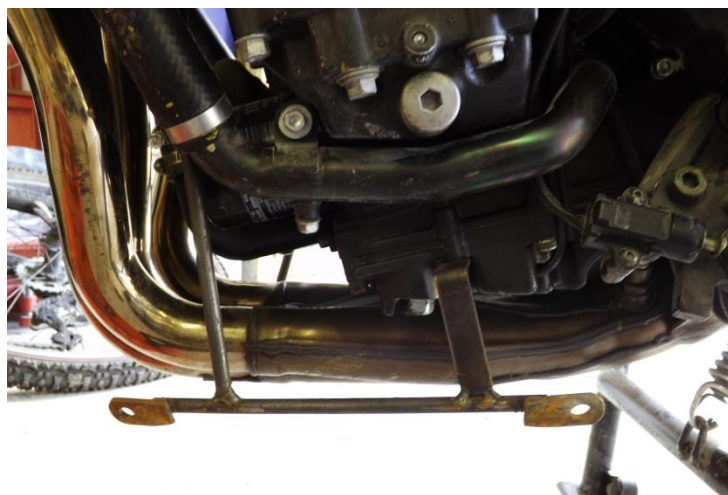


Fig3

Add the belly pan to the bike using the 4 M6x16mm Flange headed bolts.
Don't tighten till all bolts are in place.