


## 22141 Yamaha MT-10 Sport Fairing Panels

### Kit Includes:

● X1 M5 X 30mm	Spacer	CSPA0018
● X2 M6 X 25mm	Spacer	CSPA0019
● X1 3.6mm X 10mm X 15mm	Spacer	CSPA0016
▲ X1 M6 X 30mm	Bolt	CBOL0231
▲ X1 M5 X 12mm	Bolt	CBOL0111
▲ X2 M5 X 16mm	Bolt	CBOL2168
▲ X2 M6 X 10mm	Bolt	CBOL0224
■ X2 M6 X 1.56mm	Washer	CWAS0230

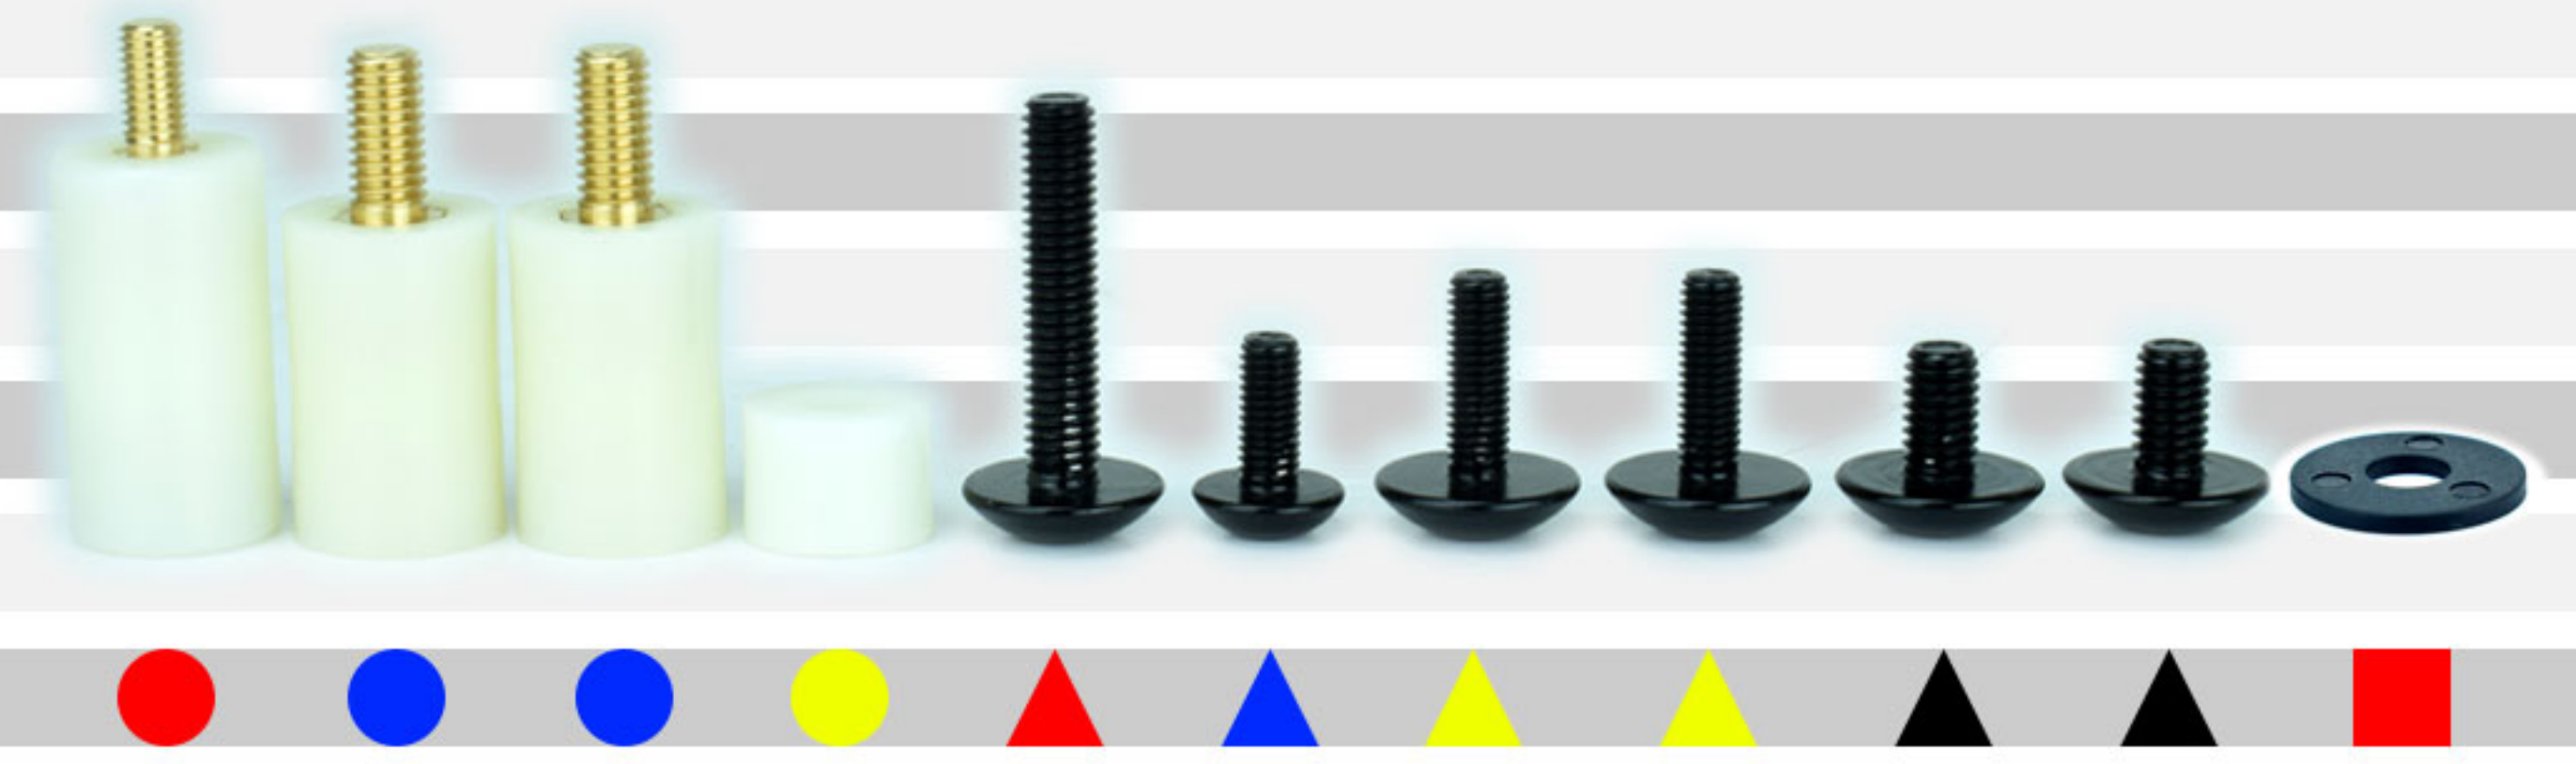

**Note:** Washer CWAS0230 ■ is **NOT** needed if you have a Radiator Guard fitted.


- Remove the original panel and bolt highlighted in **Fig 1** (repeat on opposite side).
- In **Fig 2** (right hand side of bike), hole **A** needs the 3.6mm X 10mm X 15mm ● Spacer and hole **B** needs an M6 X 25mm ● Spacer and an M6 X 1.56mm ■ Washer.
- In **Fig 3** (left hand side of the bike), hole **A** needs an M6 X 25mm ● Spacer and an M6 X 1.56mm ■ Washer. Hole **B** needs the M5 X 30mm ● Spacer.
- Now the panels are ready to be fitted using the remaining fixings **Fig 4**.




**Fig 2 right hand side**



**Fig 3 left hand side**

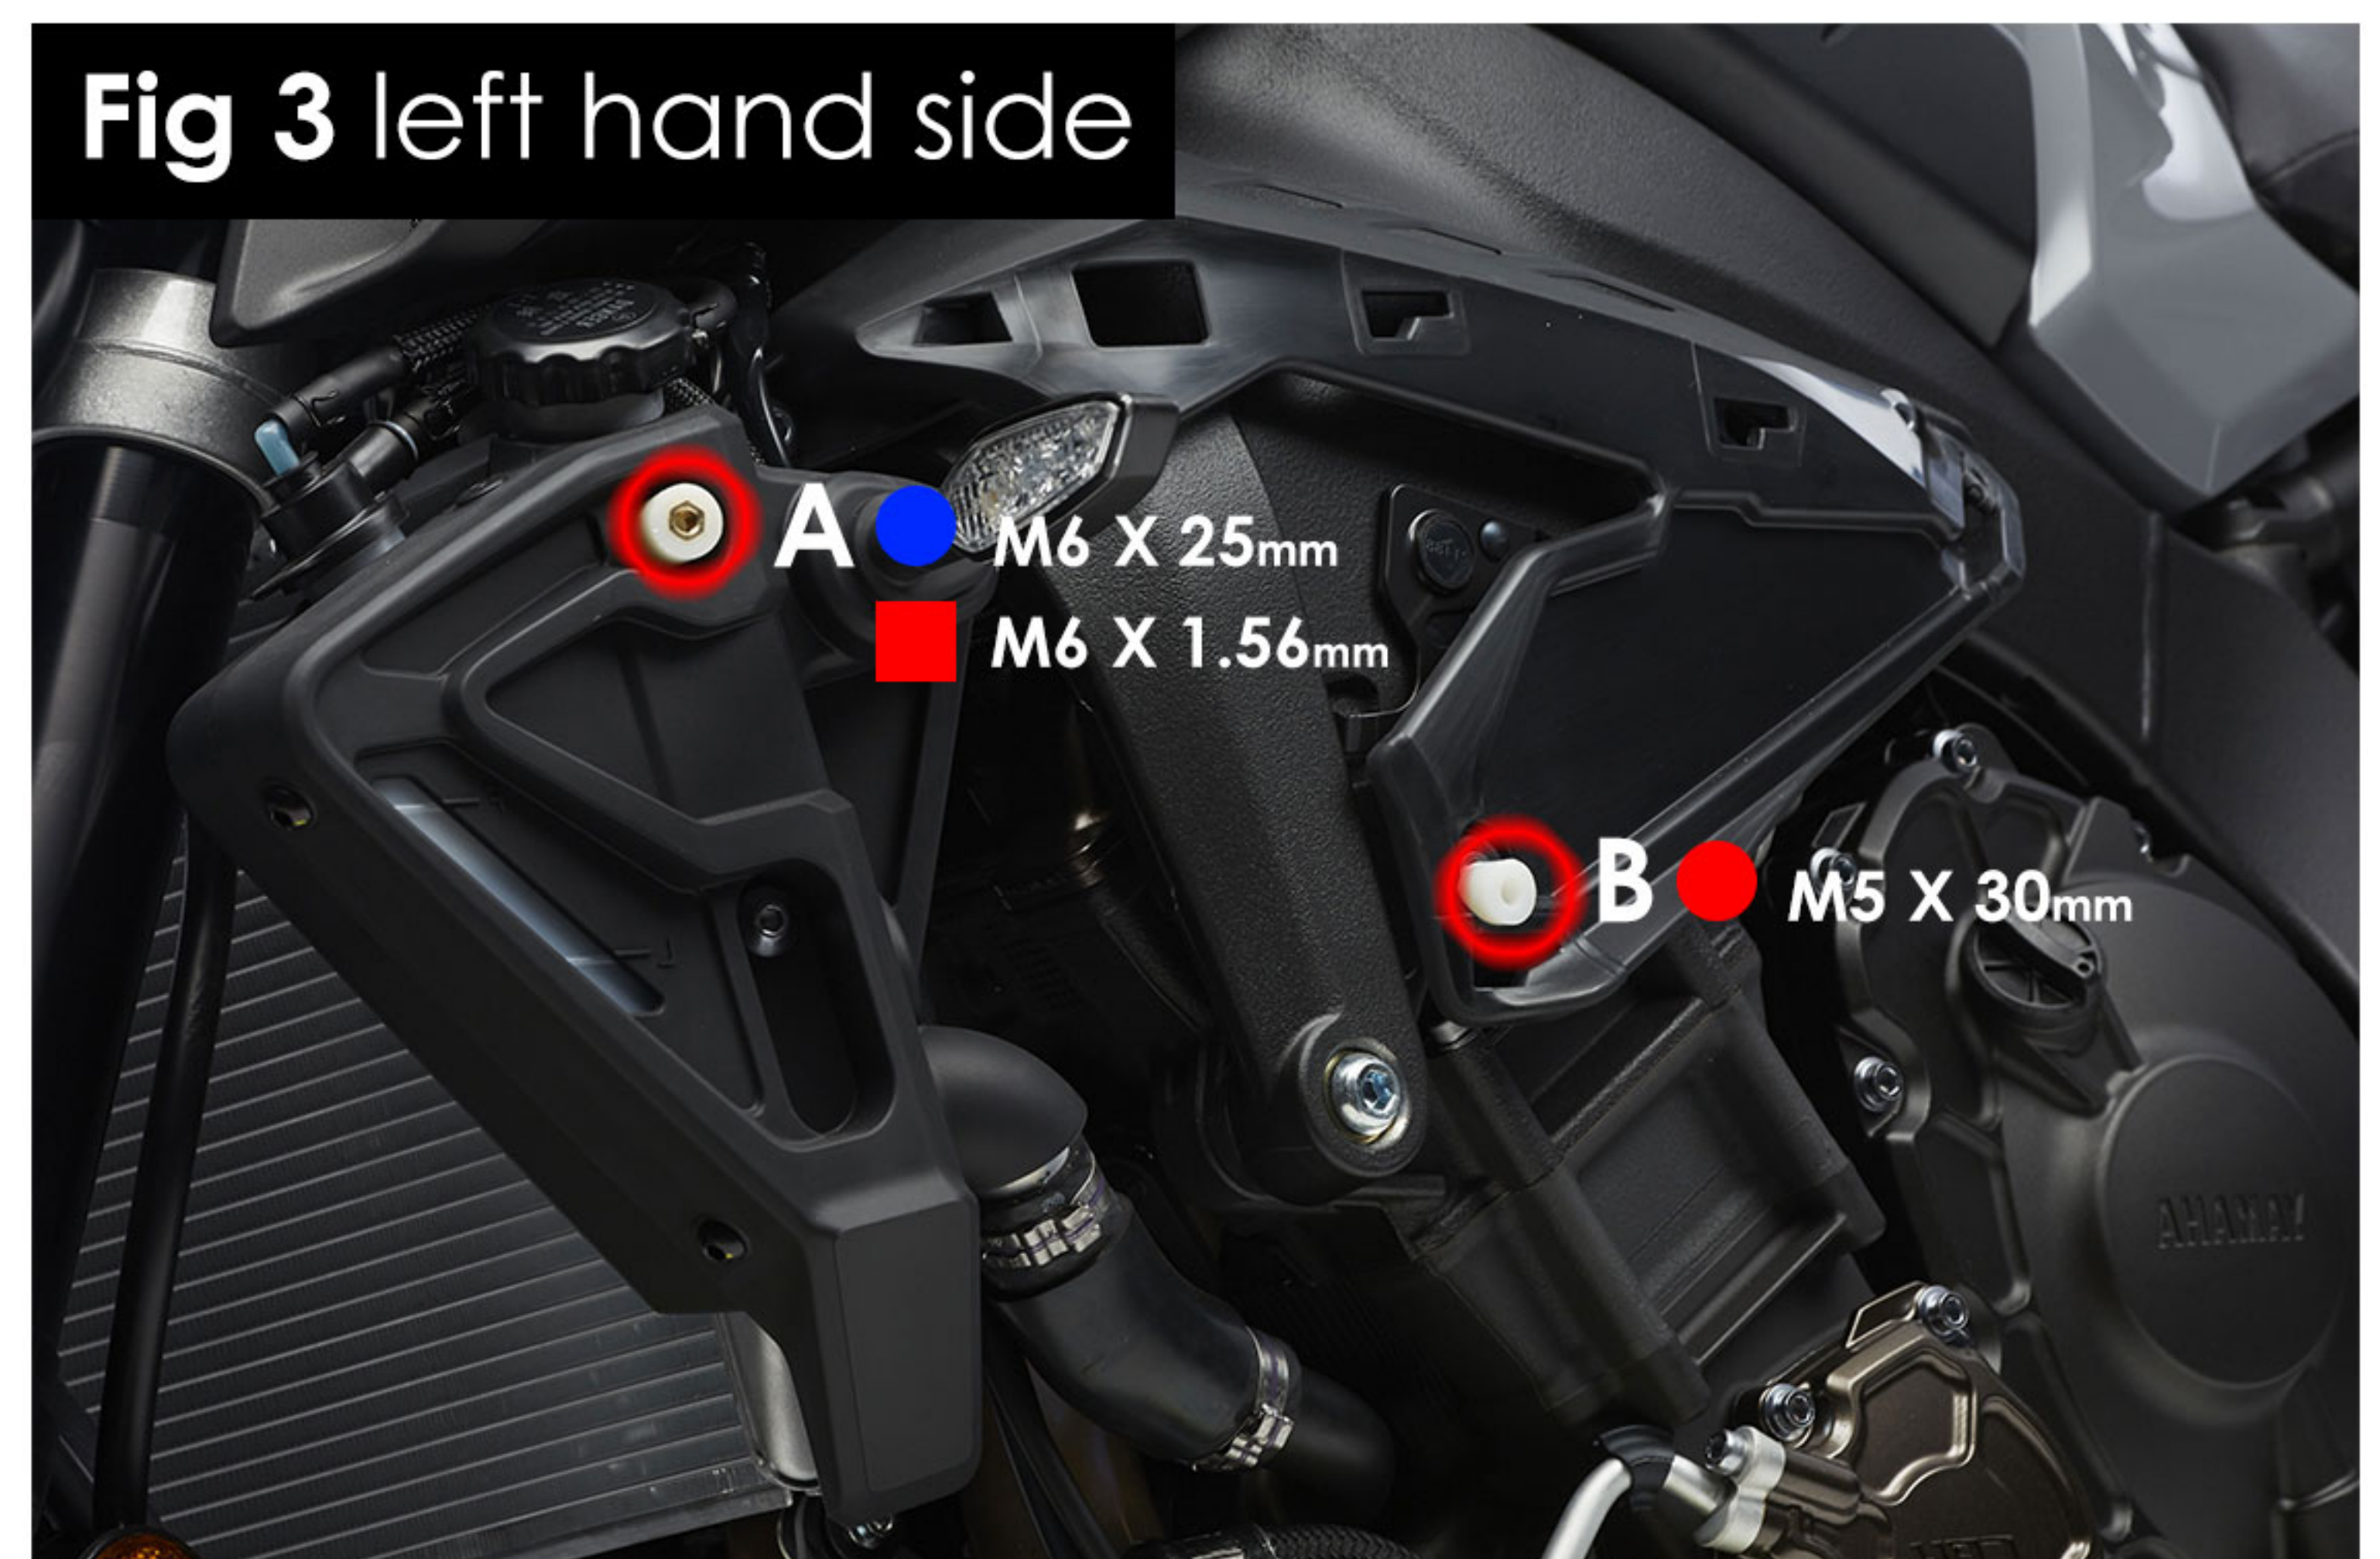


M5 X 16mm ▲

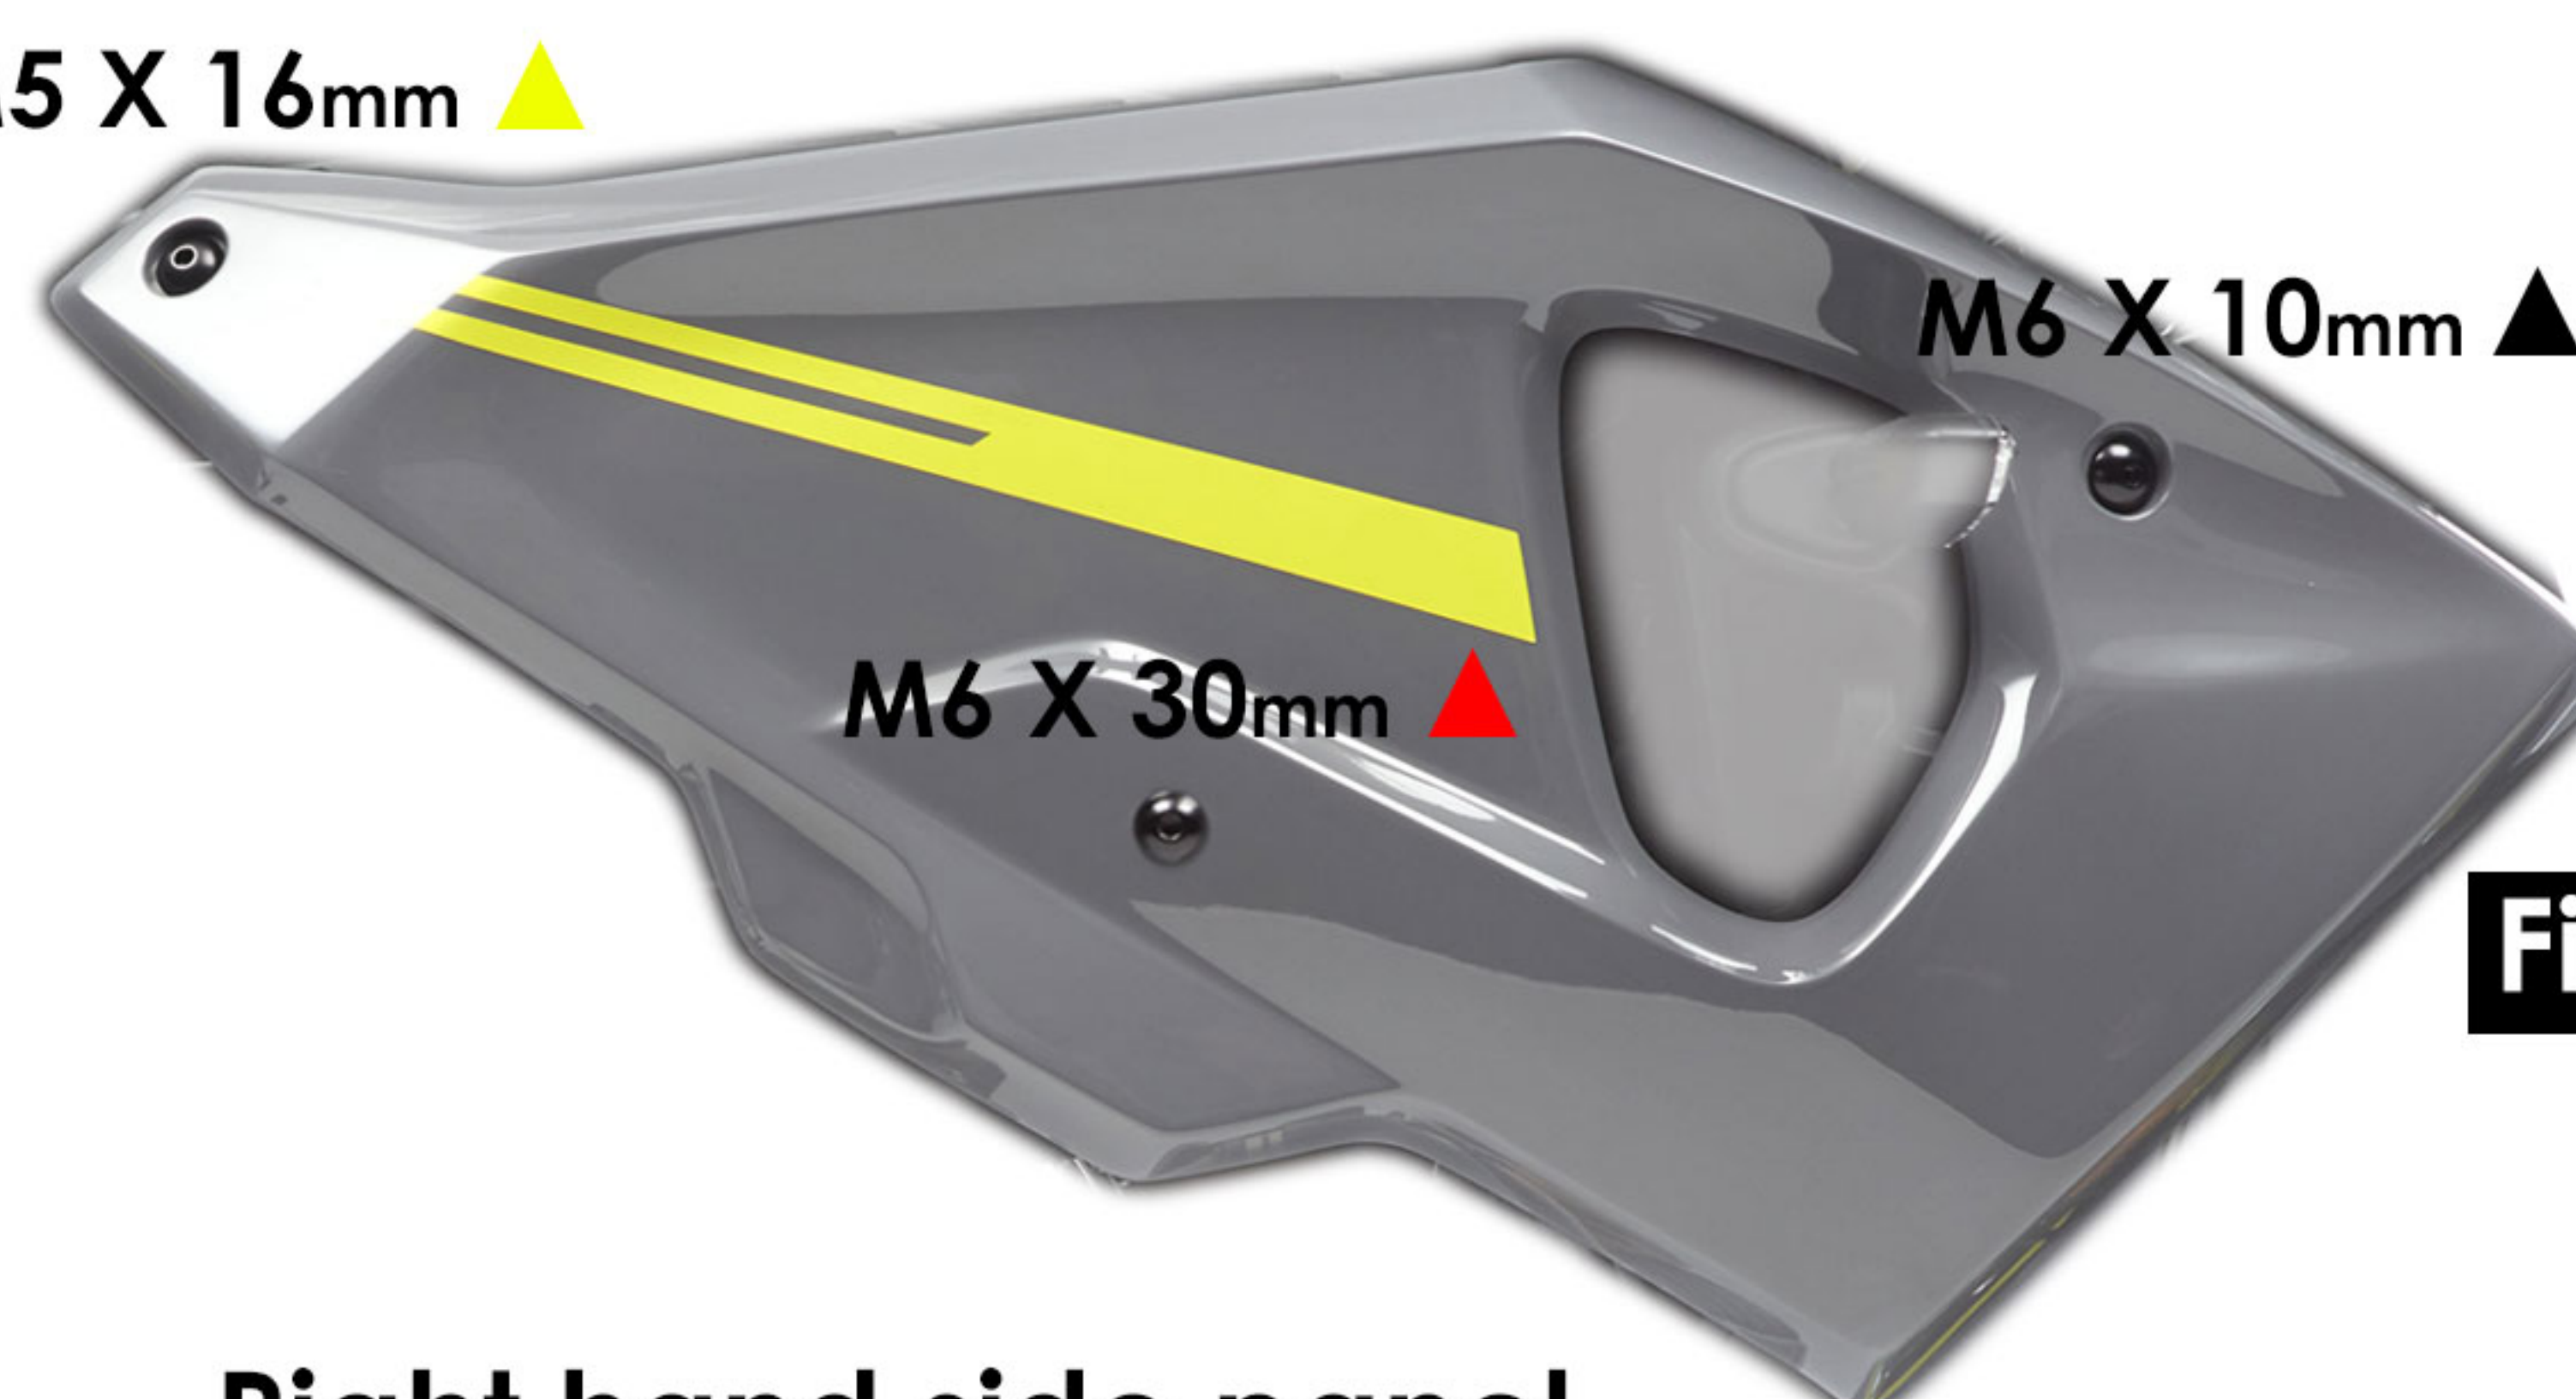

**Right hand side panel**

M5 X 16mm ▲

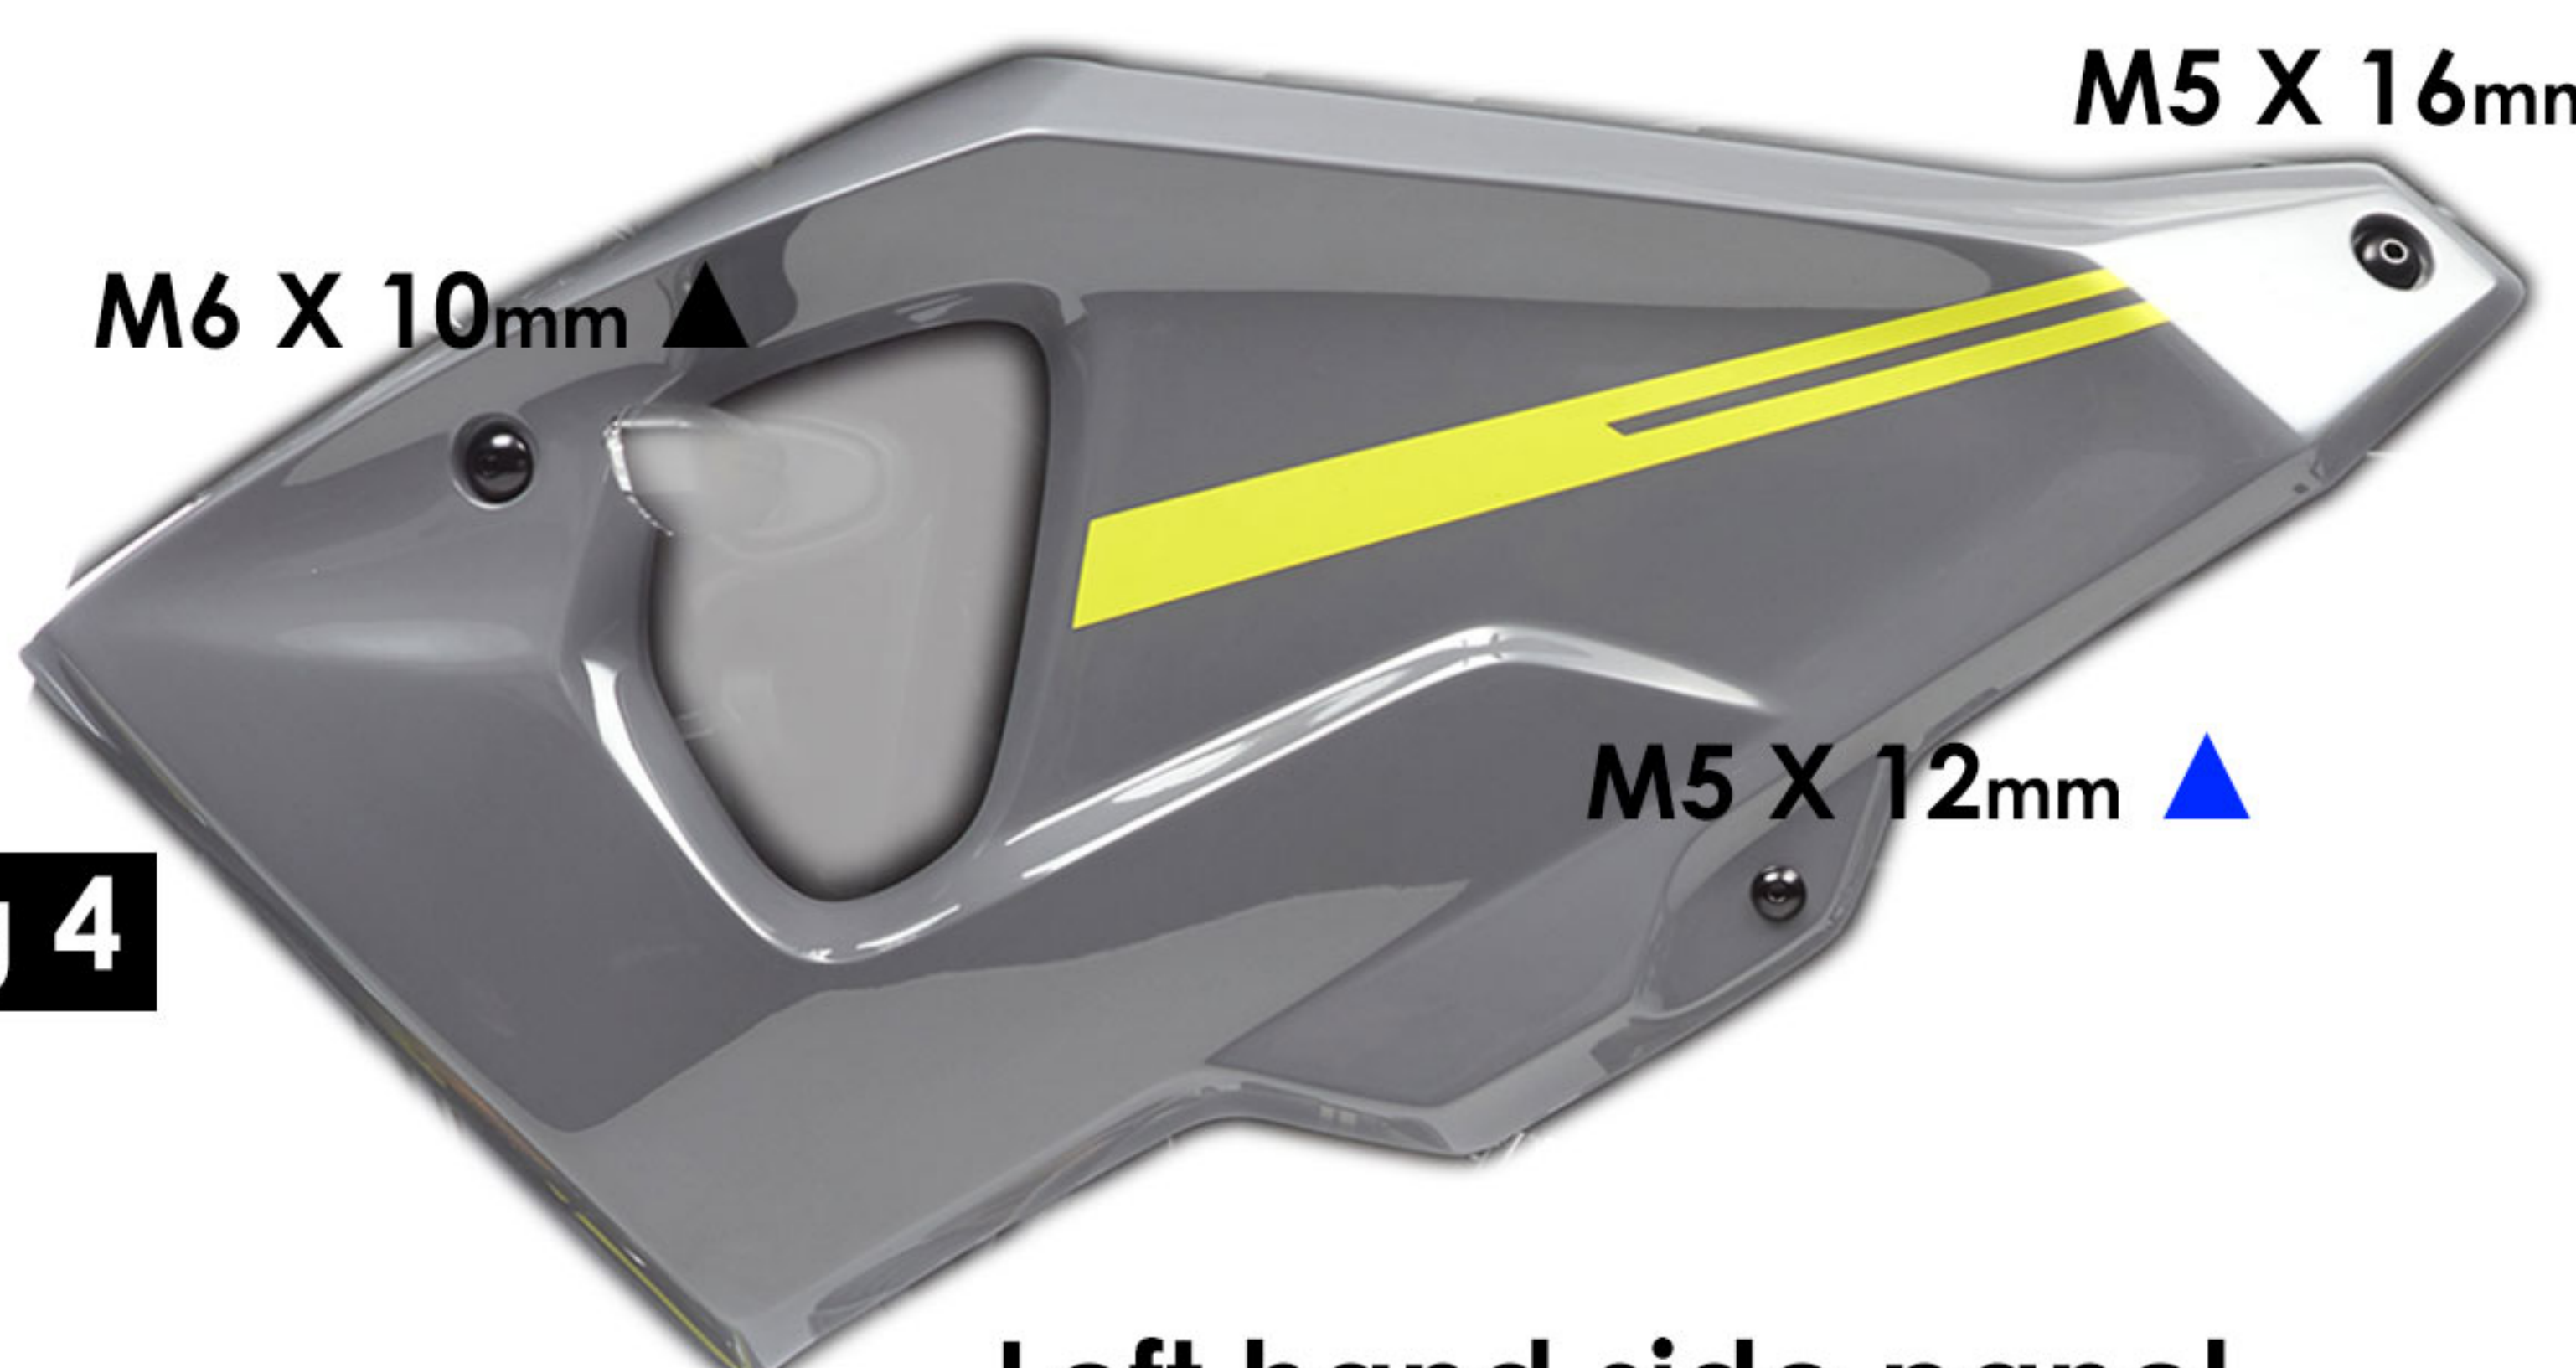

**Left hand side panel**

**Fig 4**