





**Filament method A**


**| Push-Rivet | Extenda Fenda & Hugger Extension Fitting Instructions**

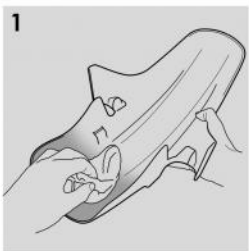


Remove mudguard from bike & clean inside.

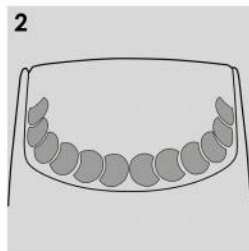


Attach a row Slick-Fit pads to the Extenda Fenda/Hugger Extension in area shown to create a gasket.

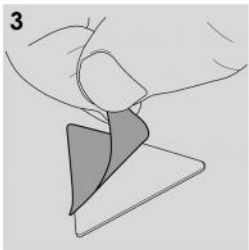


Peel backing paper from Slick-Fit pads.

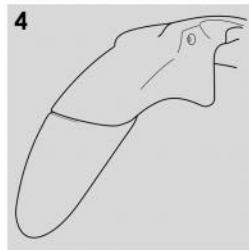

Fit Extenda Fenda/Hugger Extension to mudguard.

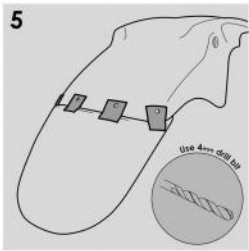

Use masking tape to mark equally spaced drilling points. Drill through the Extenda Fenda/Hugger Extension & mudguard at each point.

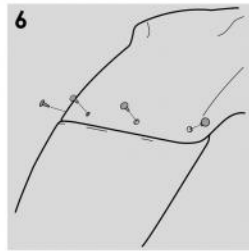

Fit Push-Rivets provided and re-fit mudguard to bike.

Visit 'youtube.com/pyramidplastix' for our video tutorial on fitting a Push-Rivet Extenda Fenda/Hugger Extension

Alternatively you can contact us:  
sales@pyramid-plastics.co.uk  
+44 (0)1427 677990


www.pyramid-plastics.co.uk

PYR140218




**Filament method B**


**| Slick-Fit | Extenda Fenda & Hugger Extension Fitting Instructions**

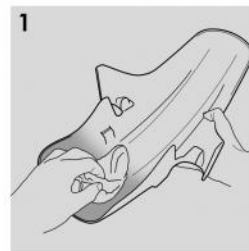


Remove mudguard from bike & clean inside.

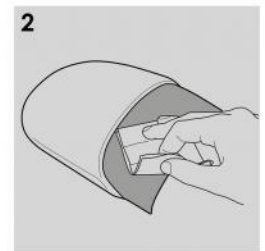


Clean Extenda Fenda/Hugger Extension with alcohol wipe in area shown.

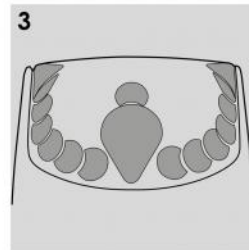

Attach Slick-Fit pads to the Extenda Fenda/Hugger Extension using this image as a guide.

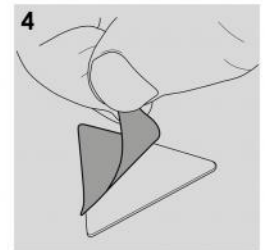

Peel backing paper from Slick-Fit pads.

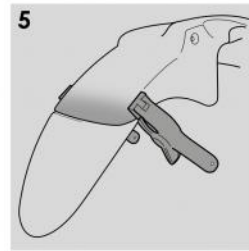

Re-fit mudguard using clips provided or clamps if available.



Allow to cure for 12 hours.

Visit 'youtube.com/pyramidplastix' for our video tutorial on fitting a Slick-Fit Extenda Fenda/Hugger Extension

Alternatively you can contact us:  
sales@pyramid-plastics.co.uk  
+44 (0)1427 677990

www.pyramid-plastics.co.uk

PYR140218