

# PYRAMID

## 072445 Yamaha MT-09, Tracer 900 & XSR900 Hugger Instructions


Kit Includes:

3X 13mm Black Grommet	CGRO0016
3X M6 X 8mm Silver Spacer	CGRO0013
1X M6 X 25mm Black Dome Headed Screw	CBOL0225
1X M6 X 8mm Black Spacer	CSPA0022

Note: If you are fitting the Pyramid Hugger to a MK2 Yamaha MT-09 (2017 Onwards) you will need to use CBOL0225 & TBC (listed above) at mounting point B instead of the OEM fitting. As well as this, you will NOT need CGRO0016 & CGRO0013 for mounting point C

### Fits using OEM fittings from OEM Yamaha Hugger.

- Remove the OEM Yamaha Hugger and keep all OEM fittings for fitment of the Pyramid Hugger. Mounting points A, B & C (Marked RED) can be seen in Fig 1 & Fig 2 below.
- Fit the 3 13mm Black Grommets & 3 M6 X 8mm Silver Spacers to the mounting holes of the Pyramid Hugger.
- Now simply fit the Pyramid Hugger to the existing mounting points using the OEM fittings removed in the first step.
- Be sure not to overtighten as to crack the Pyramid Hugger. Also check fittings periodically.

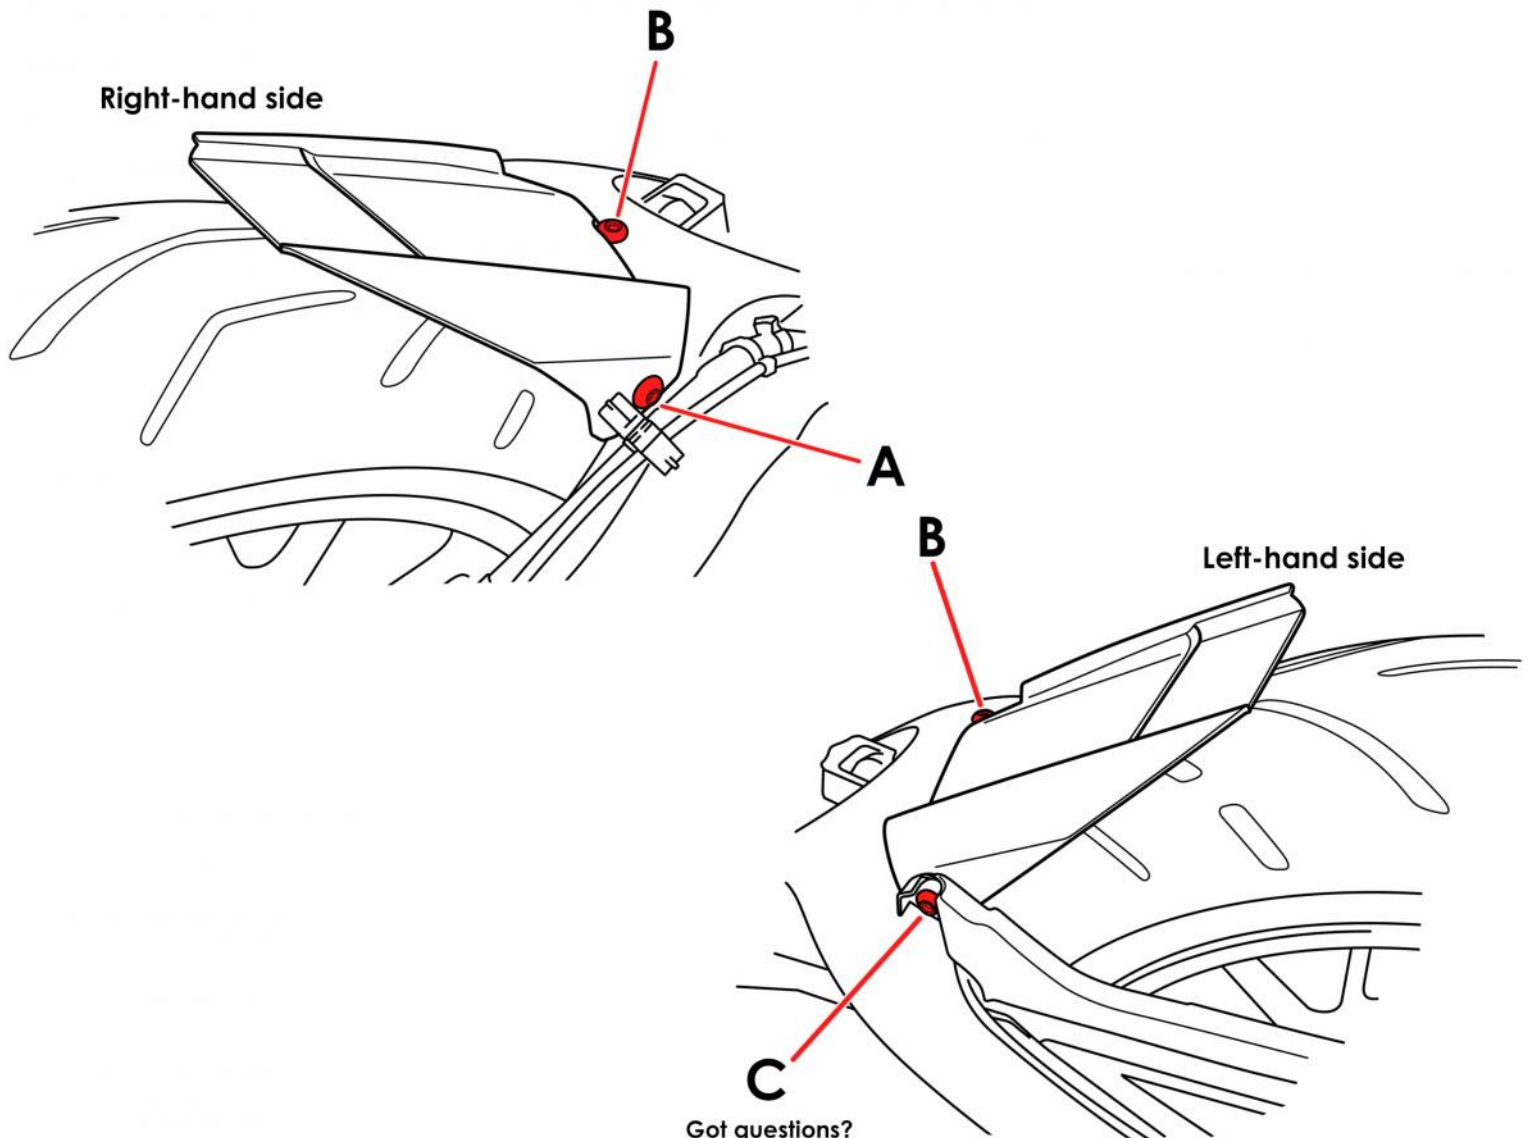

Got questions?  
sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

