

# PYRAMID




## 085102 Honda CRF1000L & CRF1100L Africa Twin (+ Adventure Sports) Spray Guard Fitting Instructions

### Kit Includes:

1X Fibreglass Brace	C085102	Pre-assembled
1X Aluminium Bracket	CFK085102	Pre-assembled
1X ABS Guard	C085102M	Pre-assembled

**Note: You are advised NEVER to attach additional items ANYWHERE on this guard – such as mounting plates, indicators, lights, licence plates, crash protectors, etc as this will invalidate the warranty.**

- The assembled Fibreglass Brace, Aluminium Bracket & ABS Guard are ready to install without the need for adjustment. A paddock/centre stand is required as it is essential to reverse the wheel spindle (including chain tensioning block) so that the nut is on the right-hand side of bike – thus enabling fitment of the Spray Guard.
- The Aluminium Spray Guard Bracket now fits where the original chain tensioning block was previously situated. Please note that you will need to reuse the original washer in conjunction with the Spray Guard Bracket. **See Picture below.**
- Chain adjustment should allow 15-20mm of slack at the centre of the bottom chain run.
- The two screw adjusters left and right, should have equal lengths of exposed threads. **See red circle in picture below.**
- Finally torque the wheel nut to the correct value of **100Nm**.

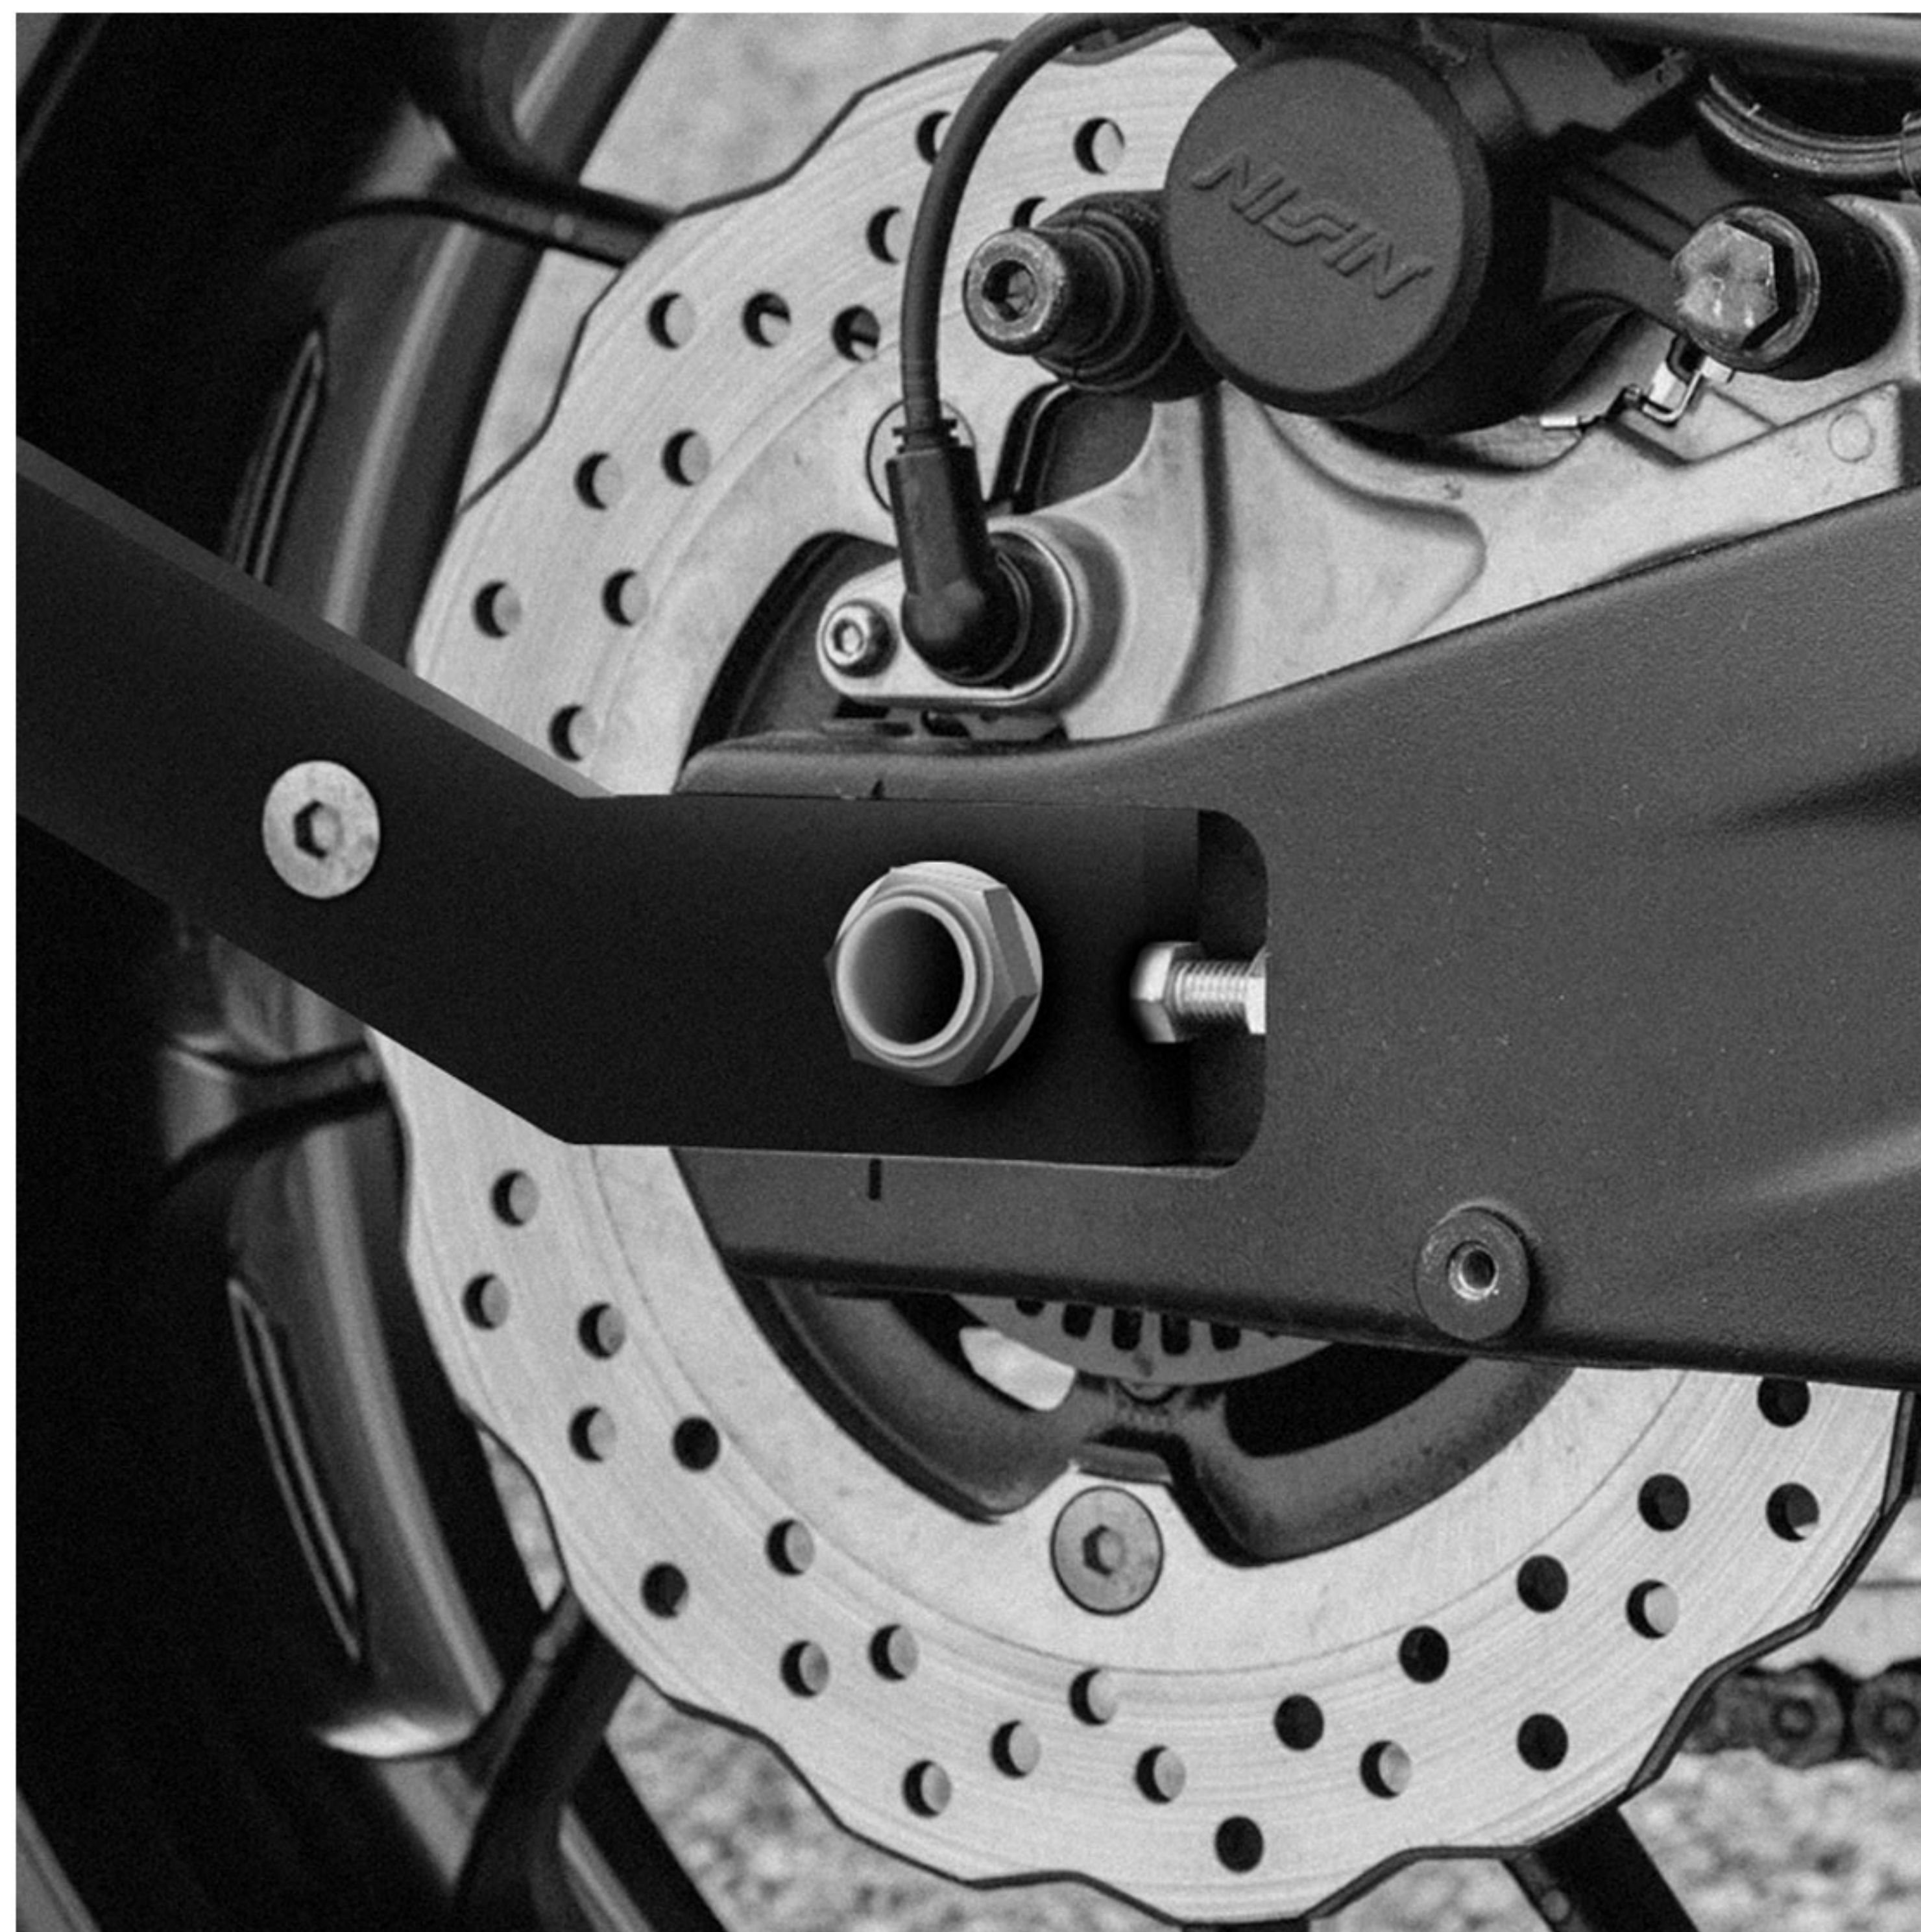

# Africa Twin

### Got questions?

sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!