

# PYRAMID

## 39200 Yamaha Ténéré 700 Wind Deflectors Fitting Instructions

Kit Includes:

2X	Mouldings	C39200
2X	M5 X 20mm Bolts	CBOL2165
2X	Washers	CWAS0221
6X	Rubber Feet	CRUB0006


- The Pyramid Wind Deflectors are simple to fit, the diagram shows how the product is attached. The 6 rubber feet supplied can be stuck in-between the Pyramid Wind Deflectors and the fairing panel if necessary.
- Be sure to check fixings periodically.

sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!



Reuse original bolt

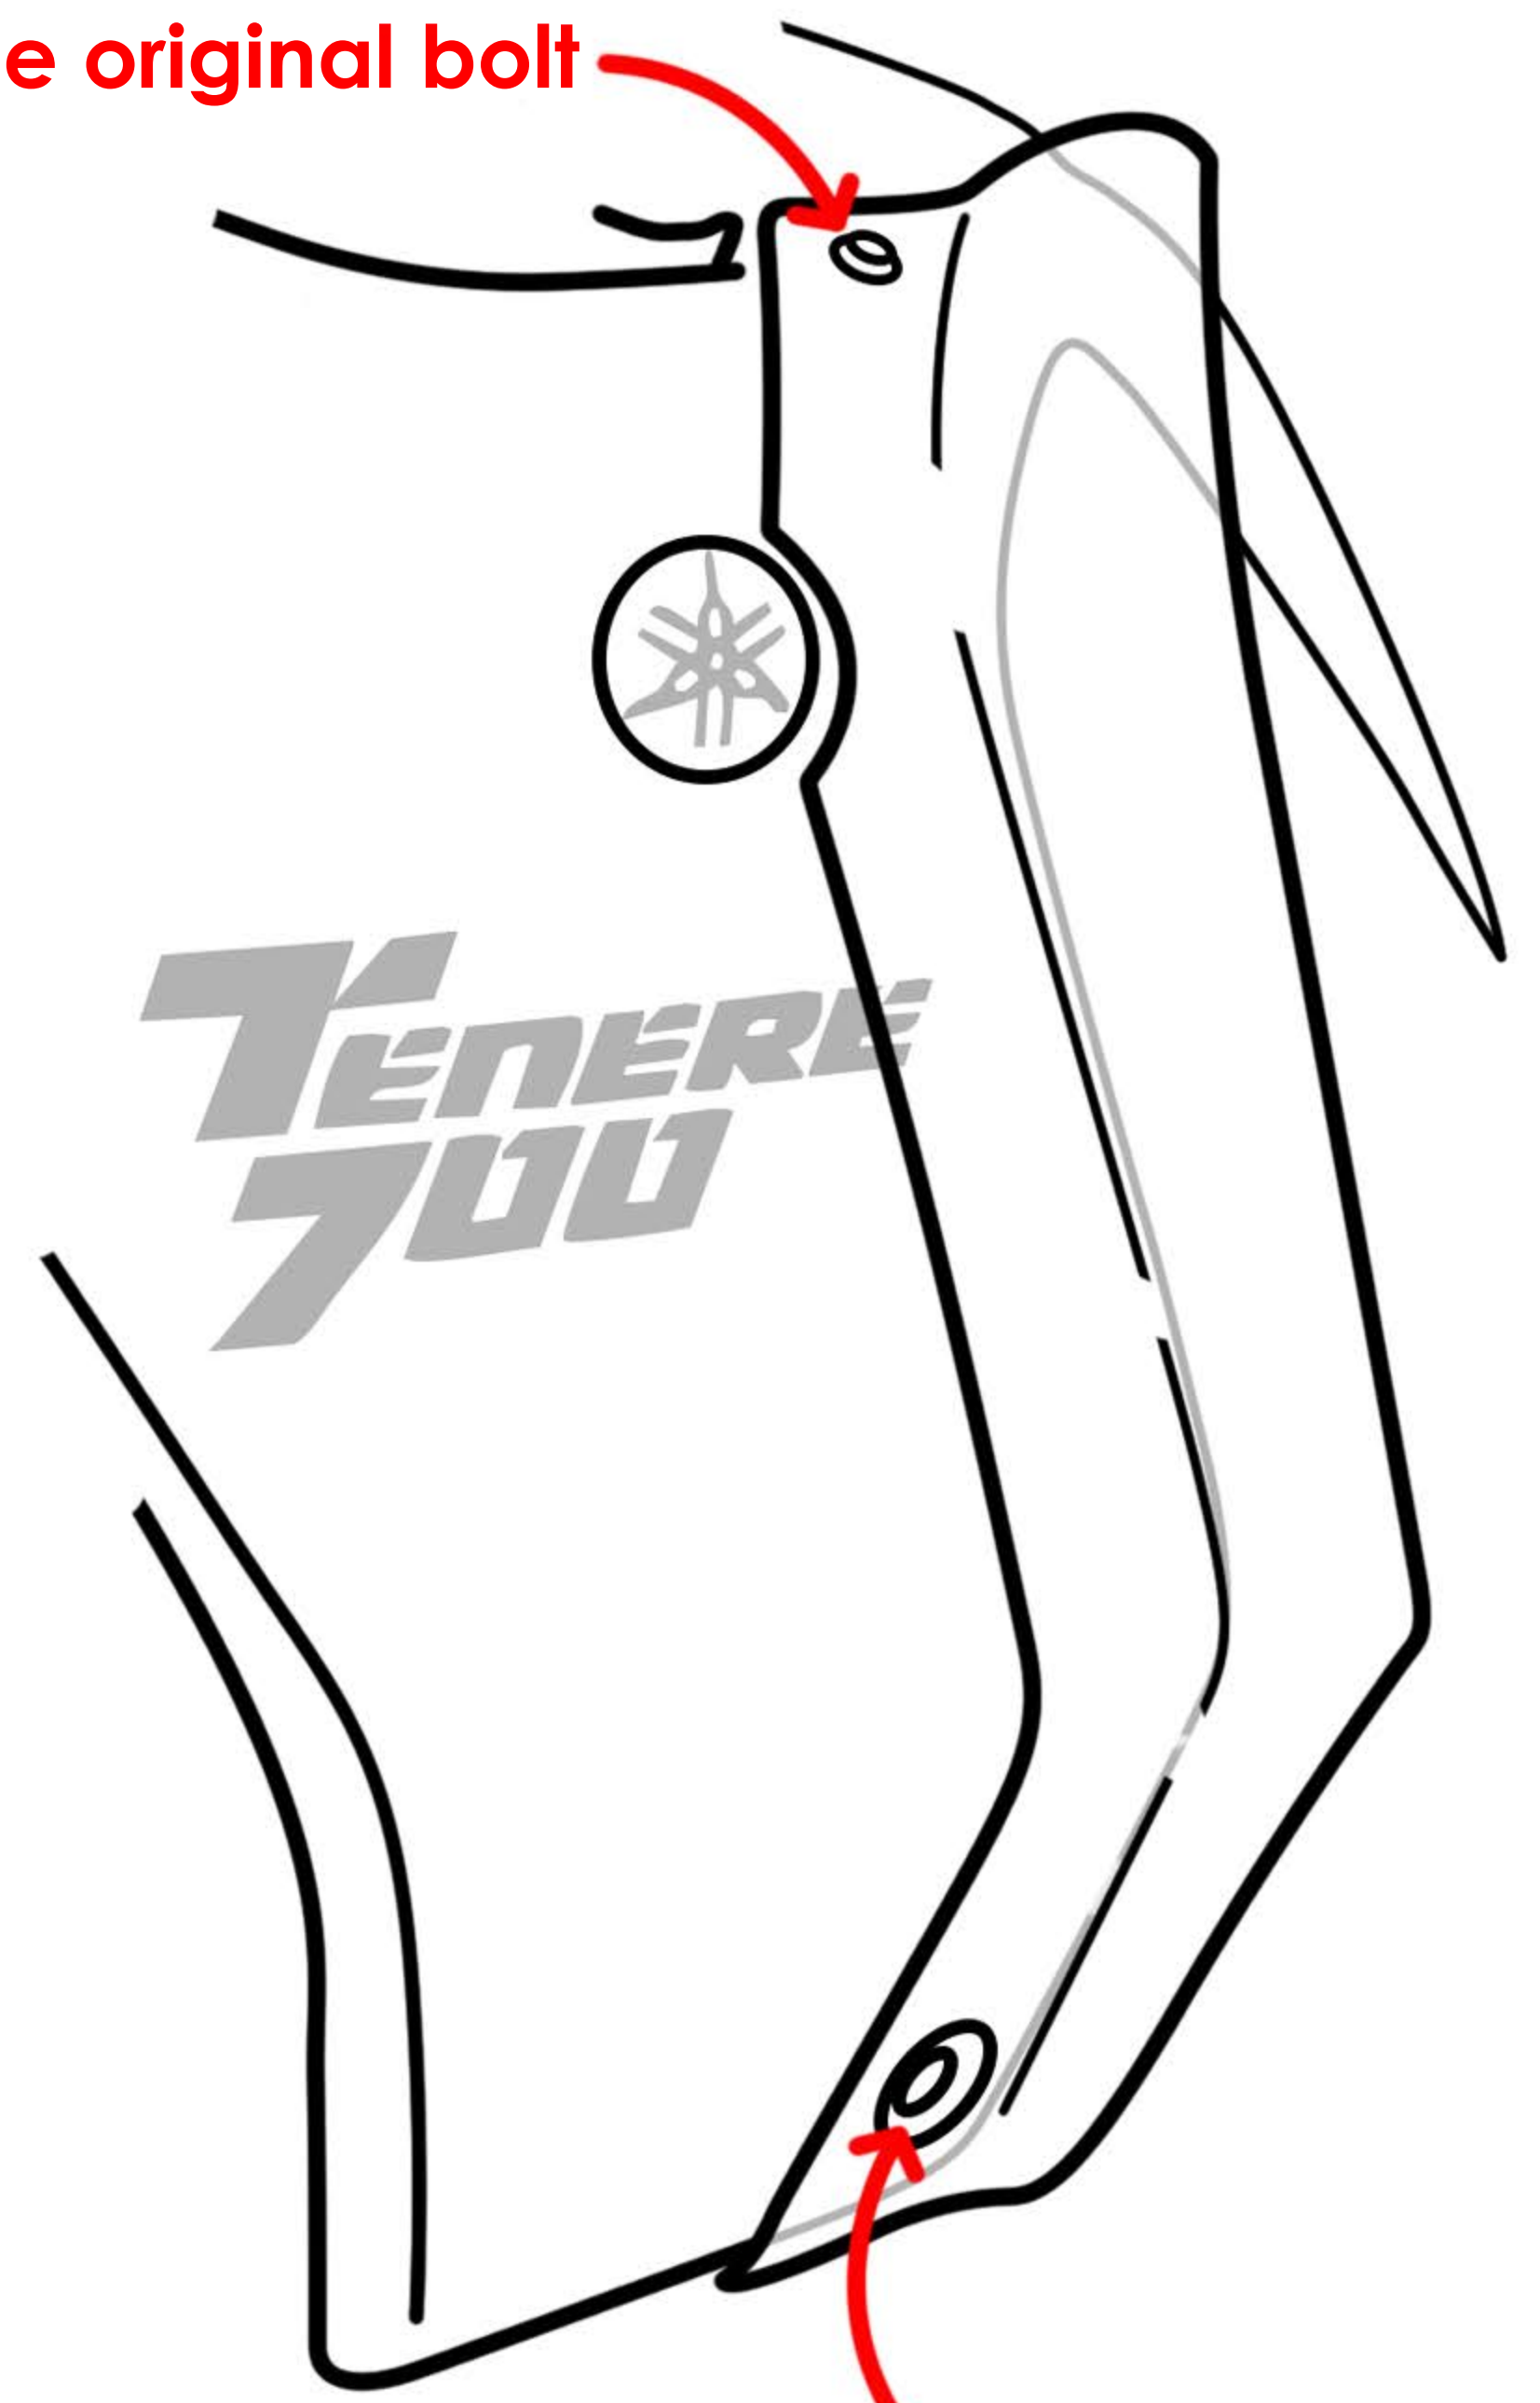

Use bolt + washer supplied

# PYRAMID

## 39200 Yamaha Ténéré 700 Wind Deflectors Fitting Instructions

Kit Includes:

2X	Mouldings	C39200
2X	M5 X 20mm Bolts	CBOL2165
2X	Washers	CWAS0221
6X	Rubber Feet	CRUB0006


- The Pyramid Wind Deflectors are simple to fit, the diagram shows how the product is attached. The 6 rubber feet supplied can be stuck in-between the Pyramid Wind Deflectors and the fairing panel if necessary.
- Be sure to check fixings periodically.

sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!



Reuse original bolt

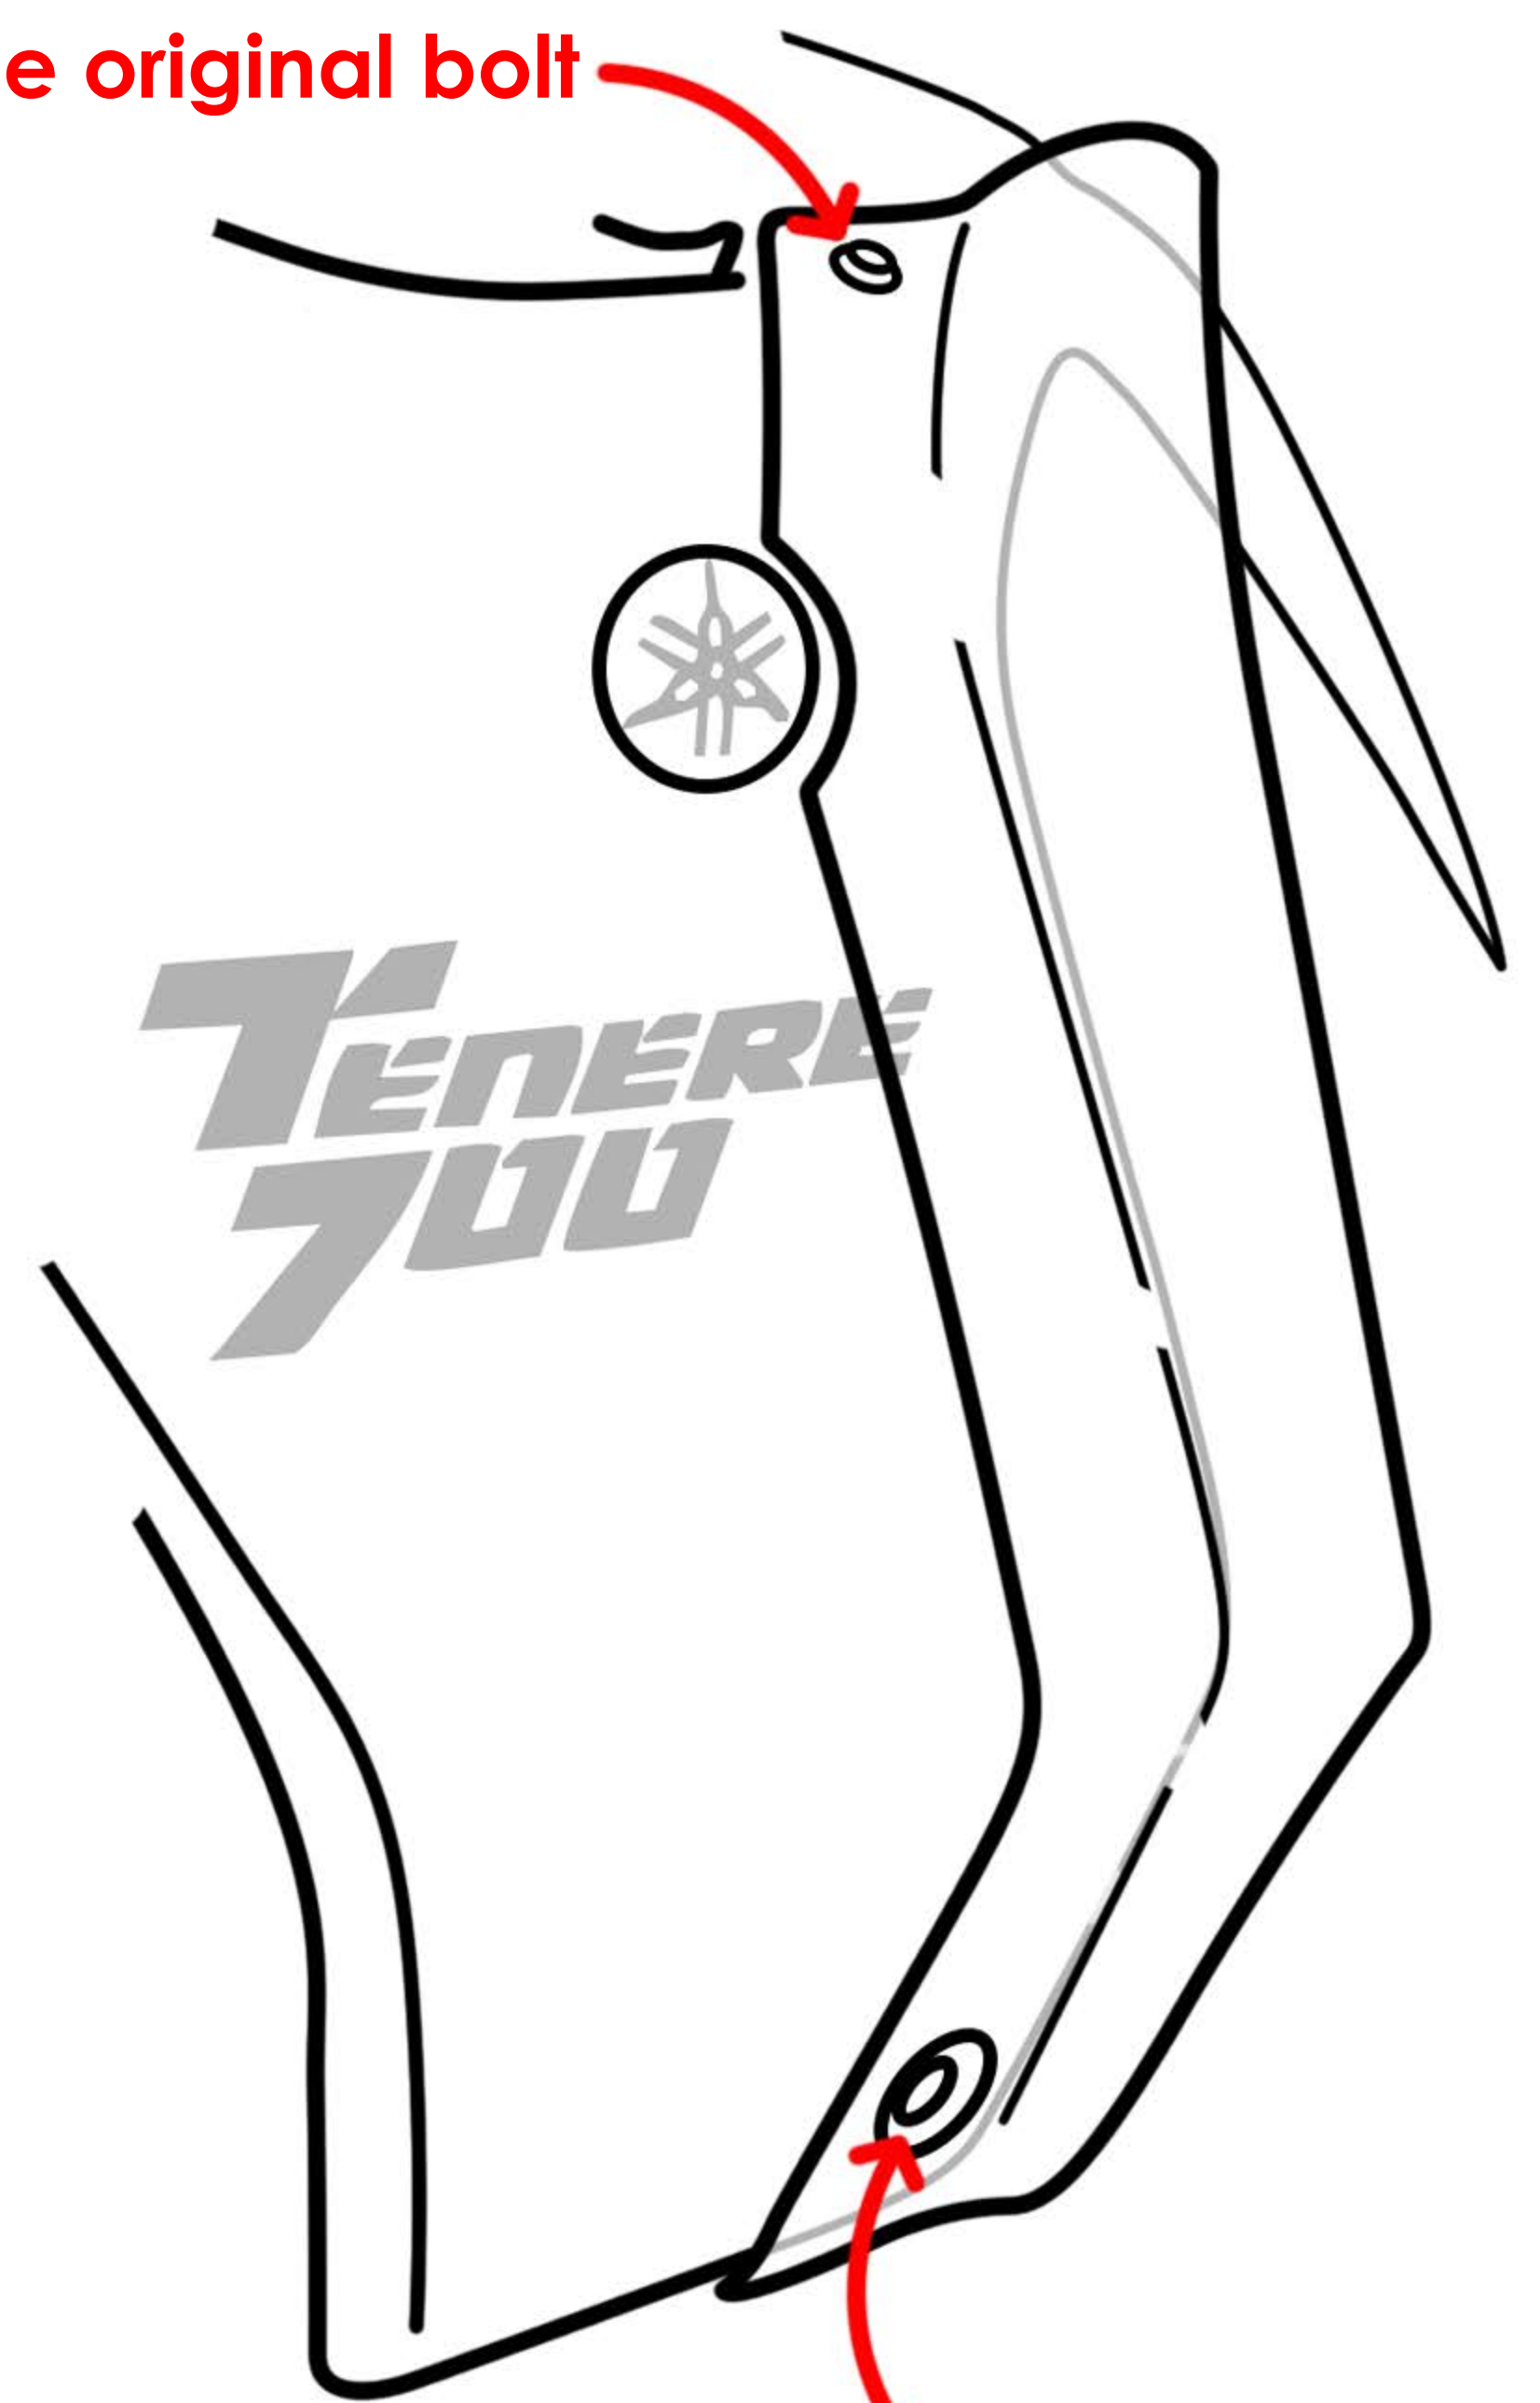

Use bolt + washer supplied