

# PYRAMID


## 35990 KTM 1290 Superduke R Seat Rack Fitting Instructions

Kit Includes:

1X	C35990	Seat Rack
4X	CBOL0305	M8 X 40mm Bolt
4X	CSPA0023	Spacer

- Remove the 4 original bolts from the bike and fit the Pyramid Seat Rack as shown below.

Pyramid Seat Rack

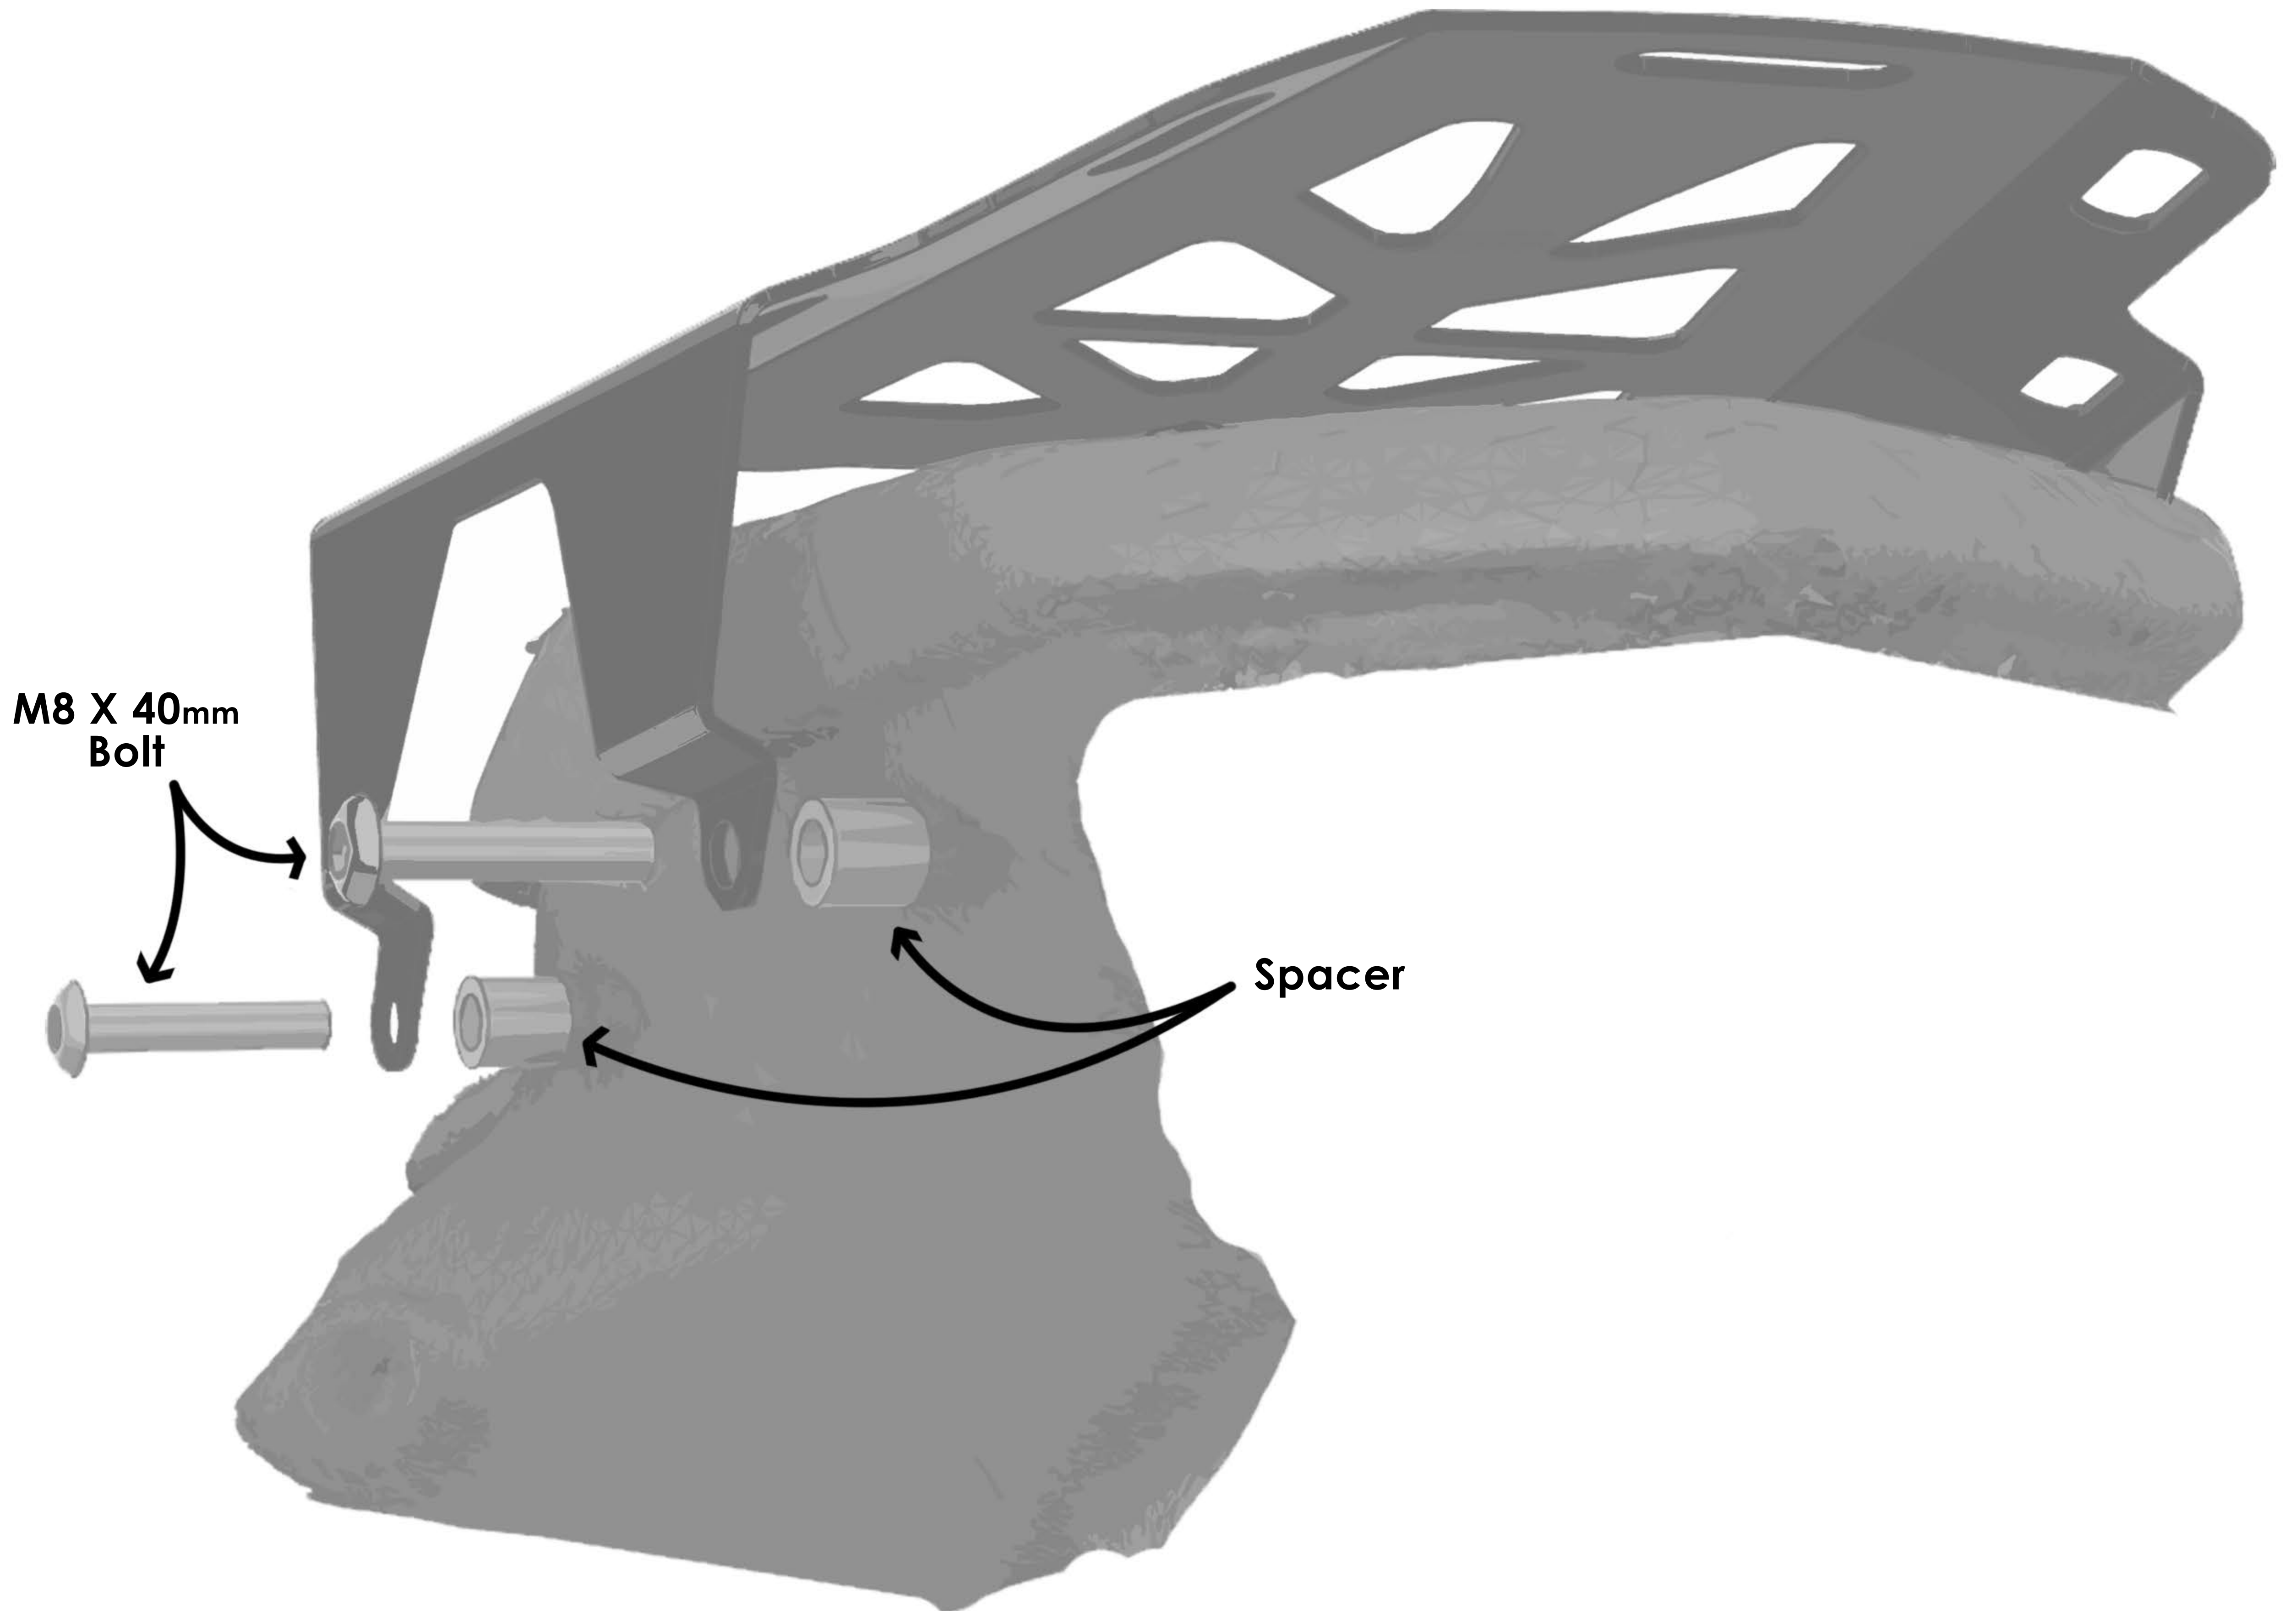

Any questions?  
sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk



Follow us on social media and  
feel free to leave us a review!

