

# PYRAMID



## 816002 Triumph Tiger 1200 (Explorer) Shock Shield Instructions

Kit Includes:



4X Cable Ties 200mm X 4.8mm

CAB0200

2X 50mm Foam Strips

CFOA0001 Pre-fitted

- The Pyramid Shock Shield is easy to fit. Simply slide the part over the rear wheel and slot the OEM mudguard through the slot in the Pyramid Shock Shield (this slot is marked 'A' in 'Fig 1'). The two recesses in the moulding (marked 'B') give a rest for the OEM mudguard to sit against.
- Once the first step is complete, feed the cable ties through the slots provided in the Pyramid Shock Shield (see 'Fig 2').
- Now wrap all four cable ties around the chassis tubing and pull tight for a secure fit. It is important to position all four cable ties before tightening for ease of fitment. Finally trim any loose ends.

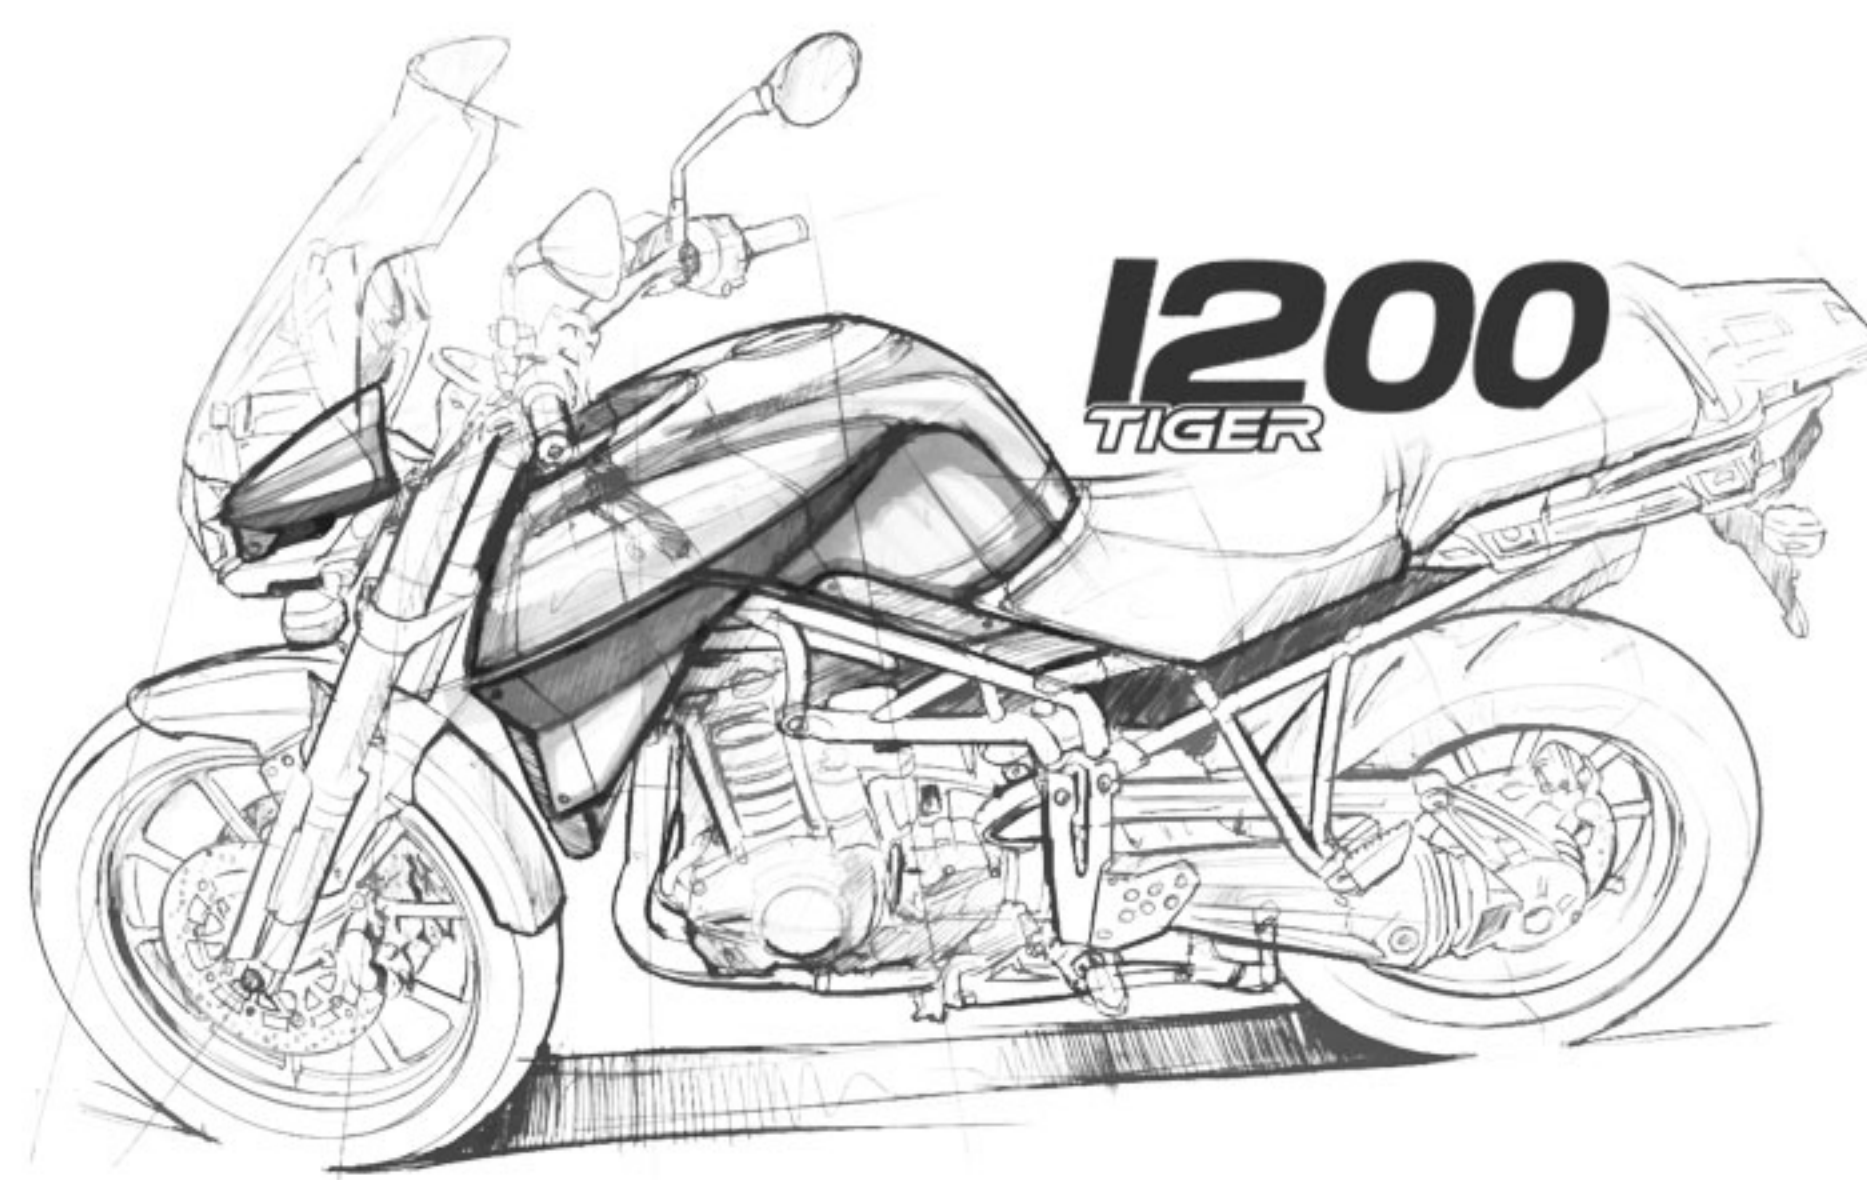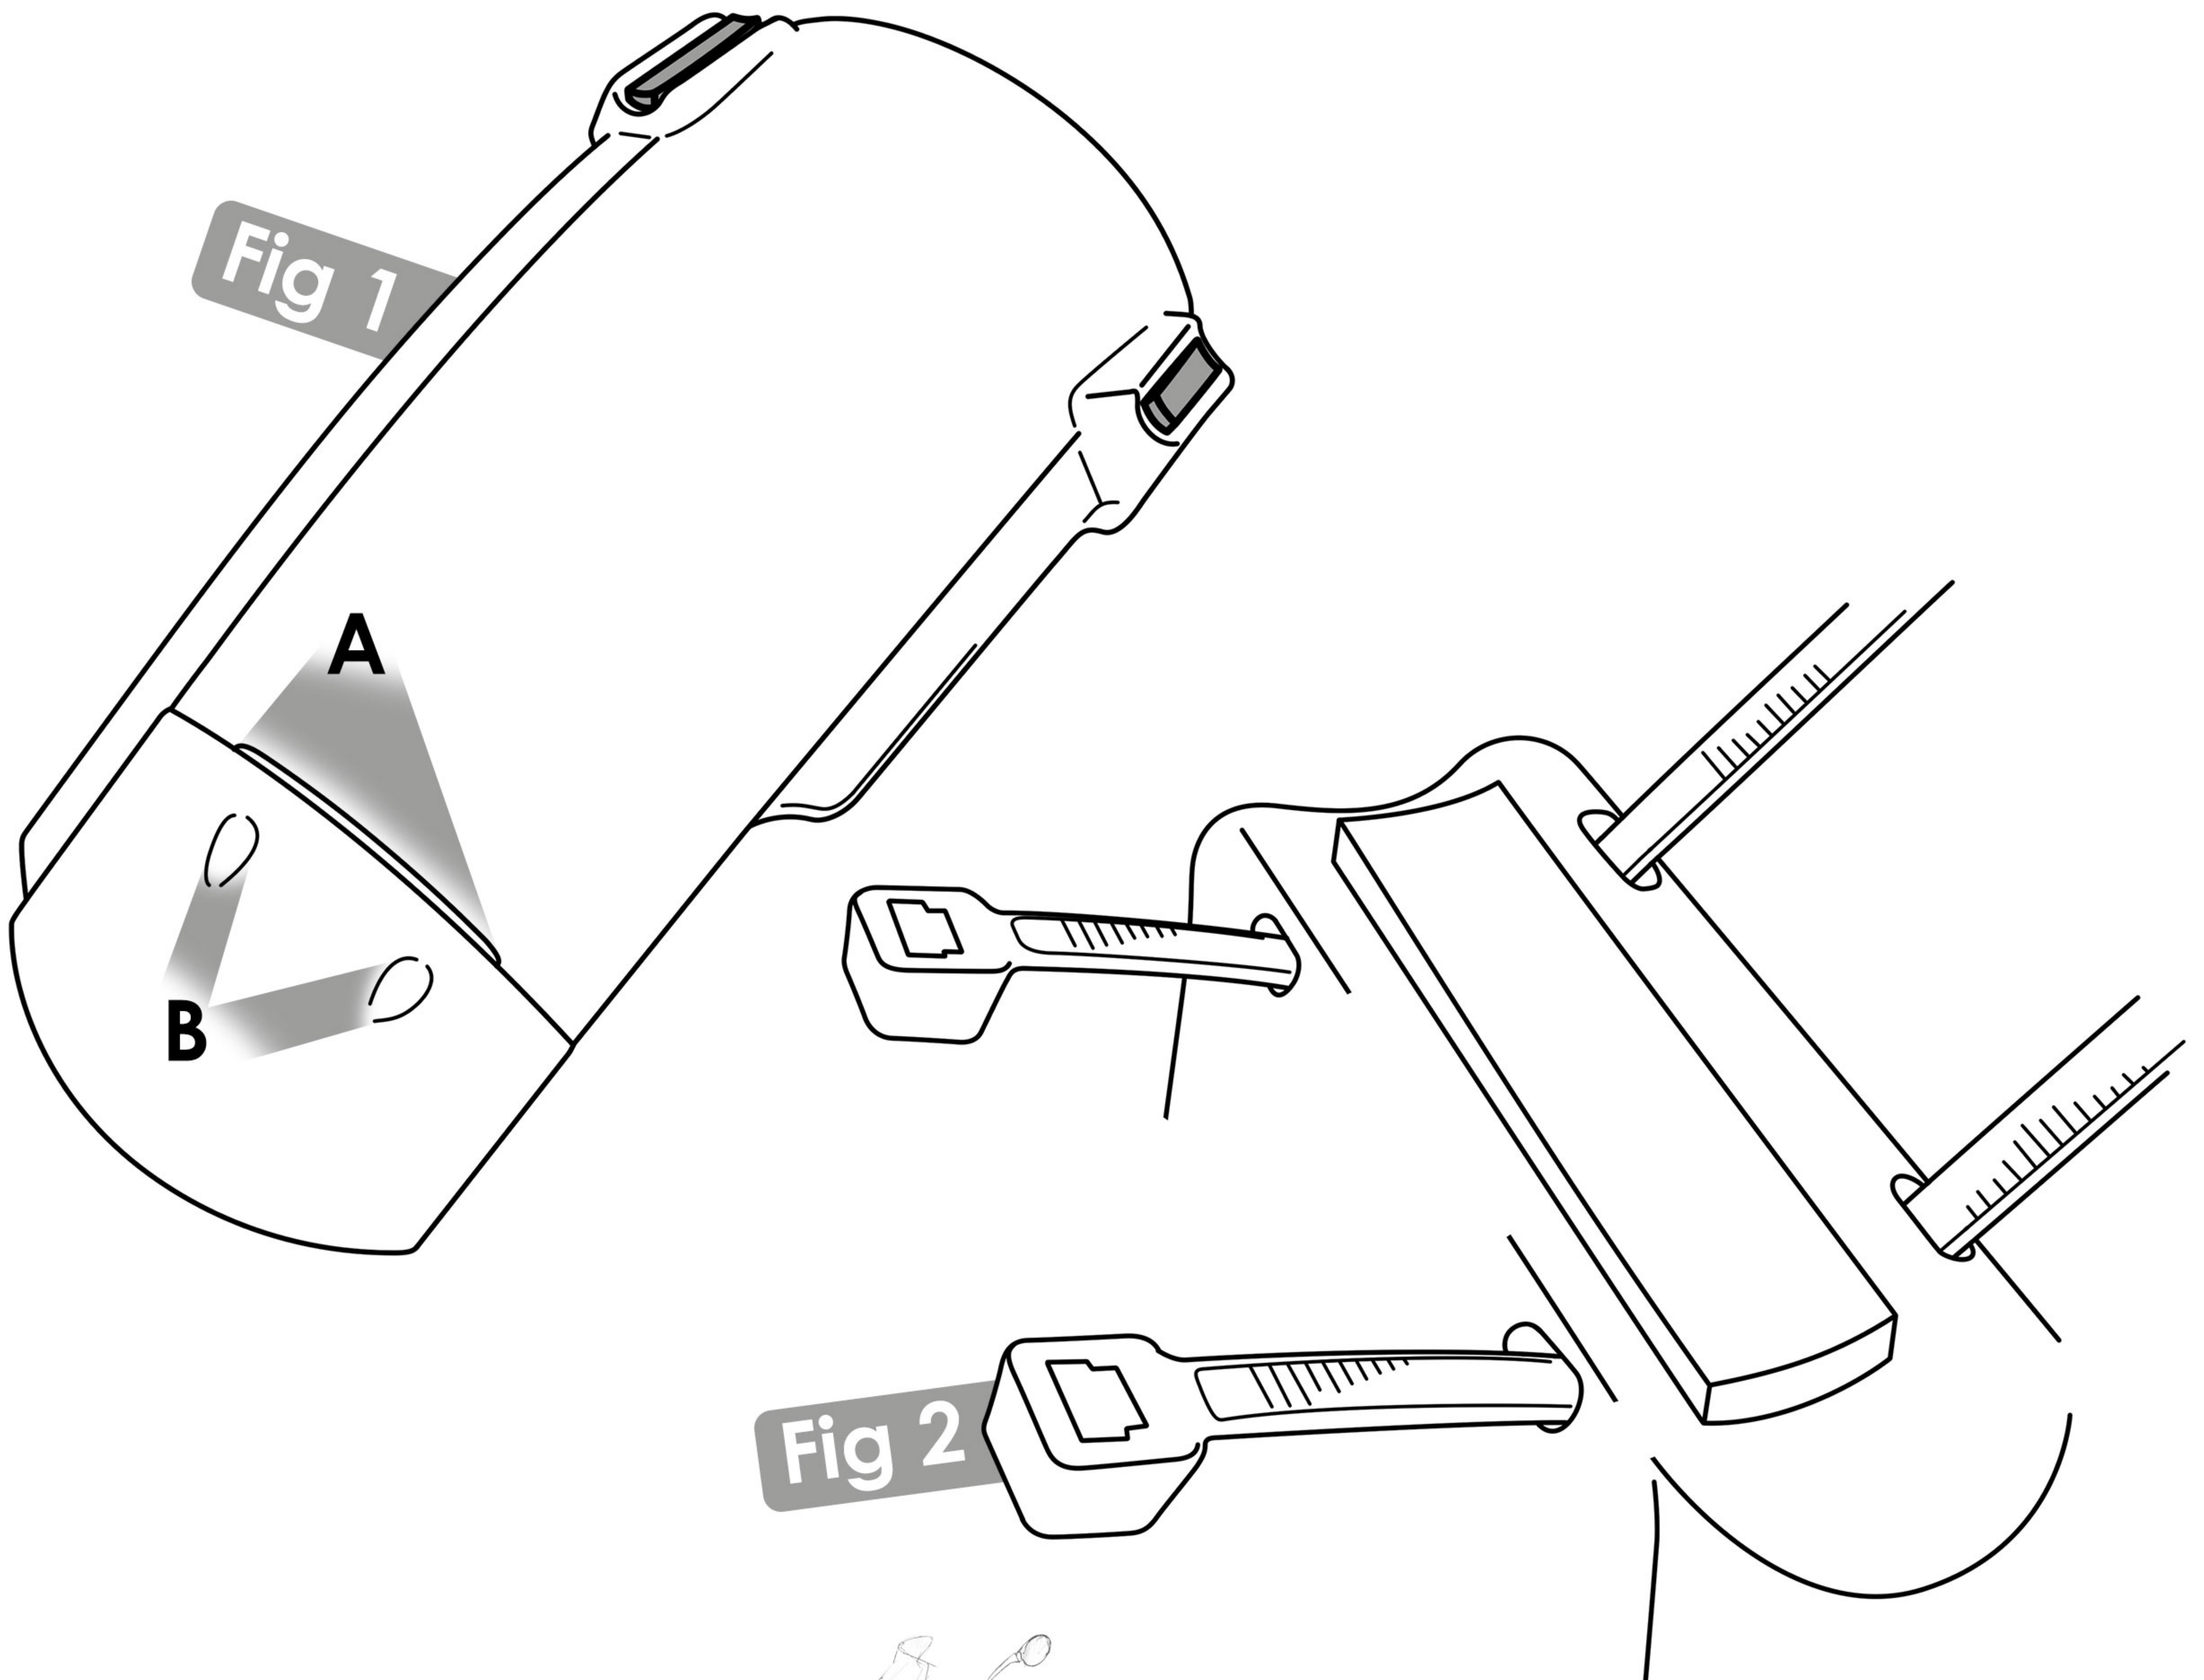

Got questions?  
sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

