



Fitment method A


| Push-Rivet | Extenda Fenda & Hugger Extension Fitting Instructions

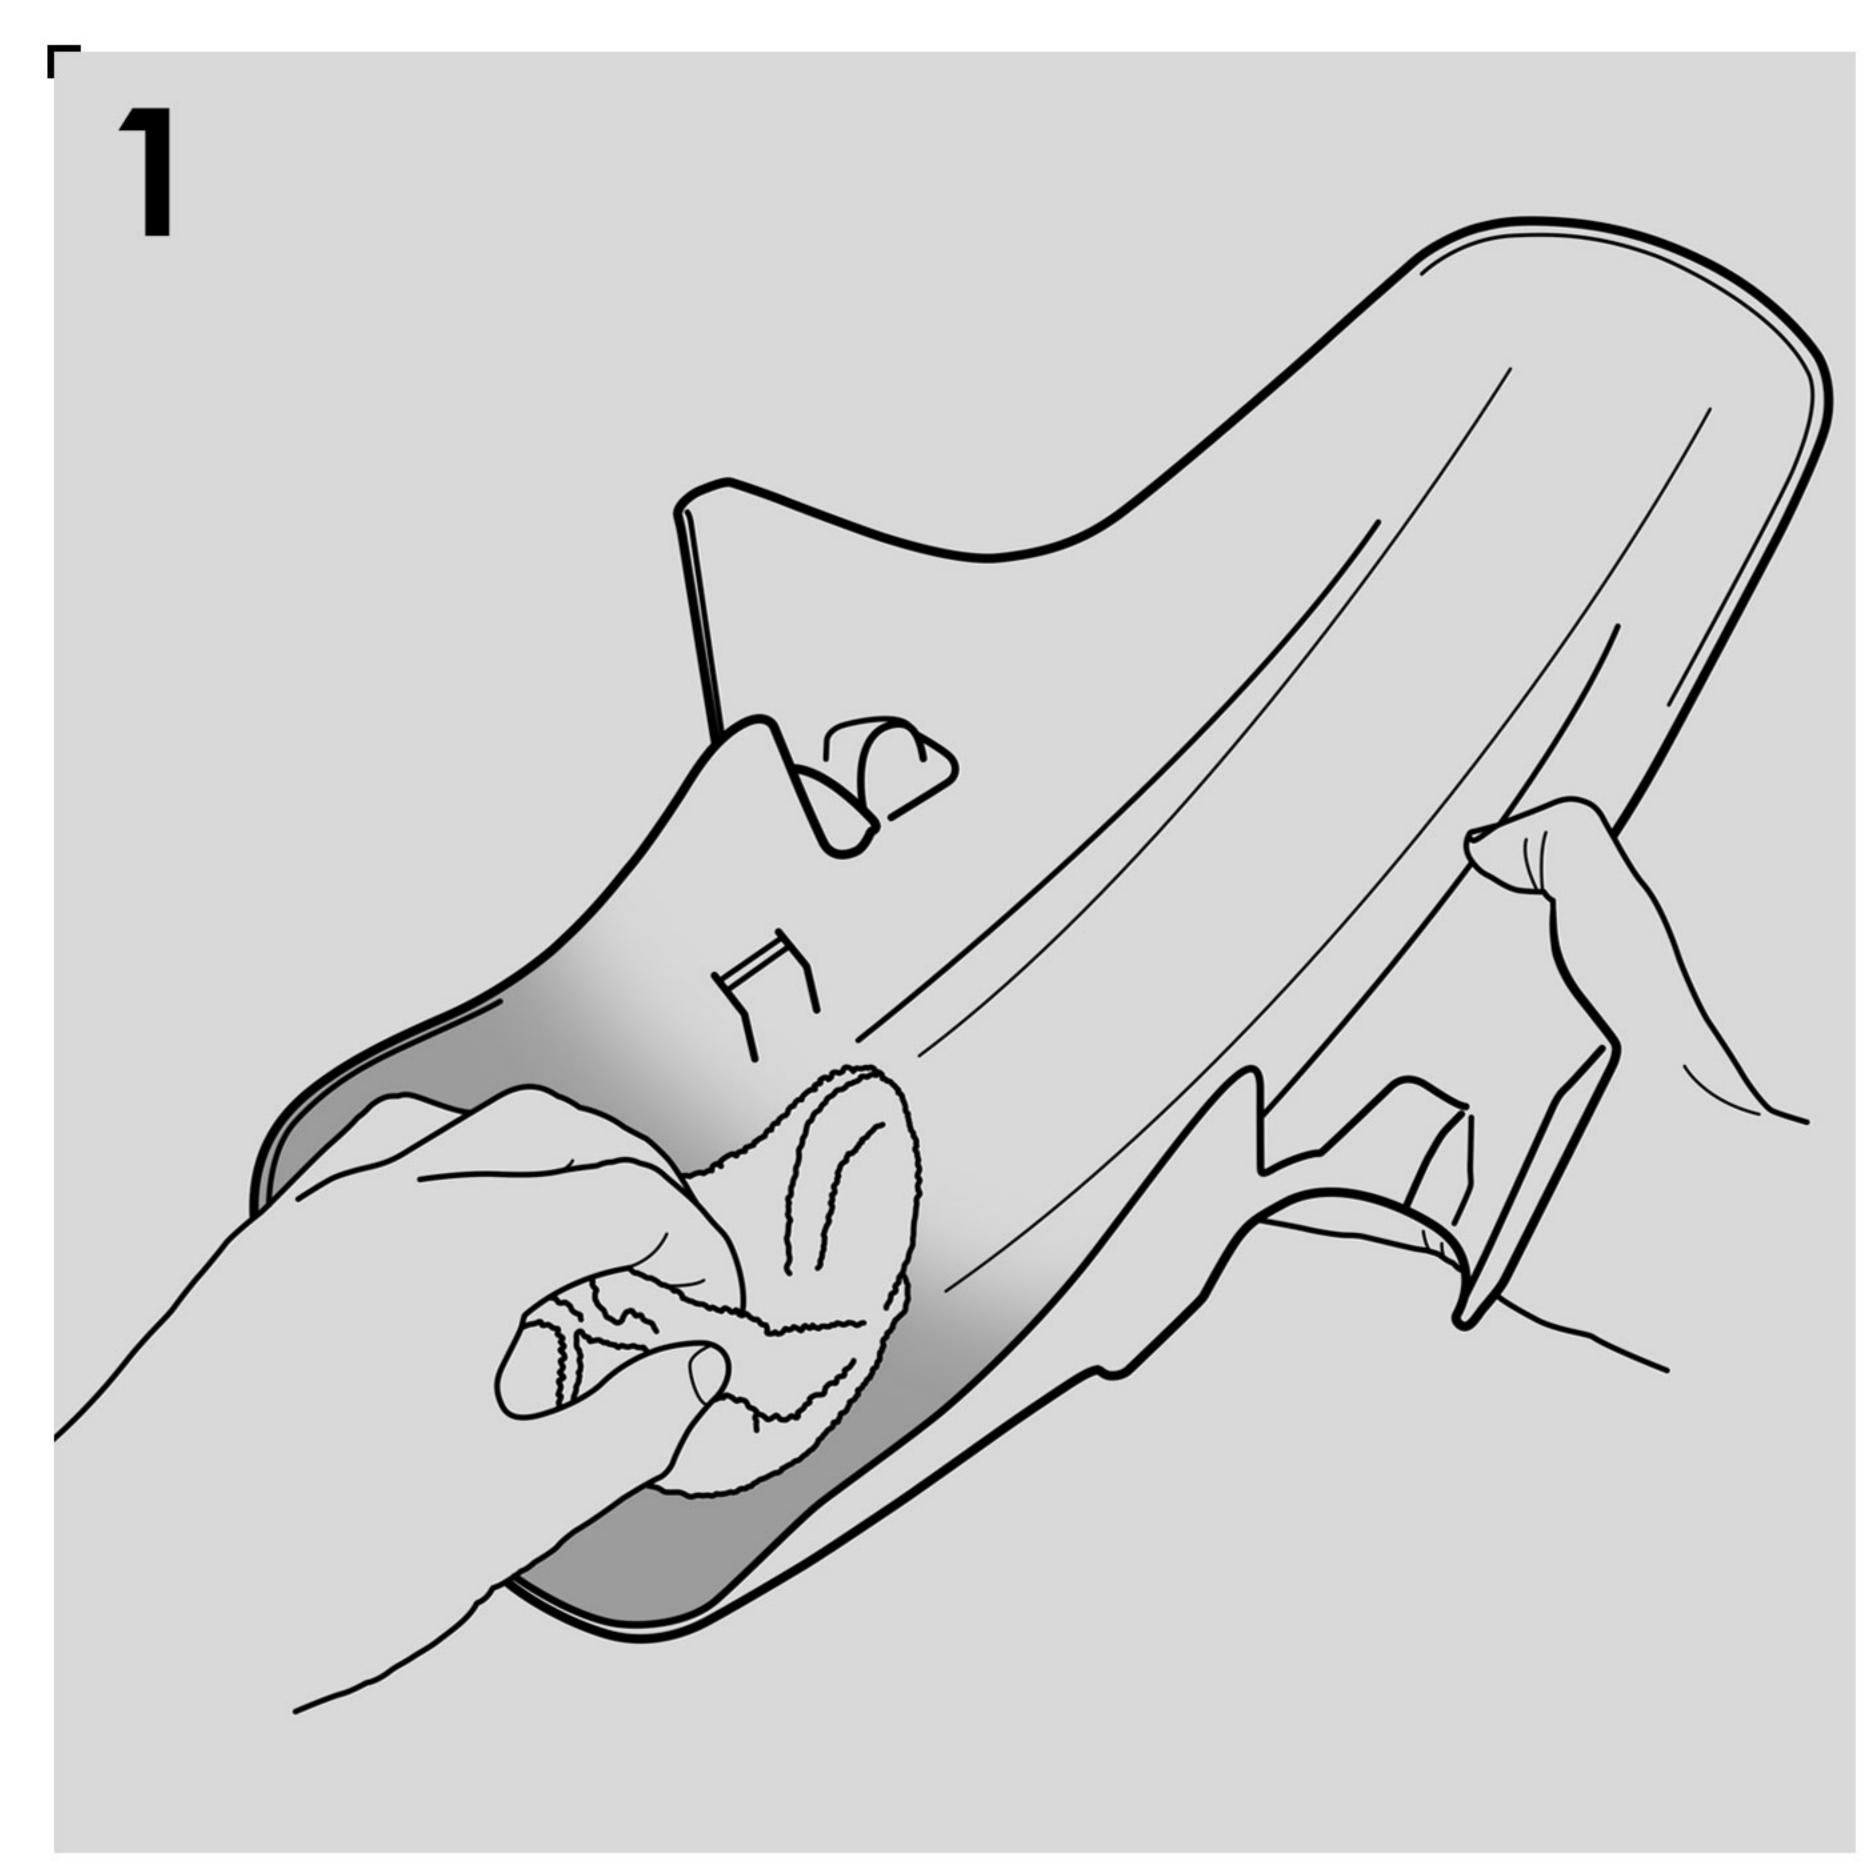

Remove mudguard from bike & clean inside.

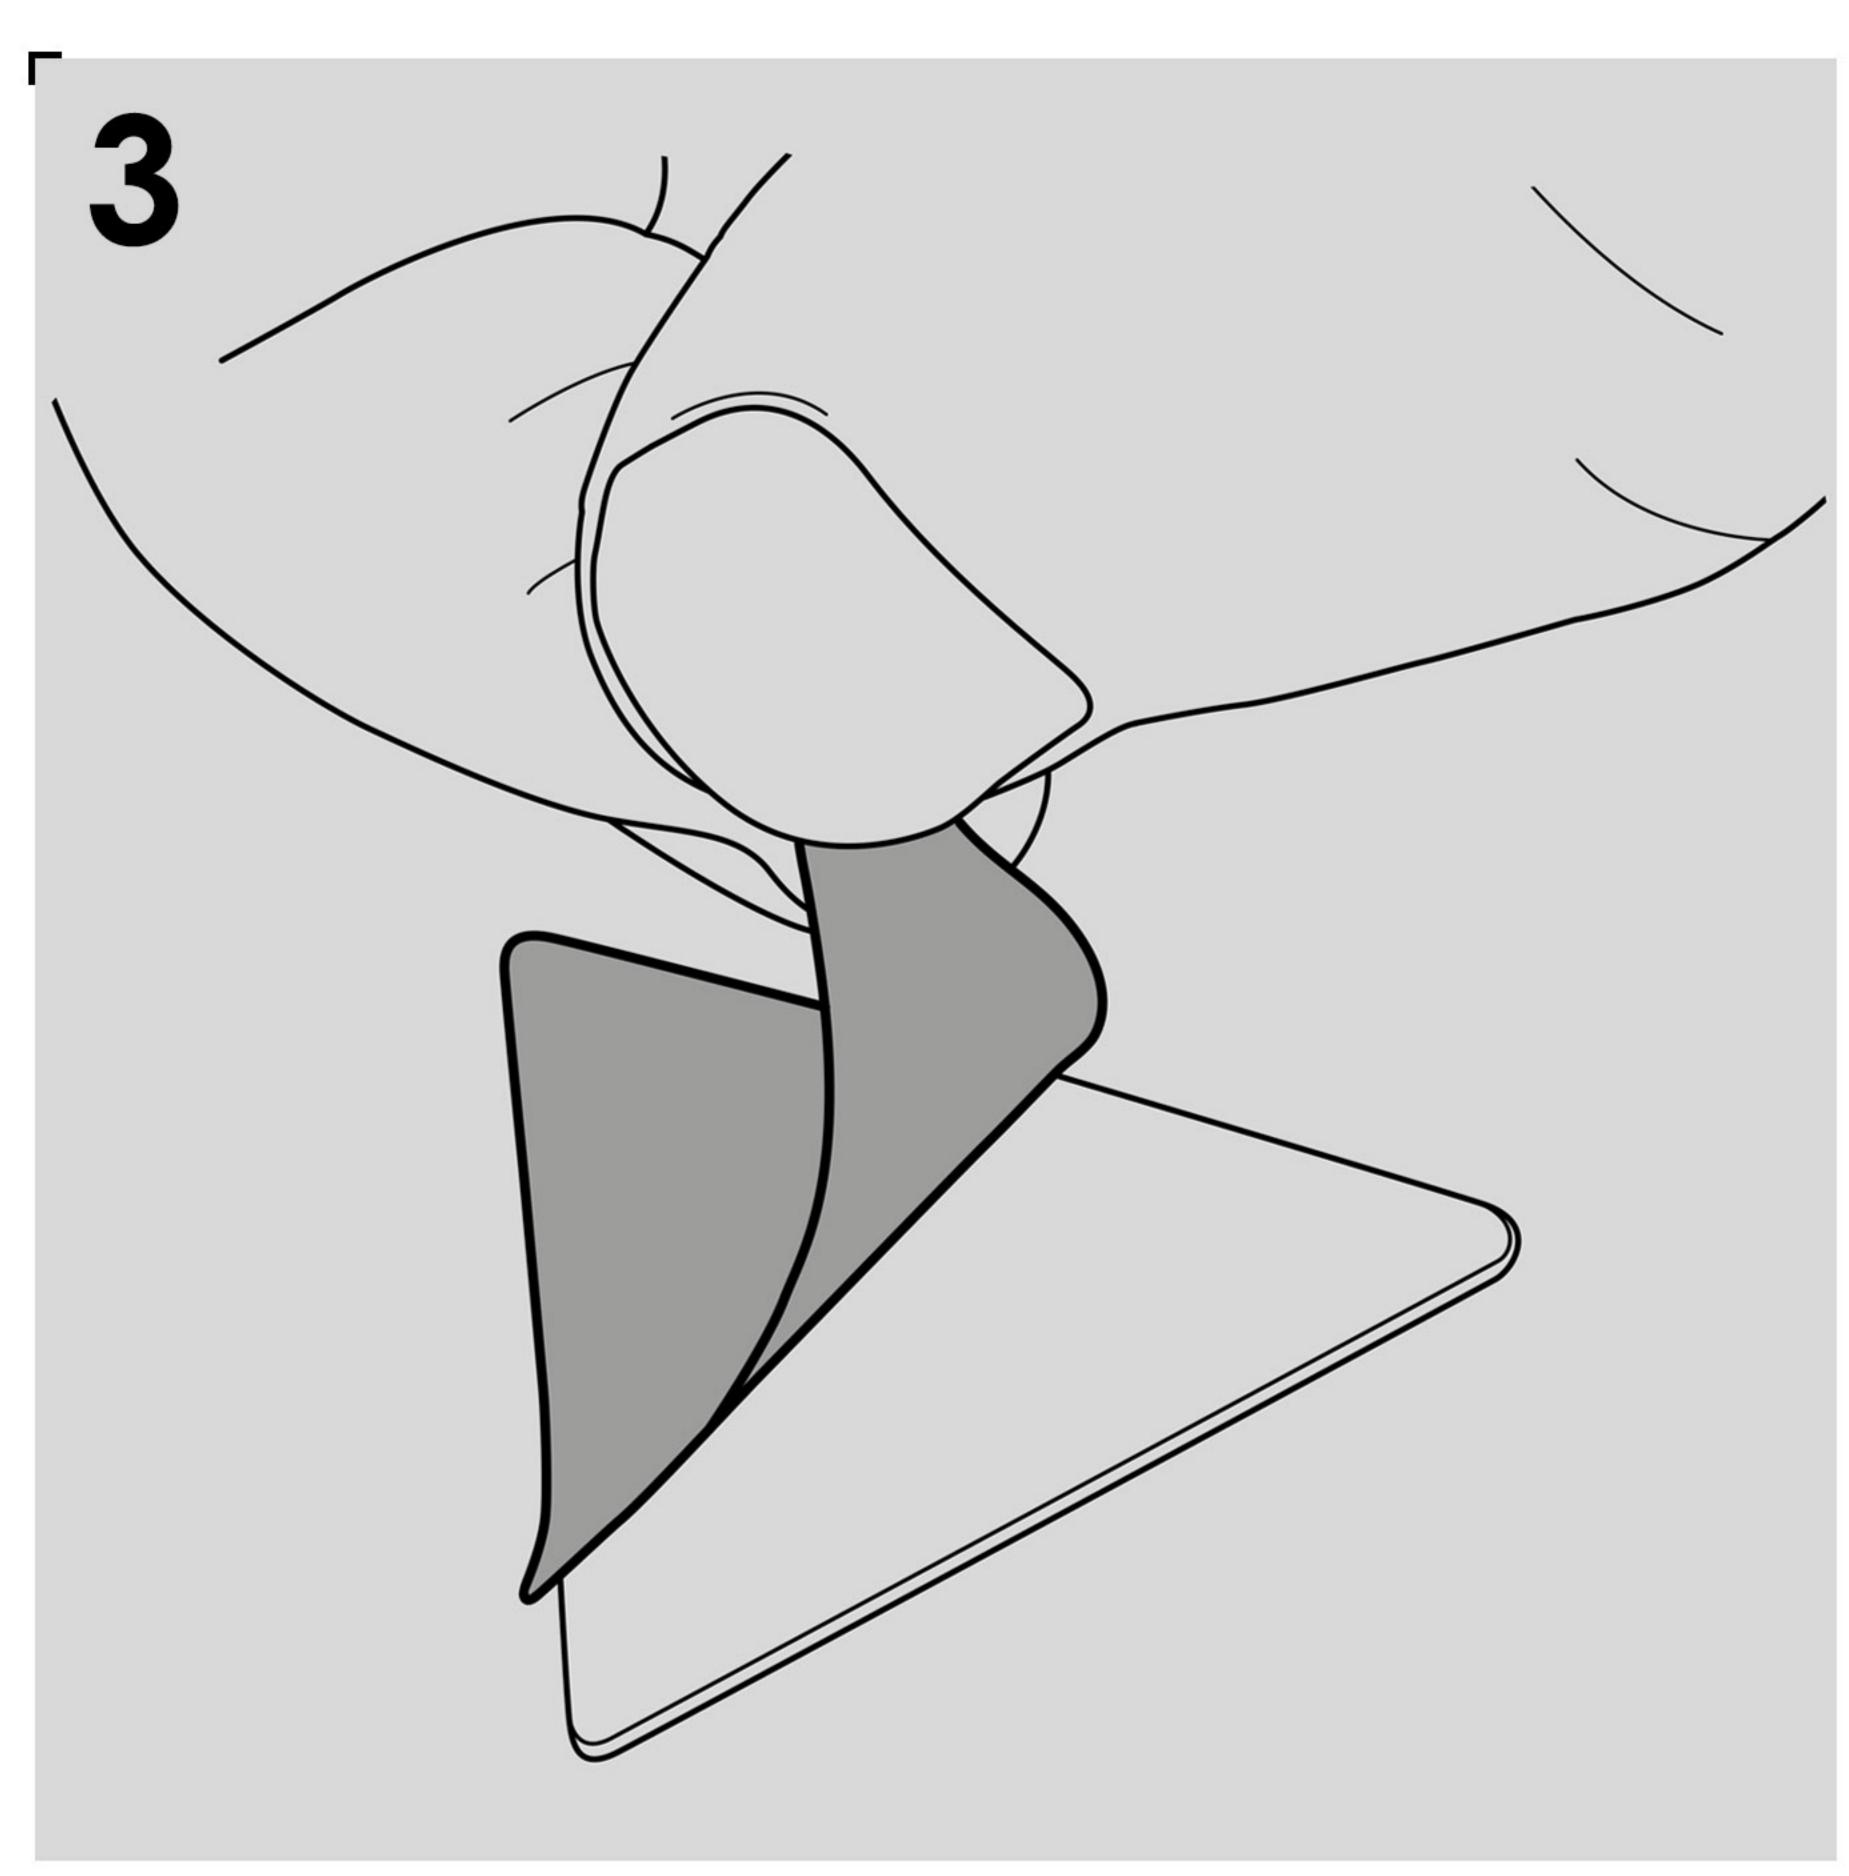


Peel backing paper from Stick-Fit pads.

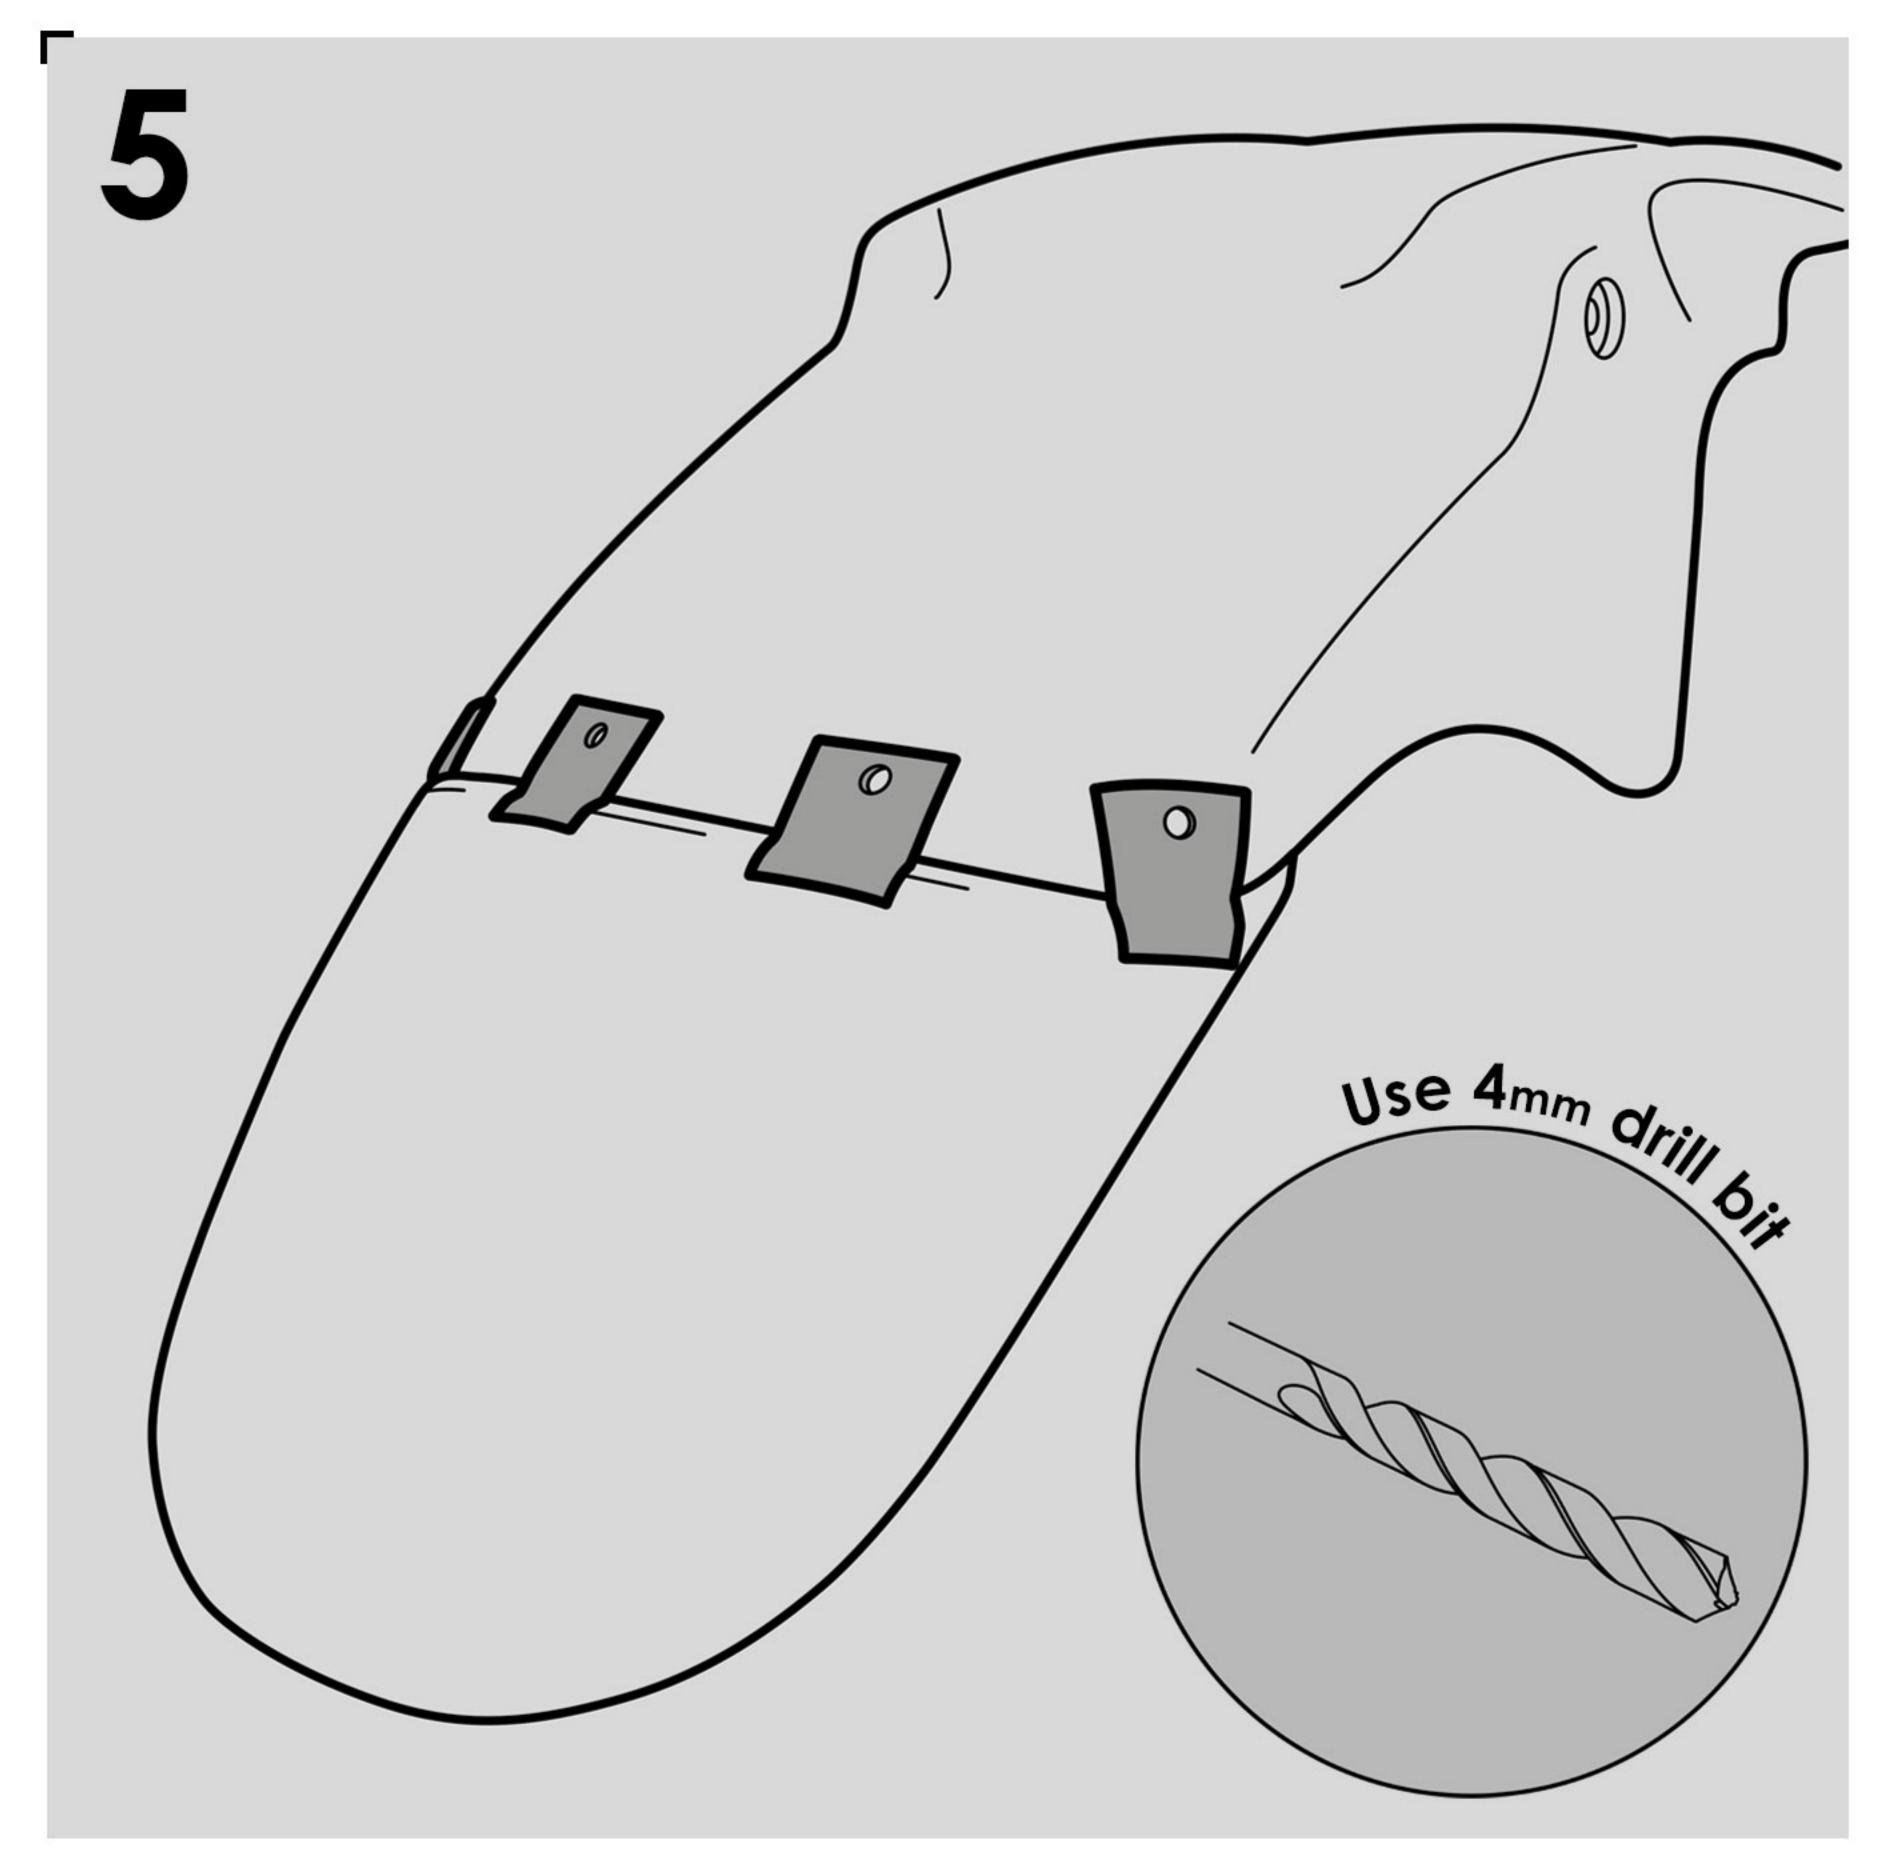


Use masking tape to mark equally spaced drilling points.


Drill through the Extenda Fenda/Hugger Extension & mudguard at each point.

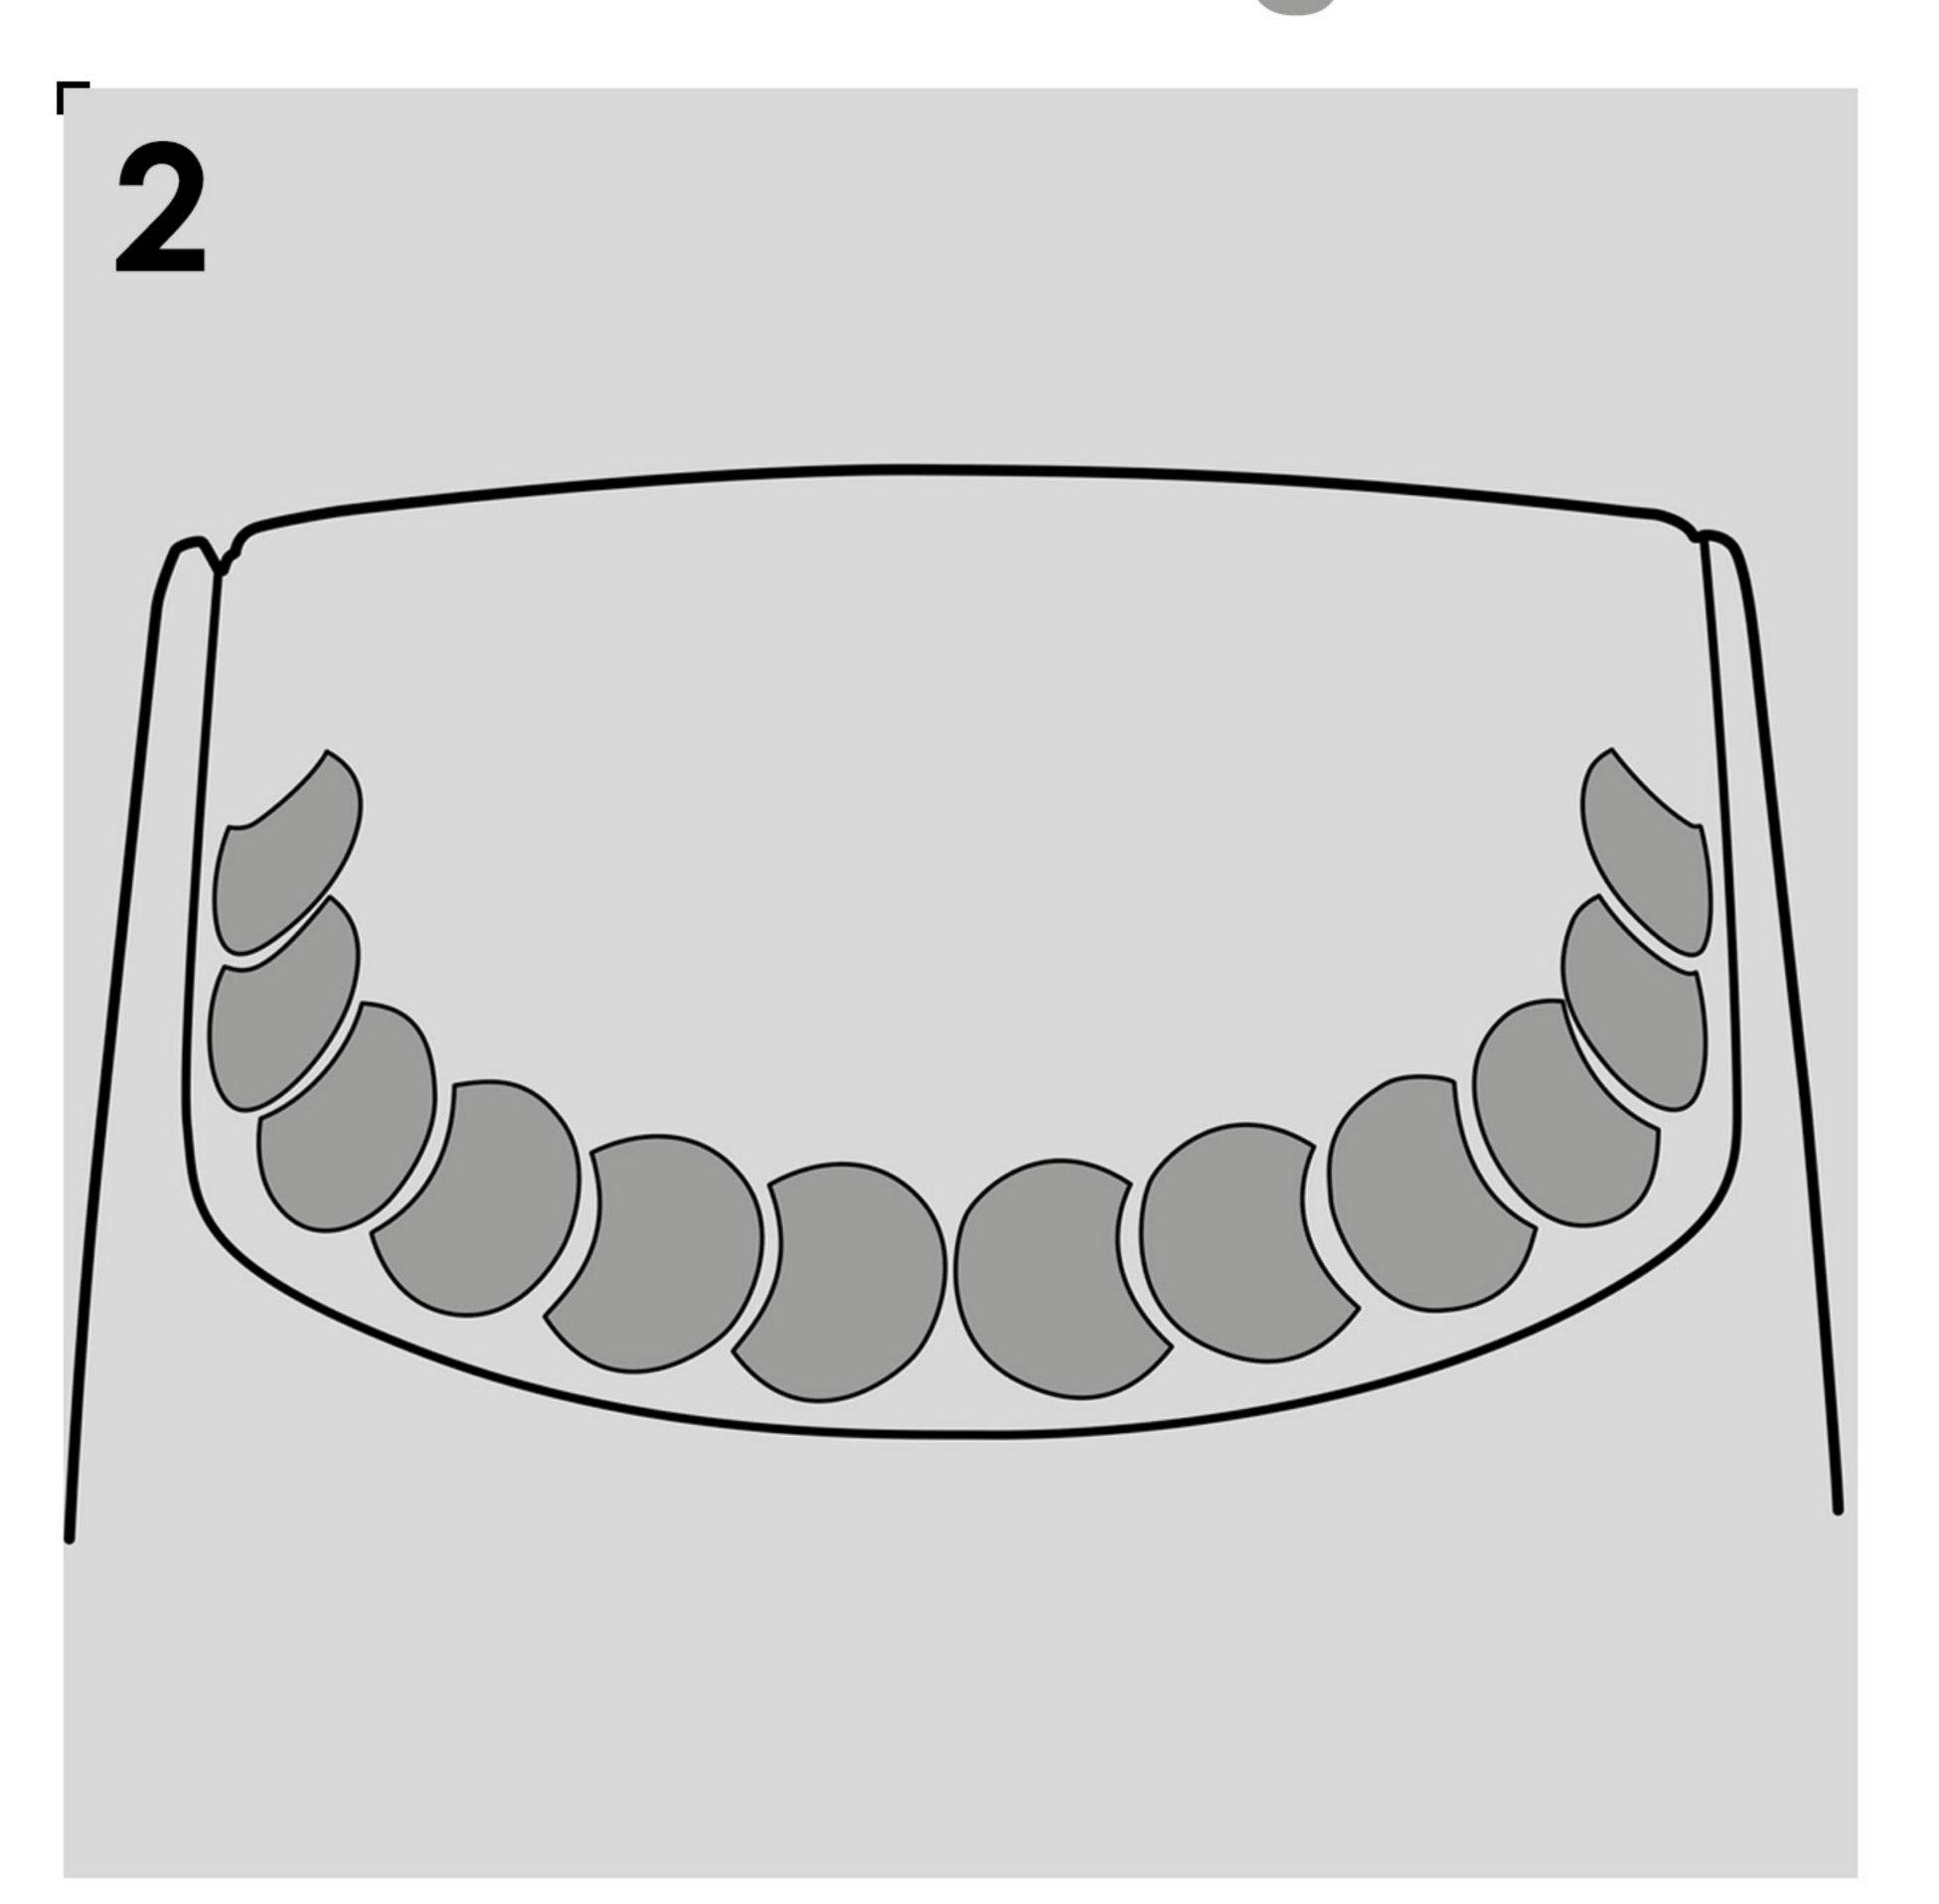

Attach a few Stick-Fit pads to the Extenda Fenda/ Hugger Extension in area shown to create a gasket.

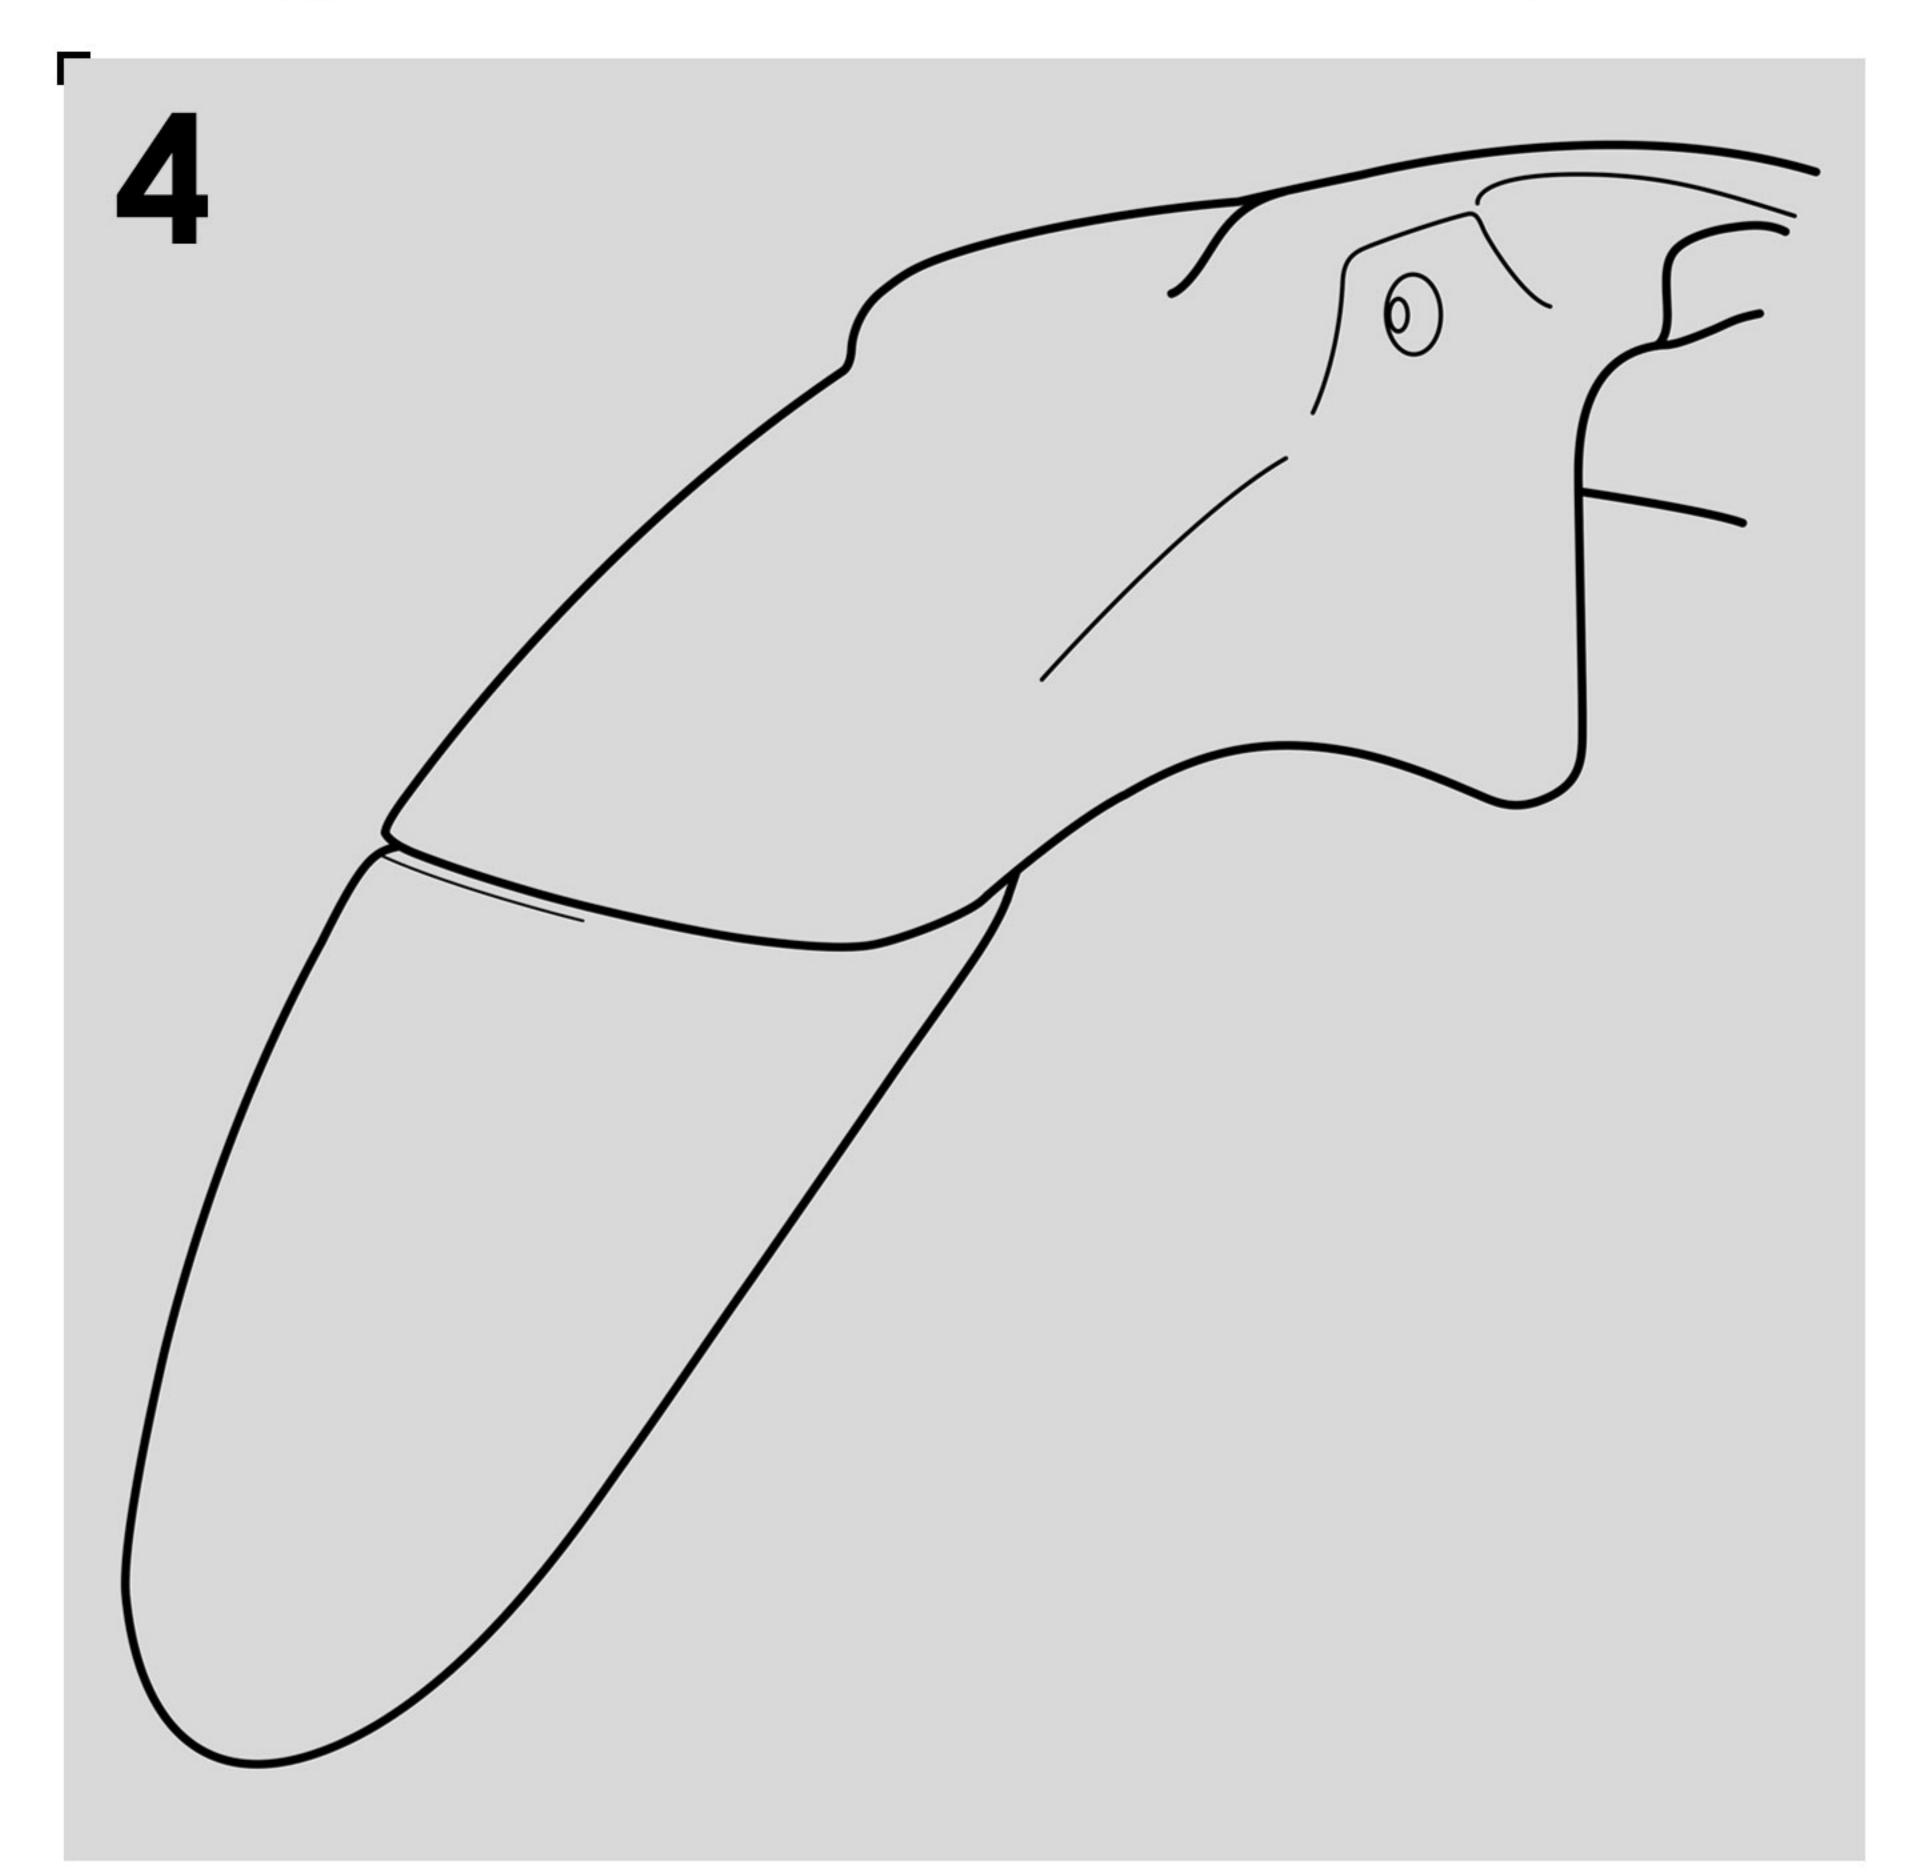

Fit Extenda Fenda/Hugger Extension to mudguard.

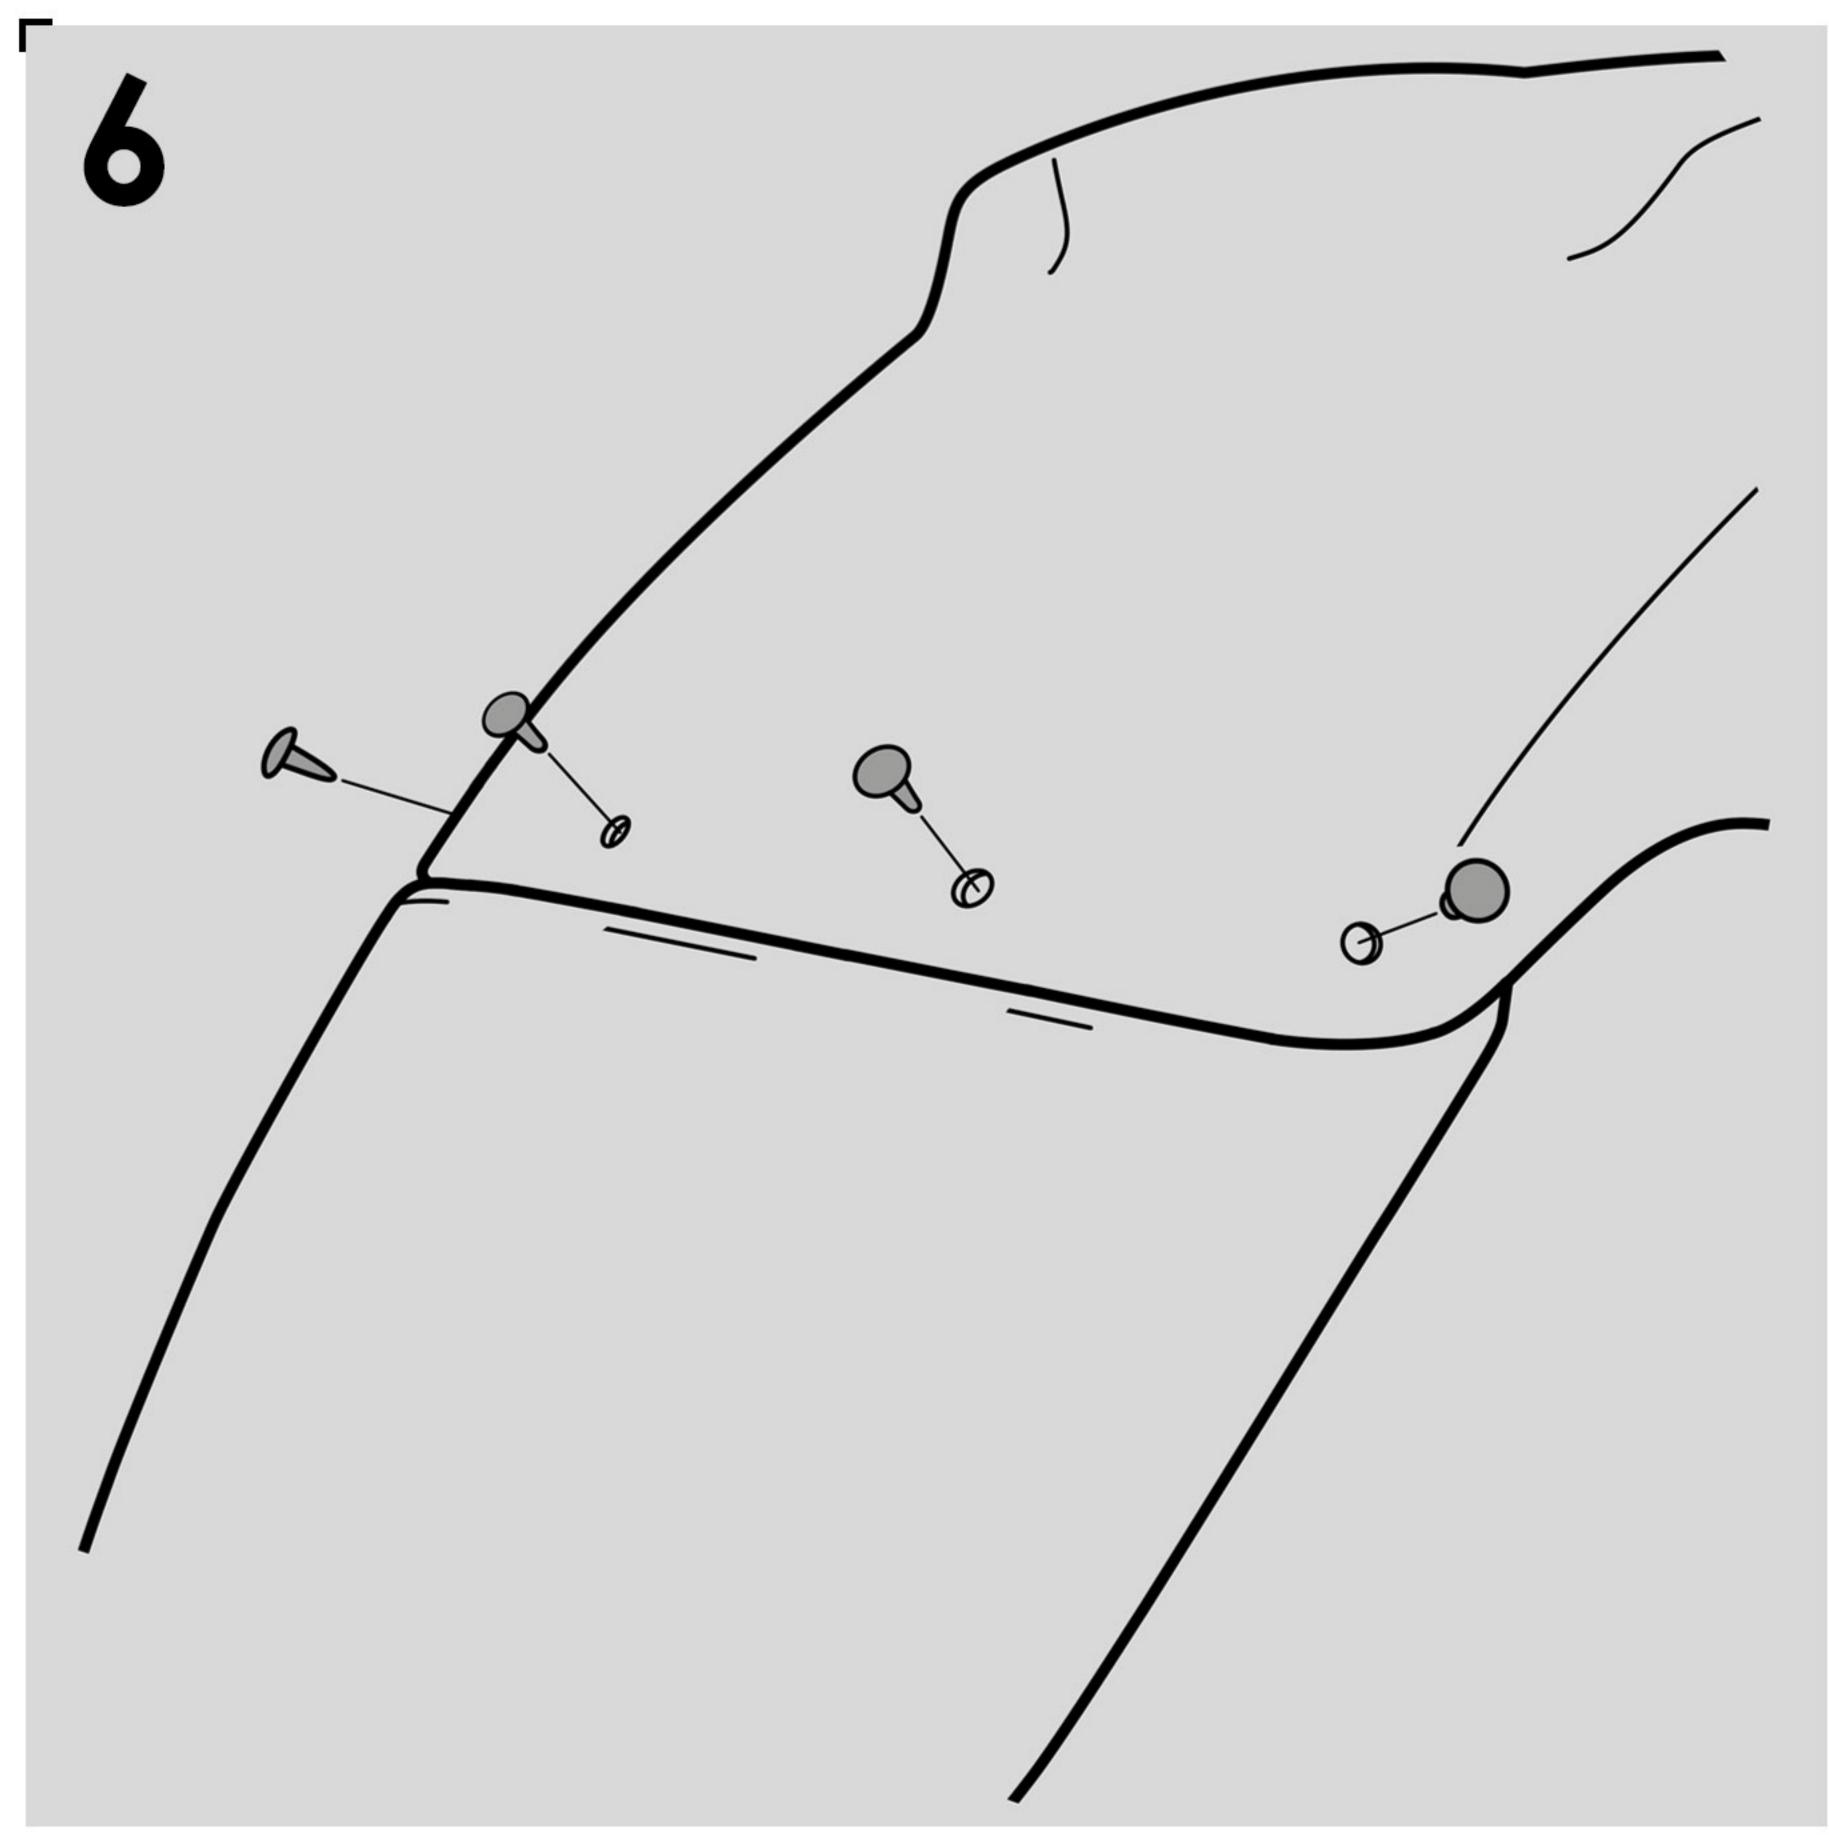

Fit Push-Rivets provided and re-fit mudguard to bike.

Visit 'youtube.com/pyramidplastix' for our video tutorial on fitting a Push-Rivet Extenda Fenda/Hugger Extension


Alternatively you can contact us: sales@pyramid-plastics.co.uk +44 (0)1427 677990

www.pyramid-plastics.co.uk




Fitment method B


Stick-Fit | Extenda Fenda & Hugger Extension Fitting Instructions

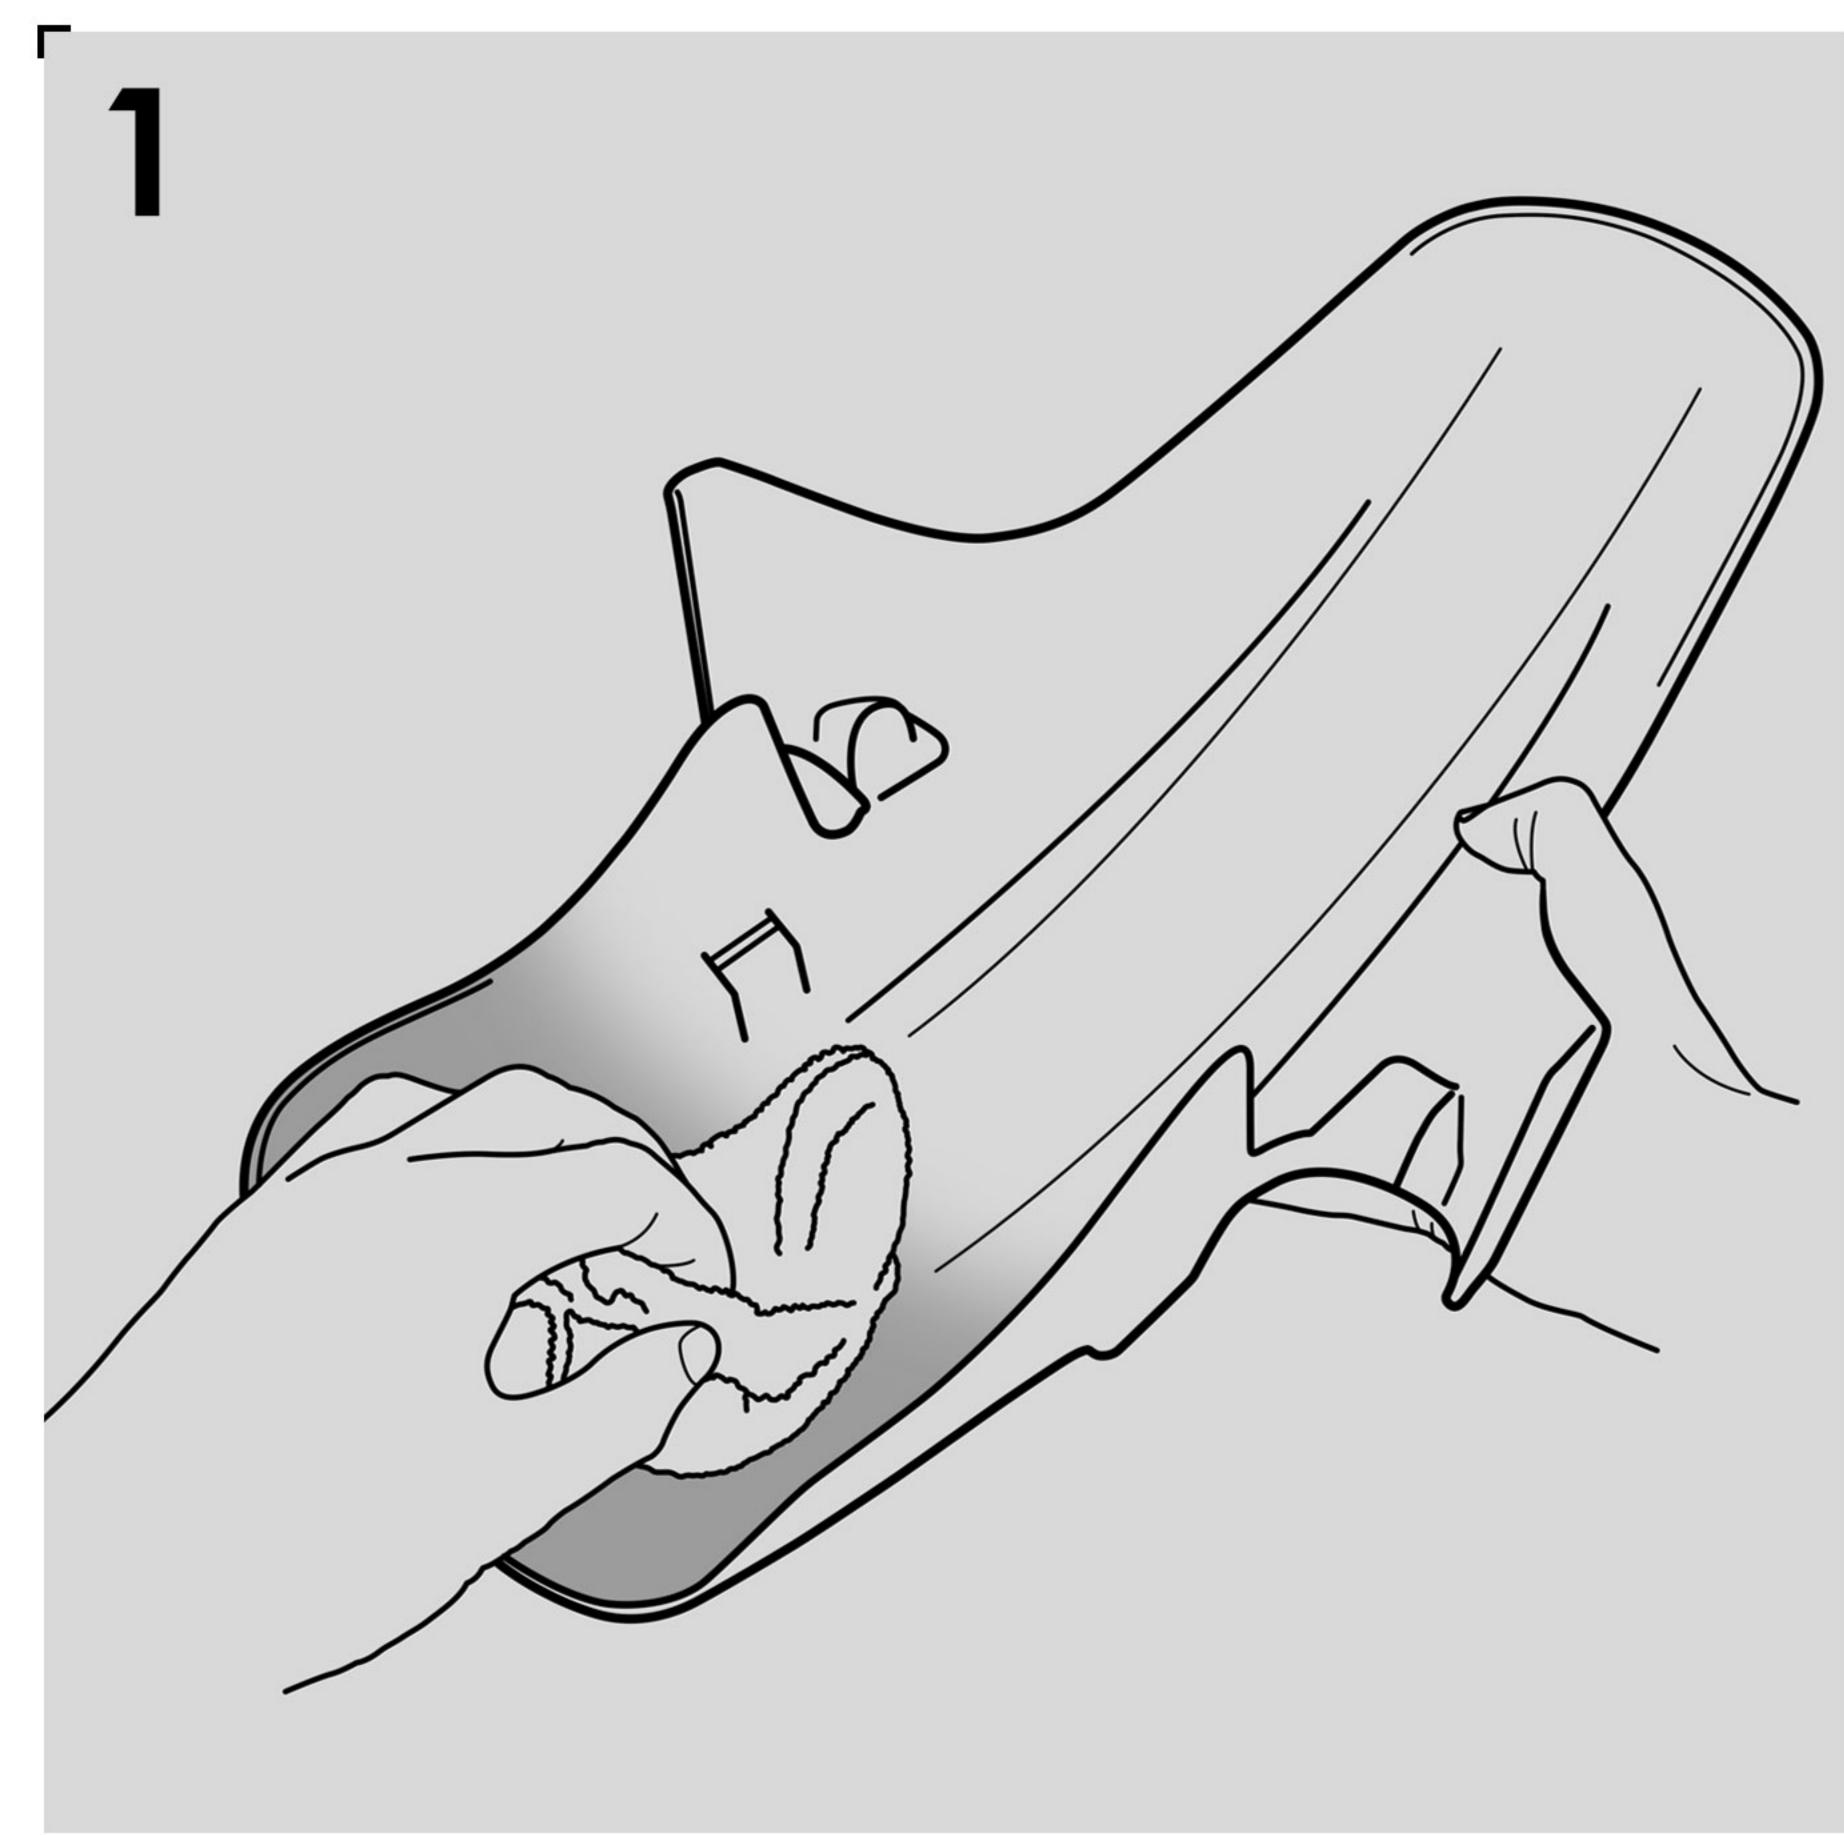


Remove mudguard from bike & clean inside.

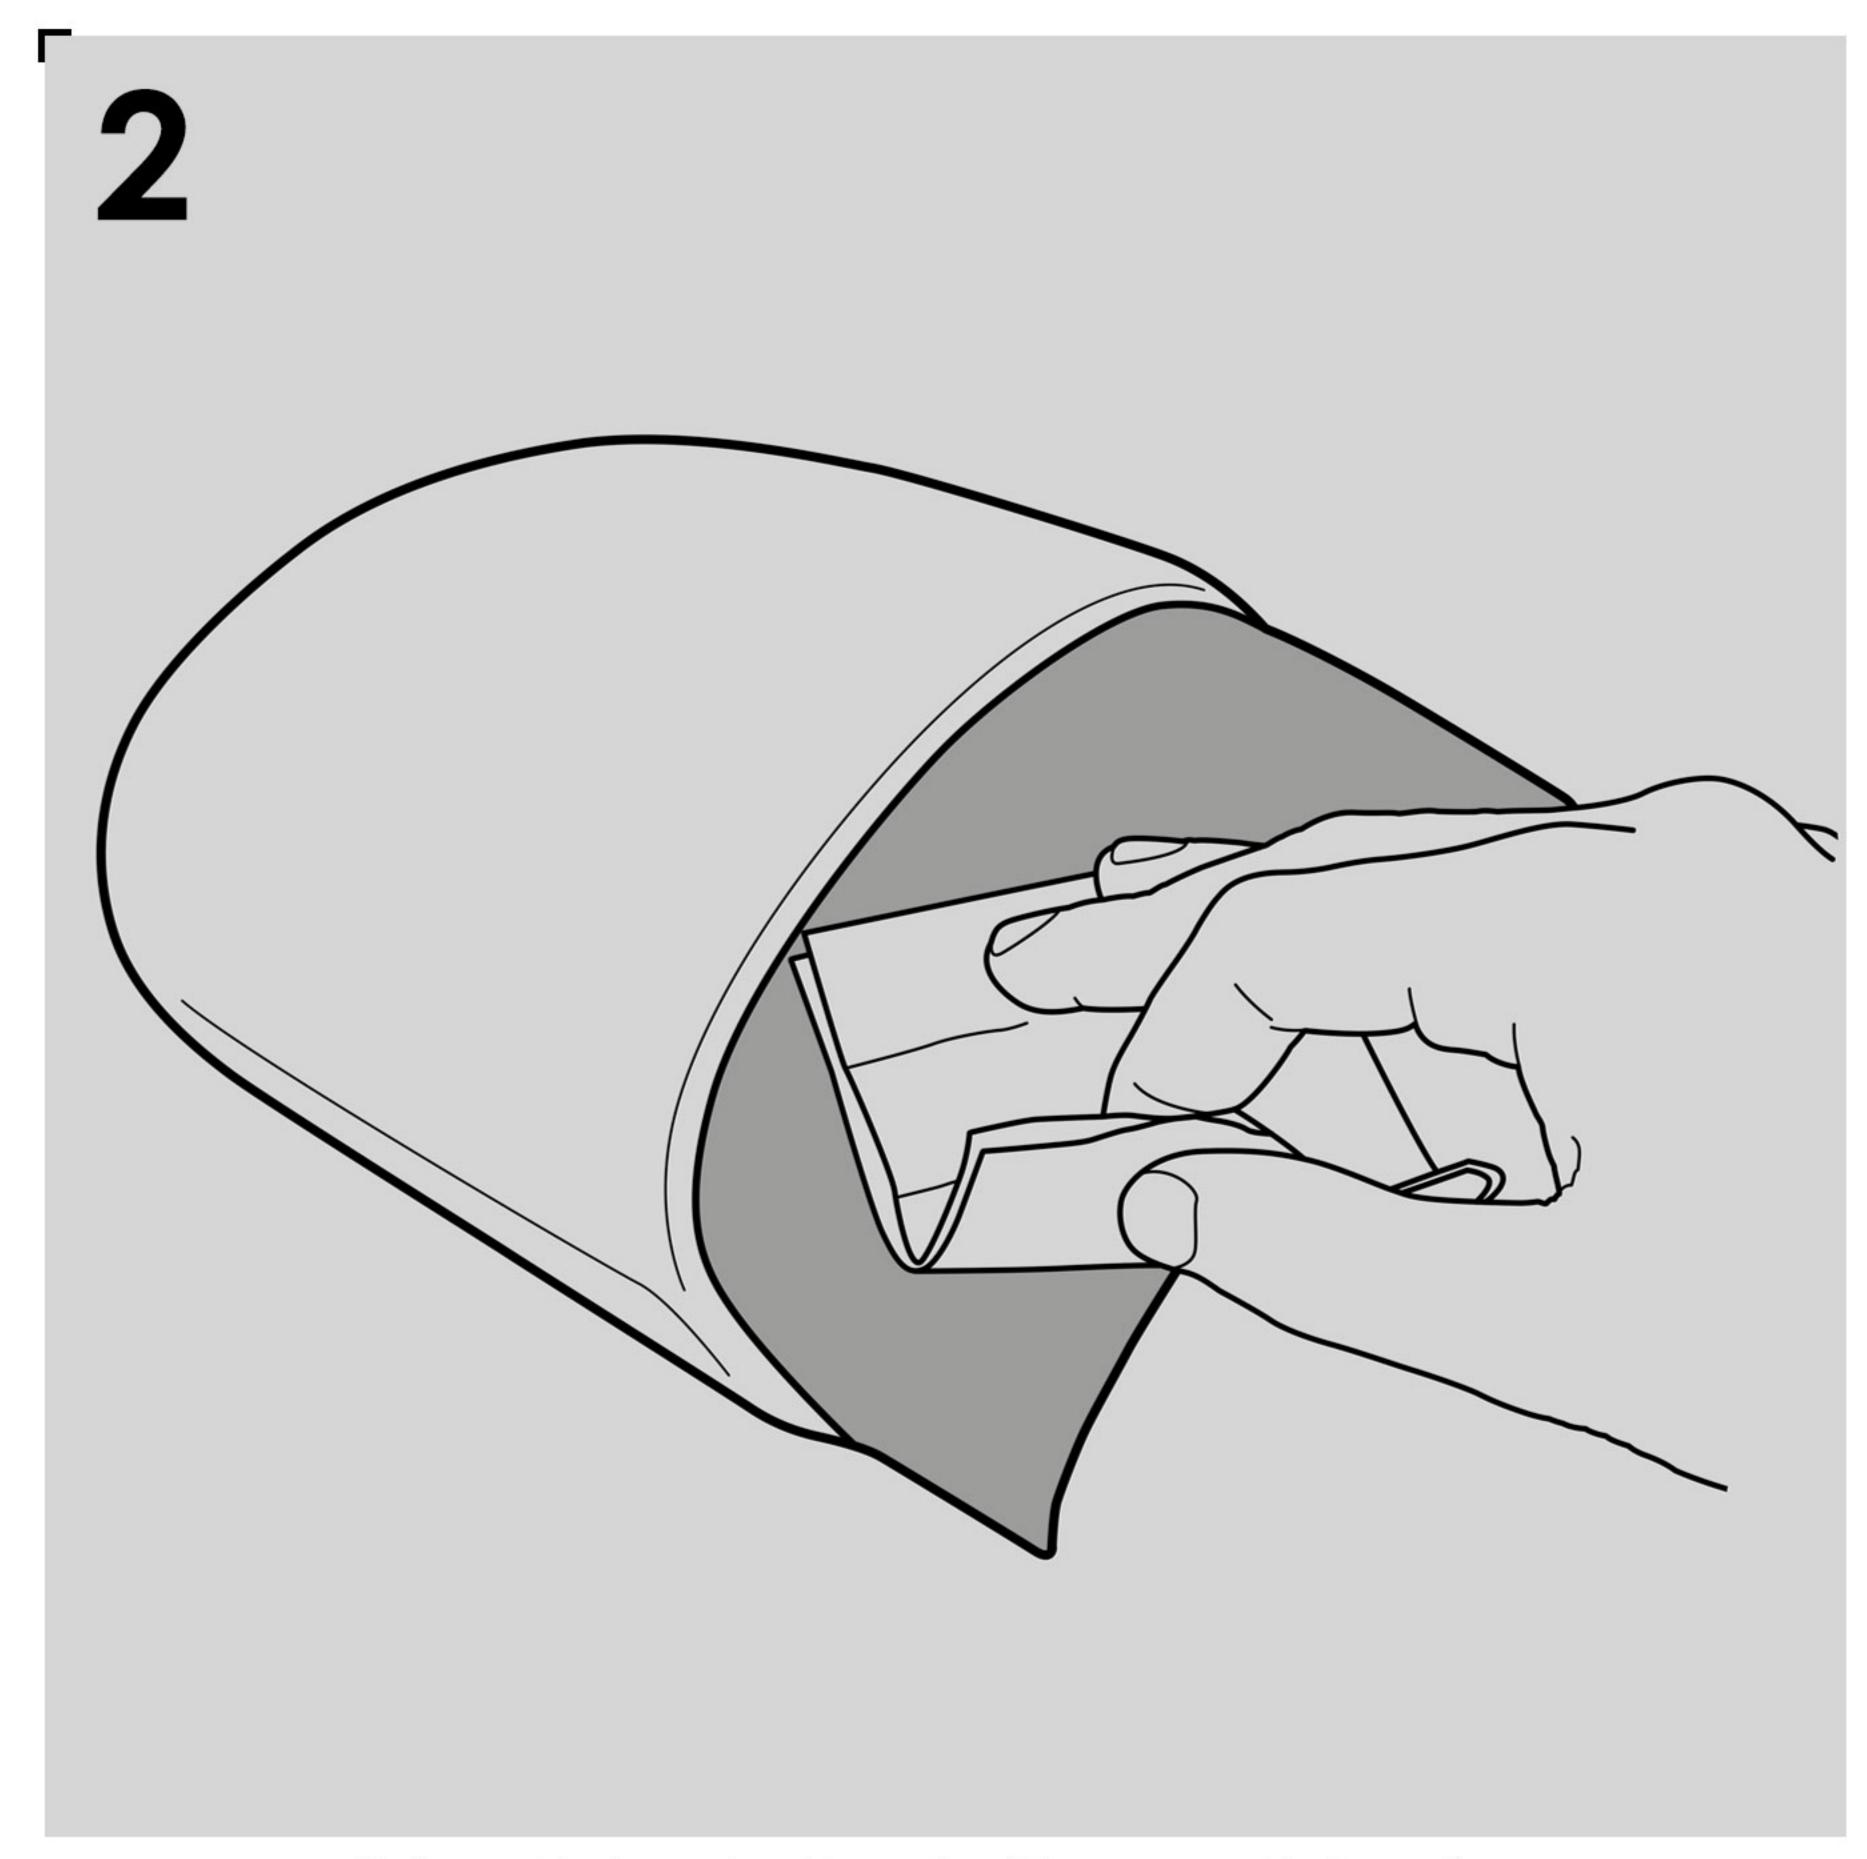


Prime Extenda Fenda/Hugger Extension in area shown with wipe supplied.

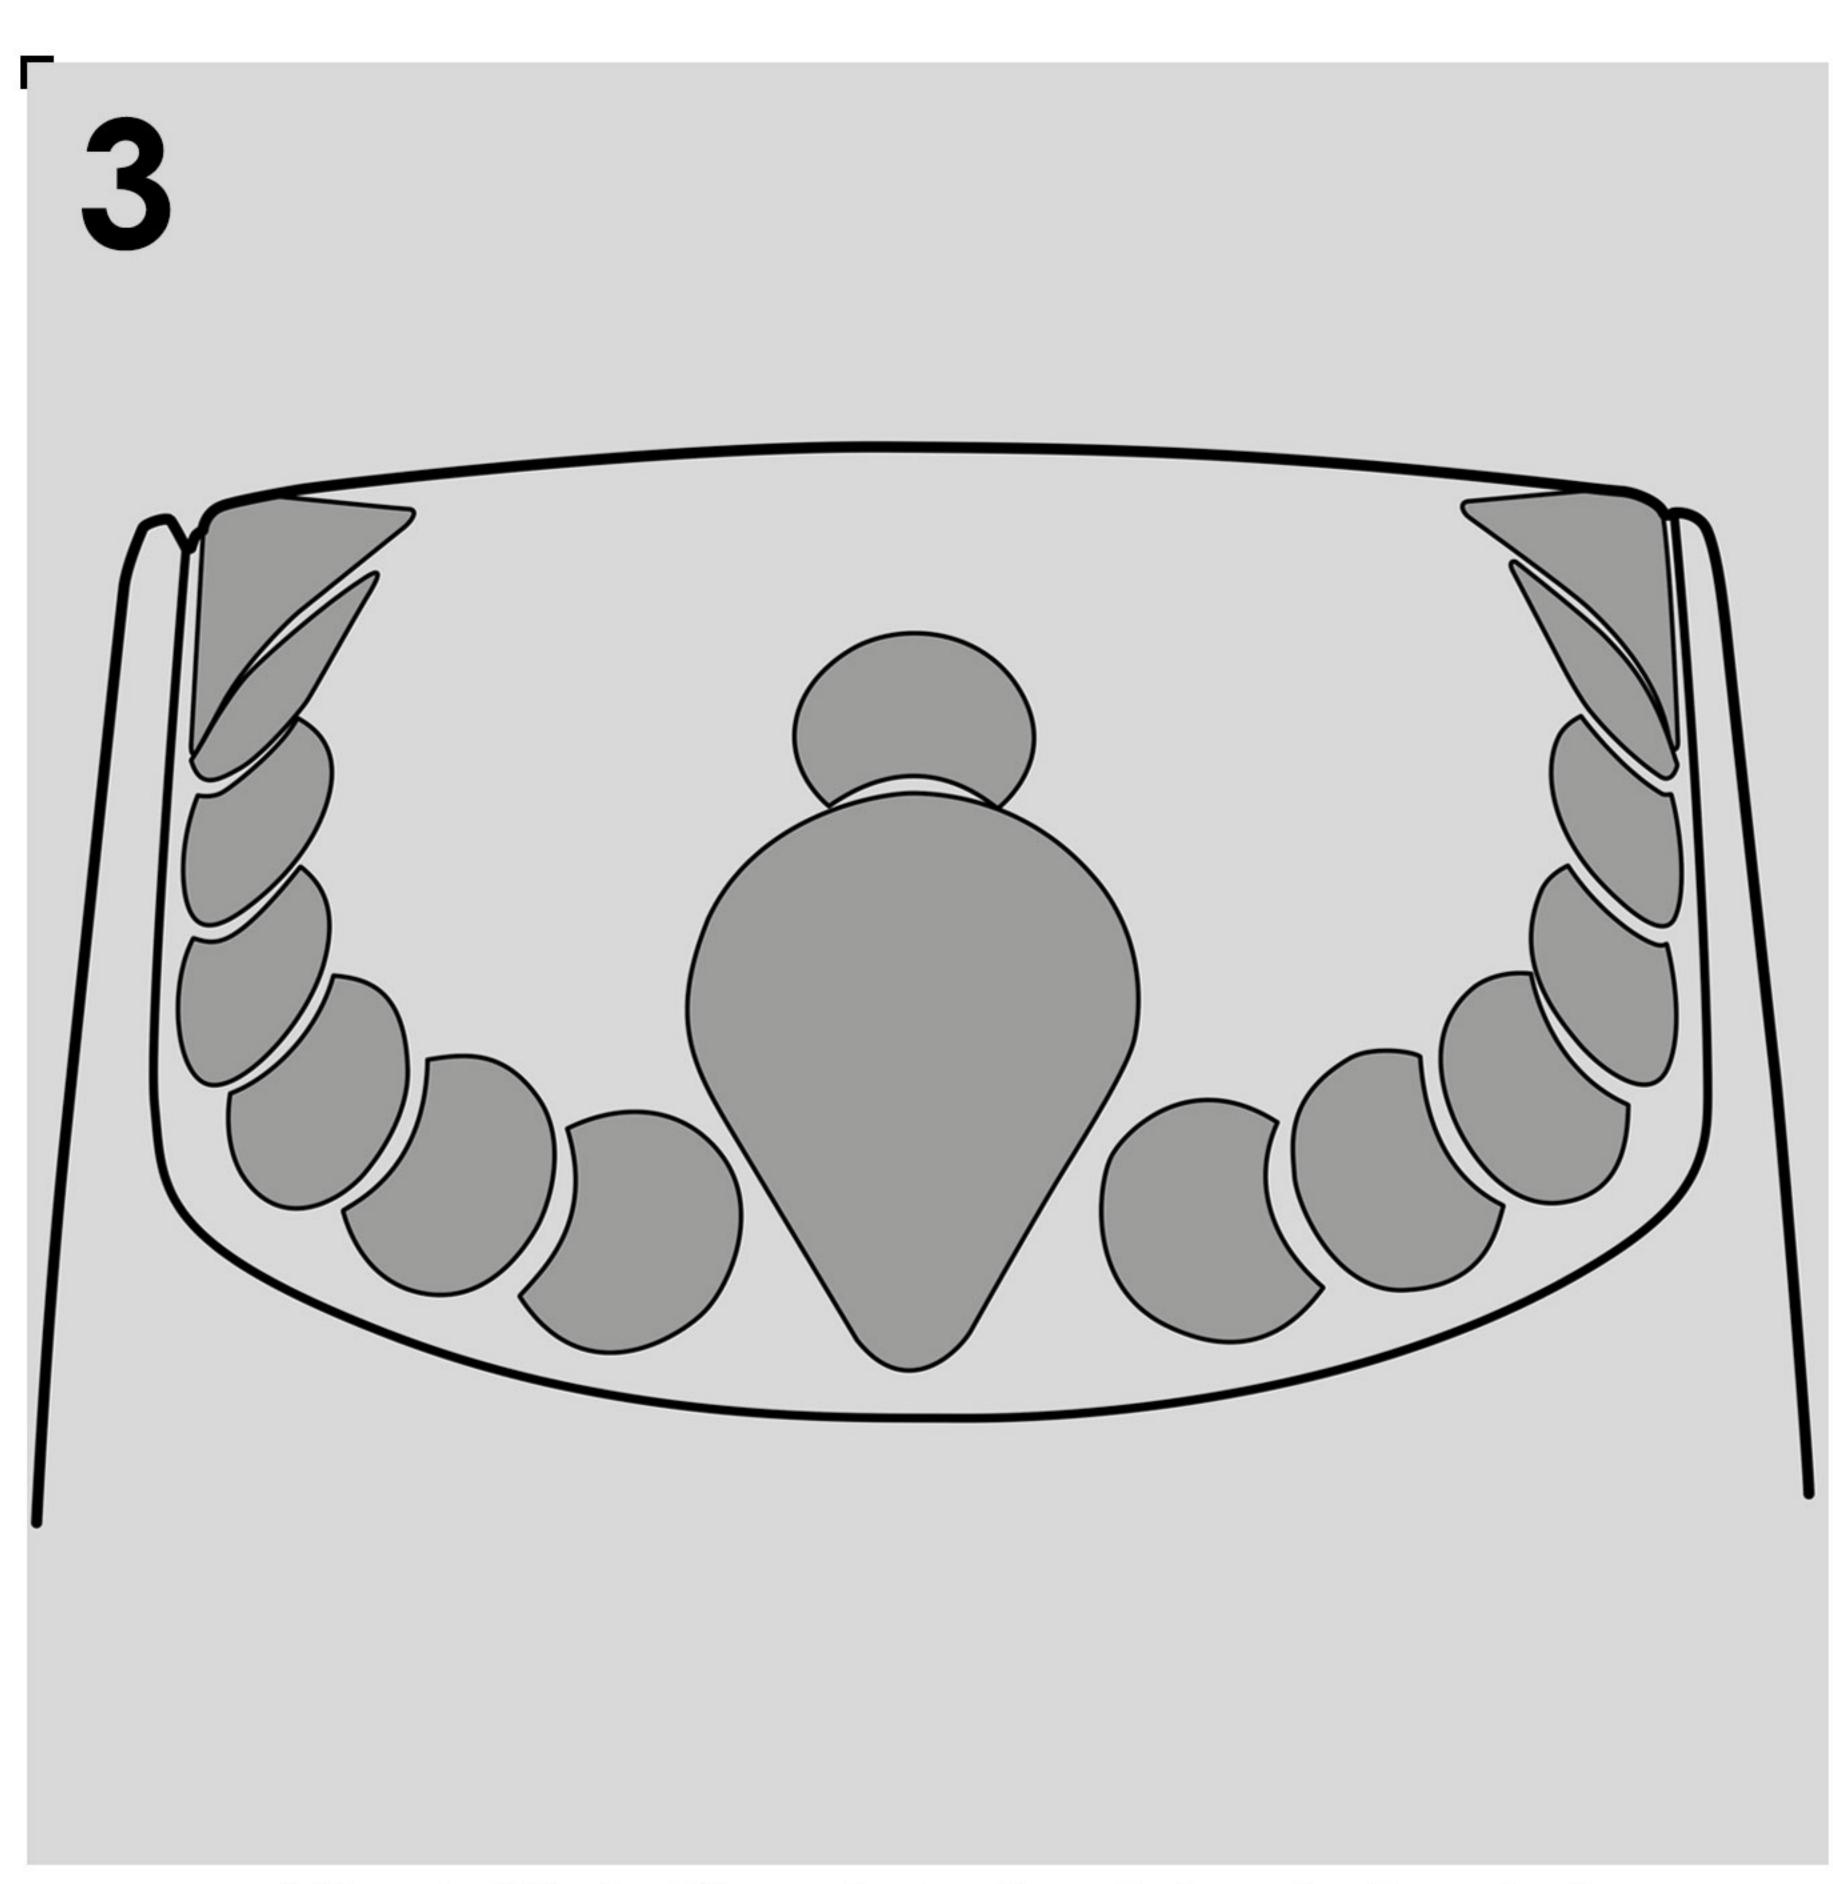

Attach Stick-Fit pads to the Extenda Fenda/ Hugger Extension using this diagram as a guide. Avoid recesses & corners in the moulding as this will effect the fit.

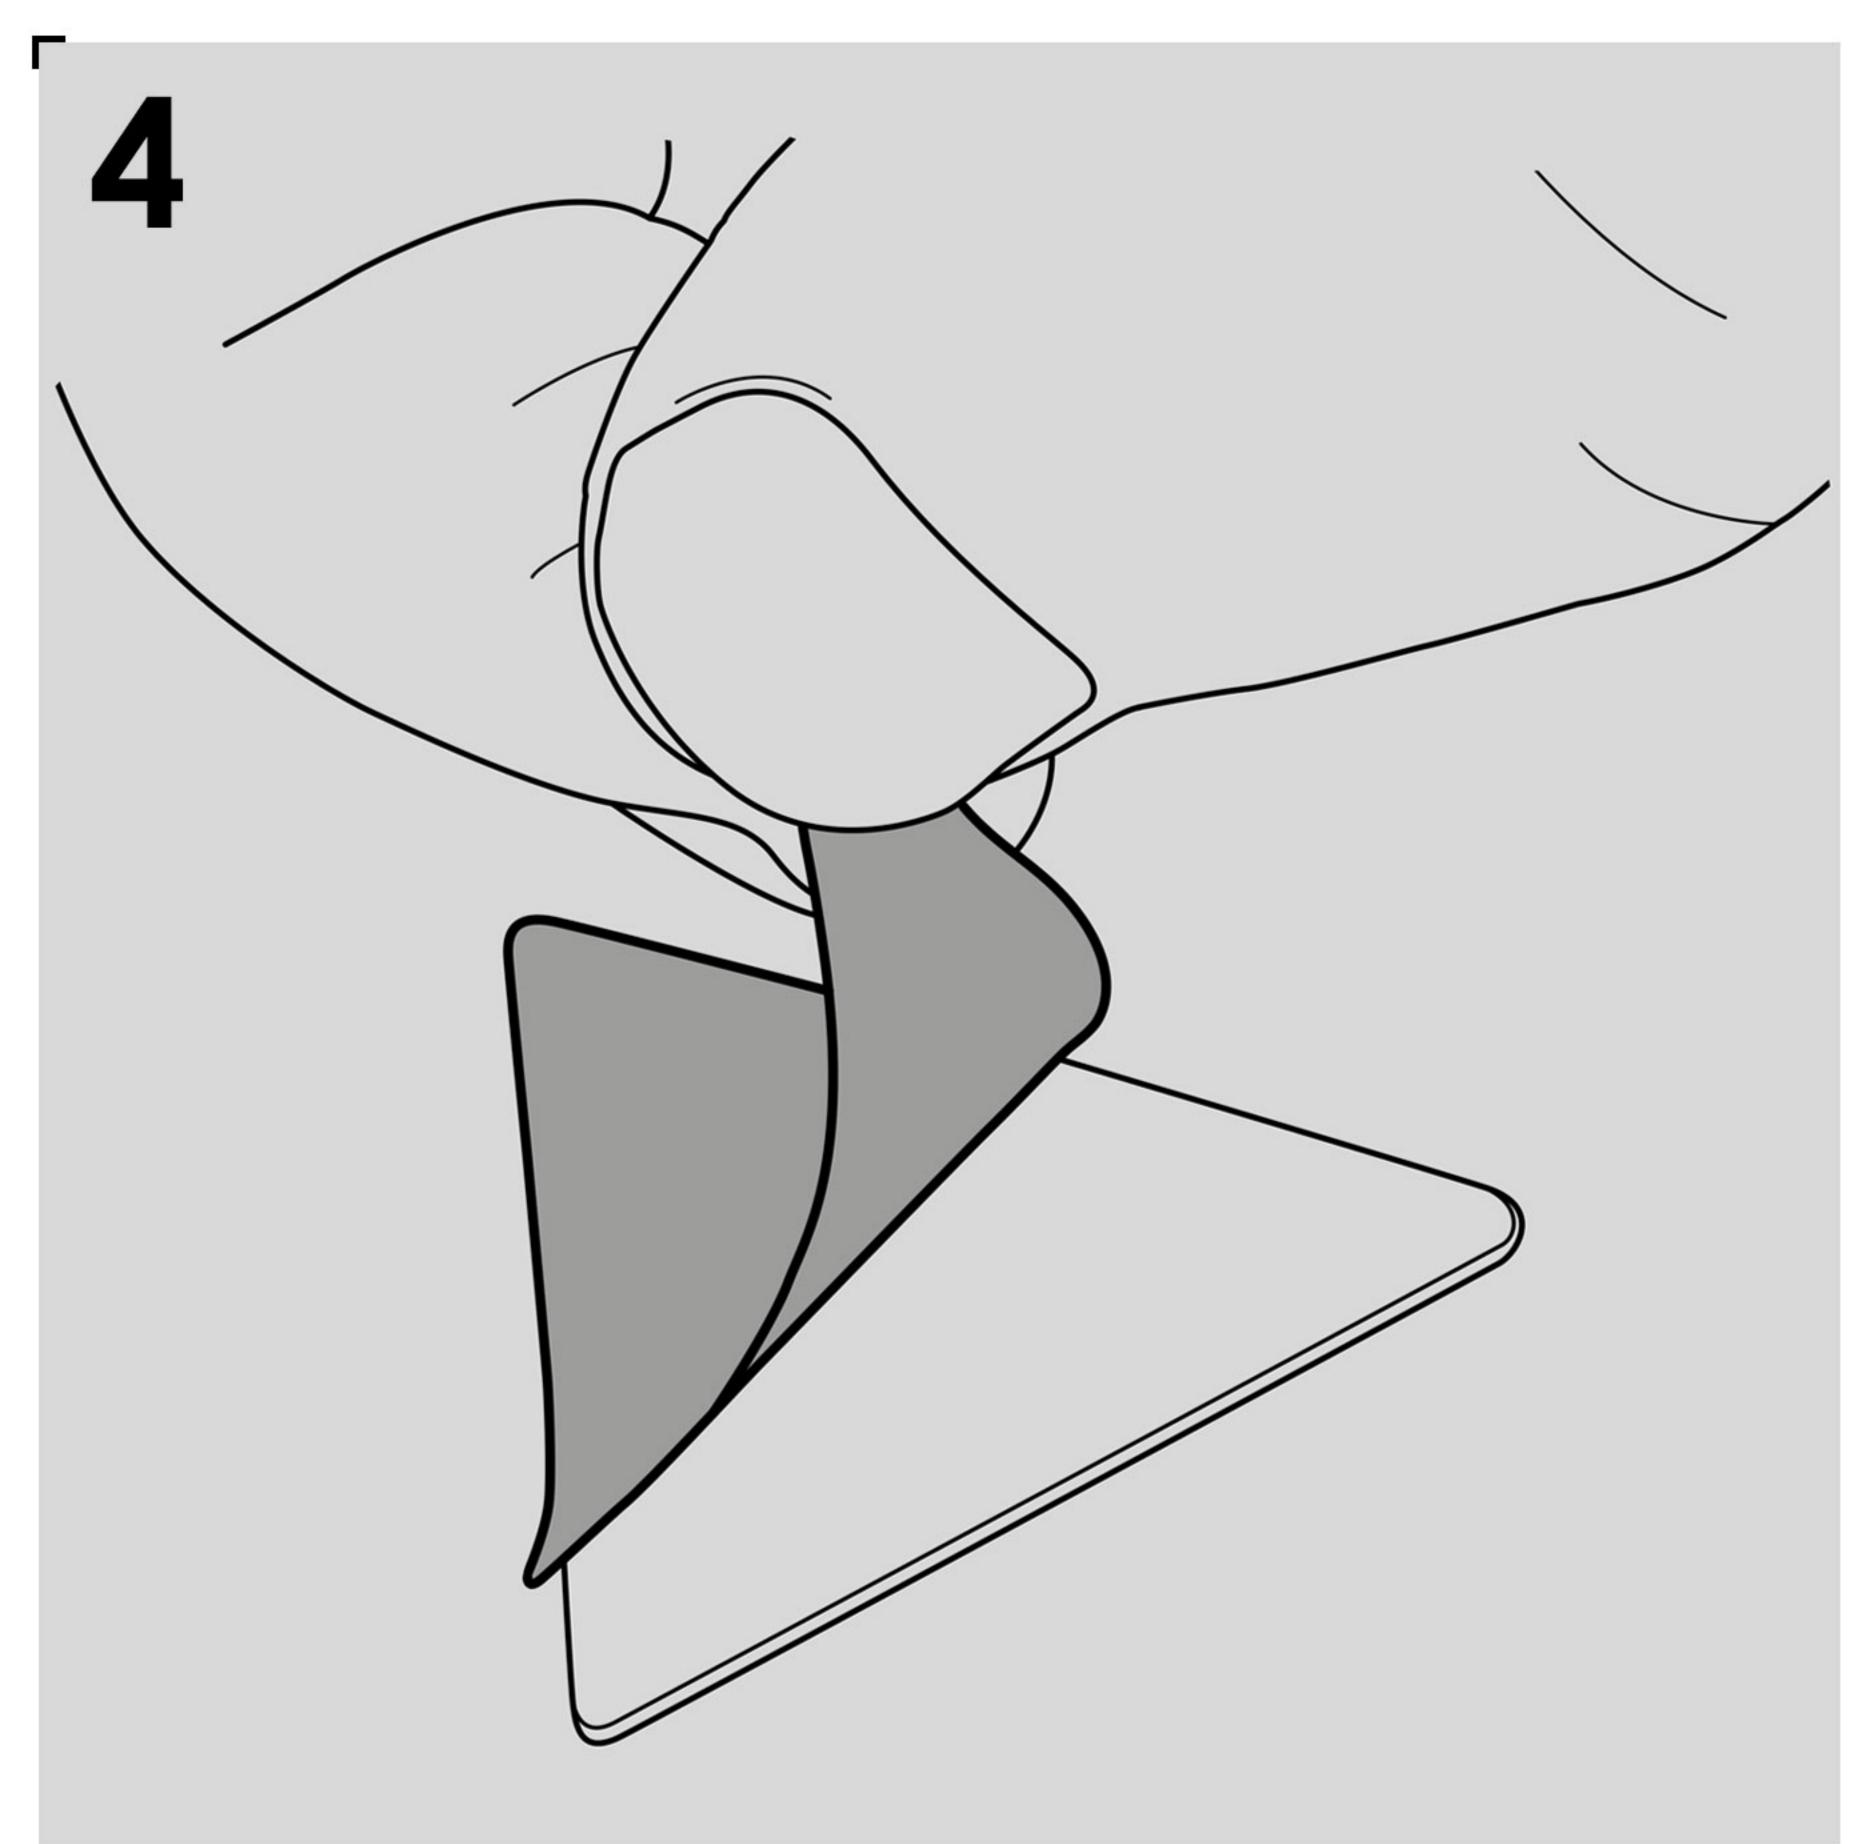


Peel backing paper from Stick-Fit pads.

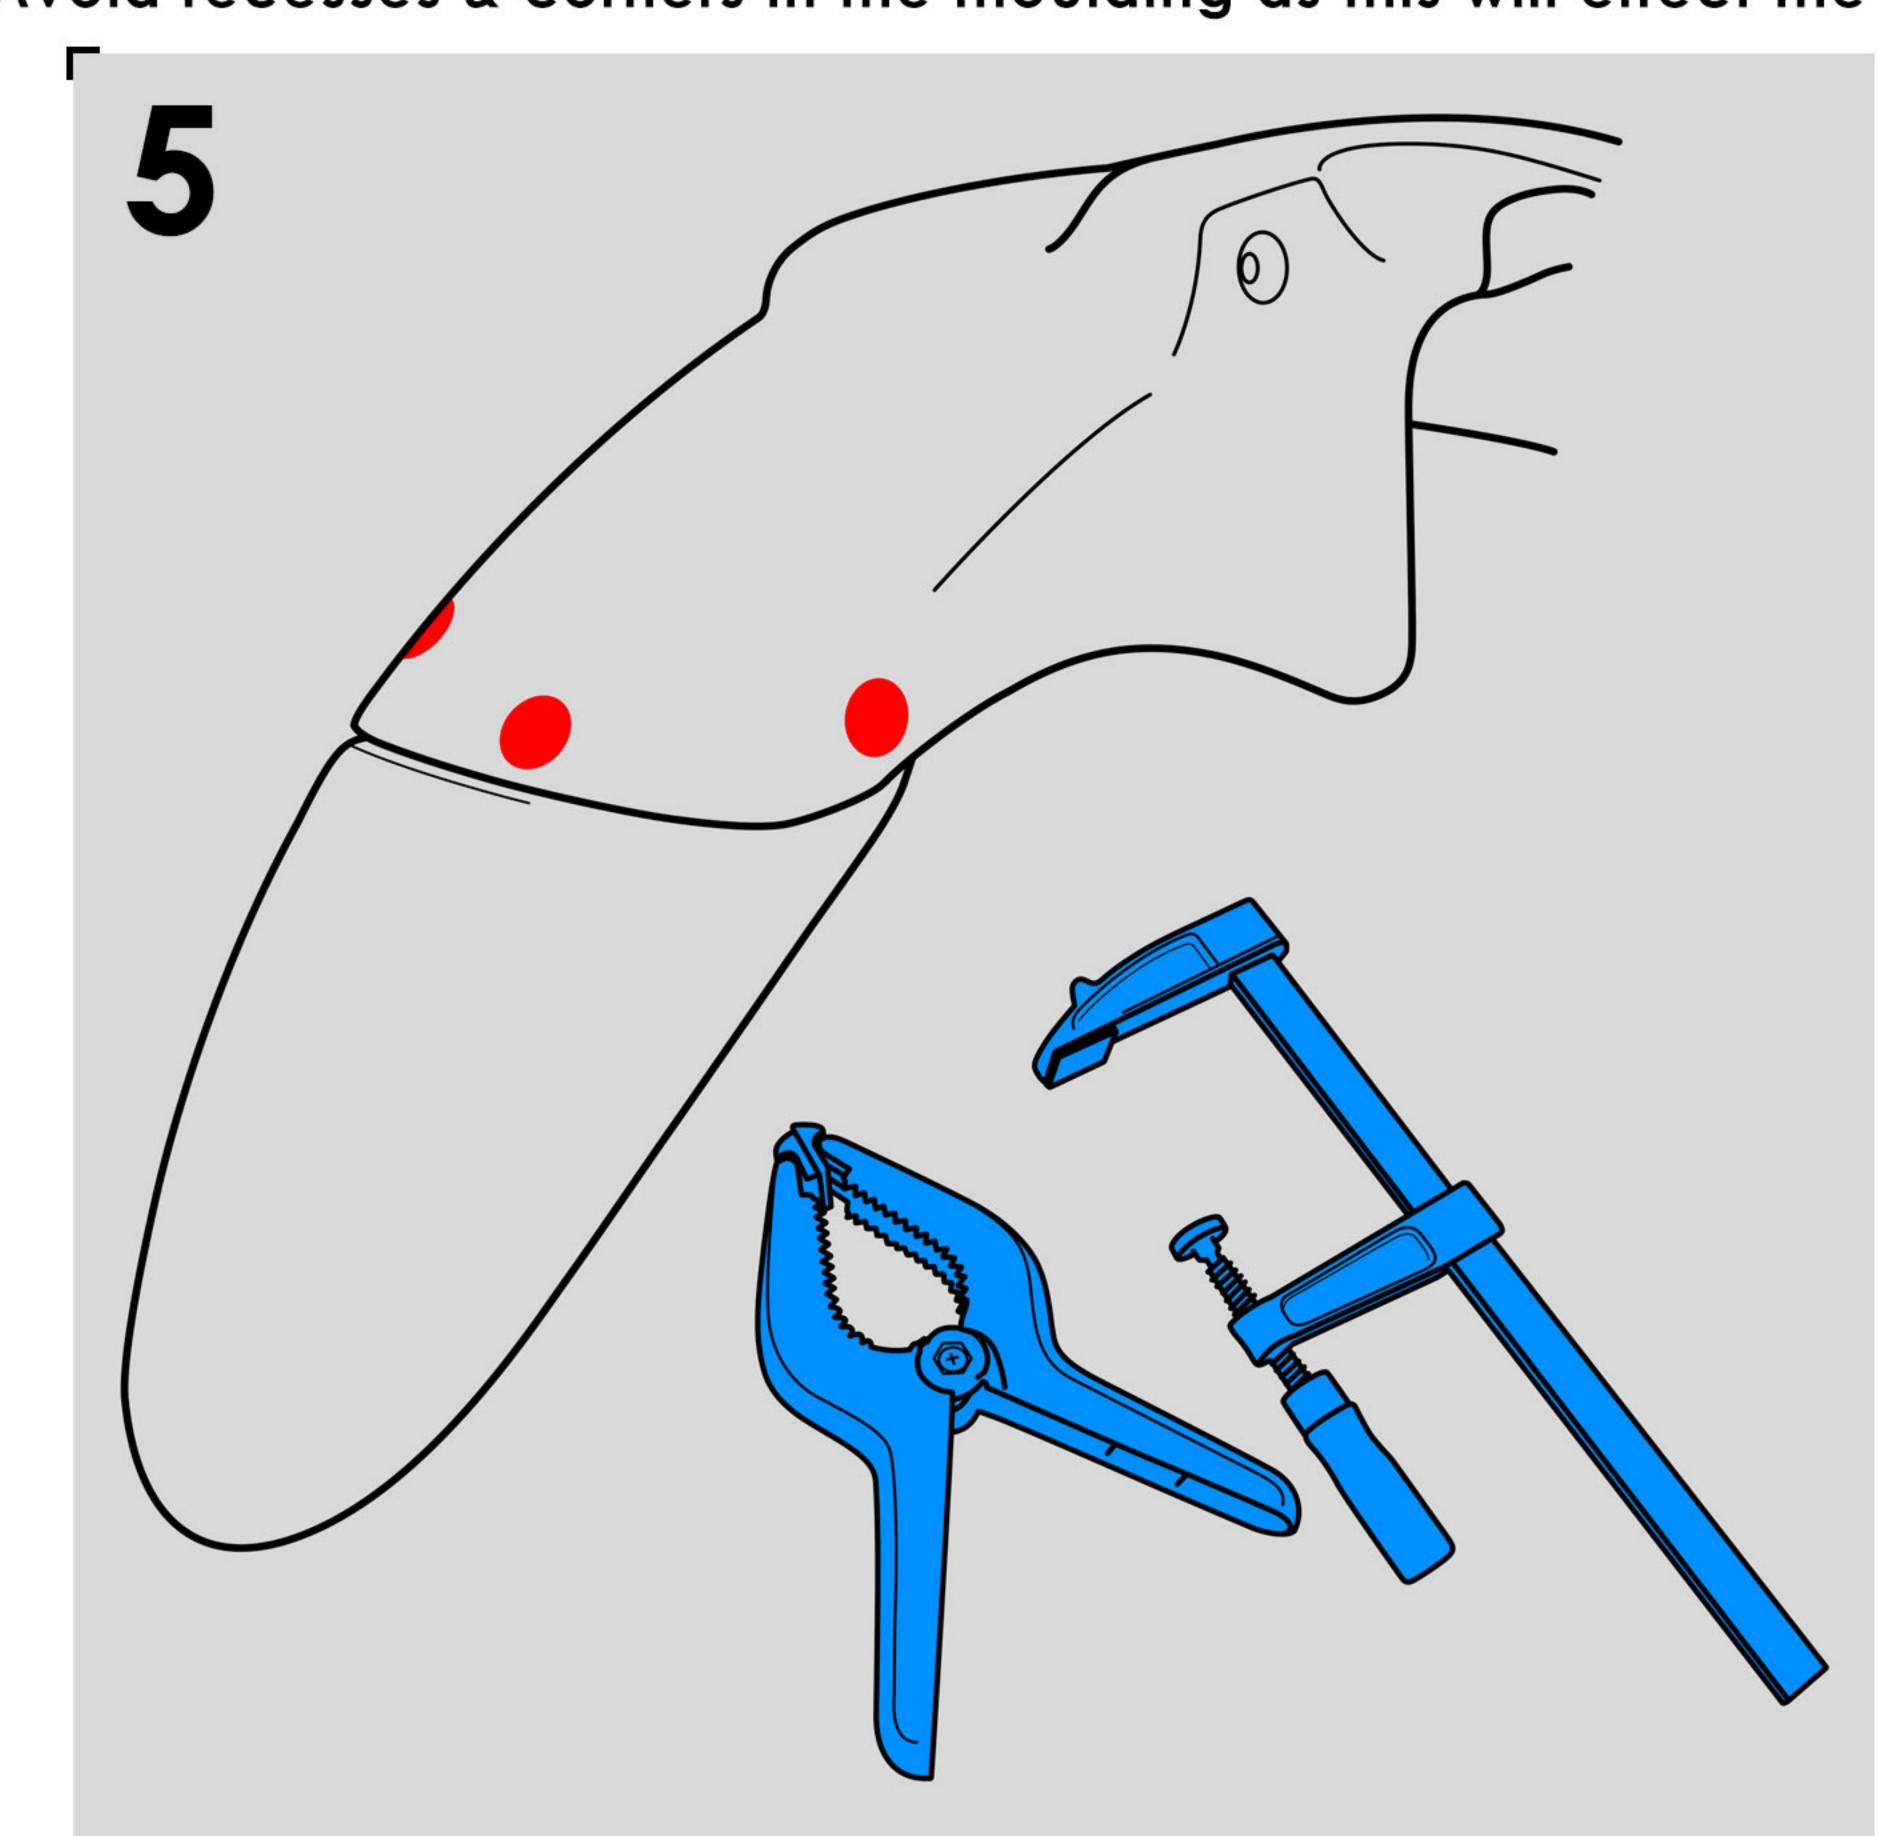

Fit Extenda Fenda/Hugger Extension and apply pressure evenly.

Pyramid suggest using clamps as shown in Blue.

(Appling pressure on the central and outer edges is crucial).

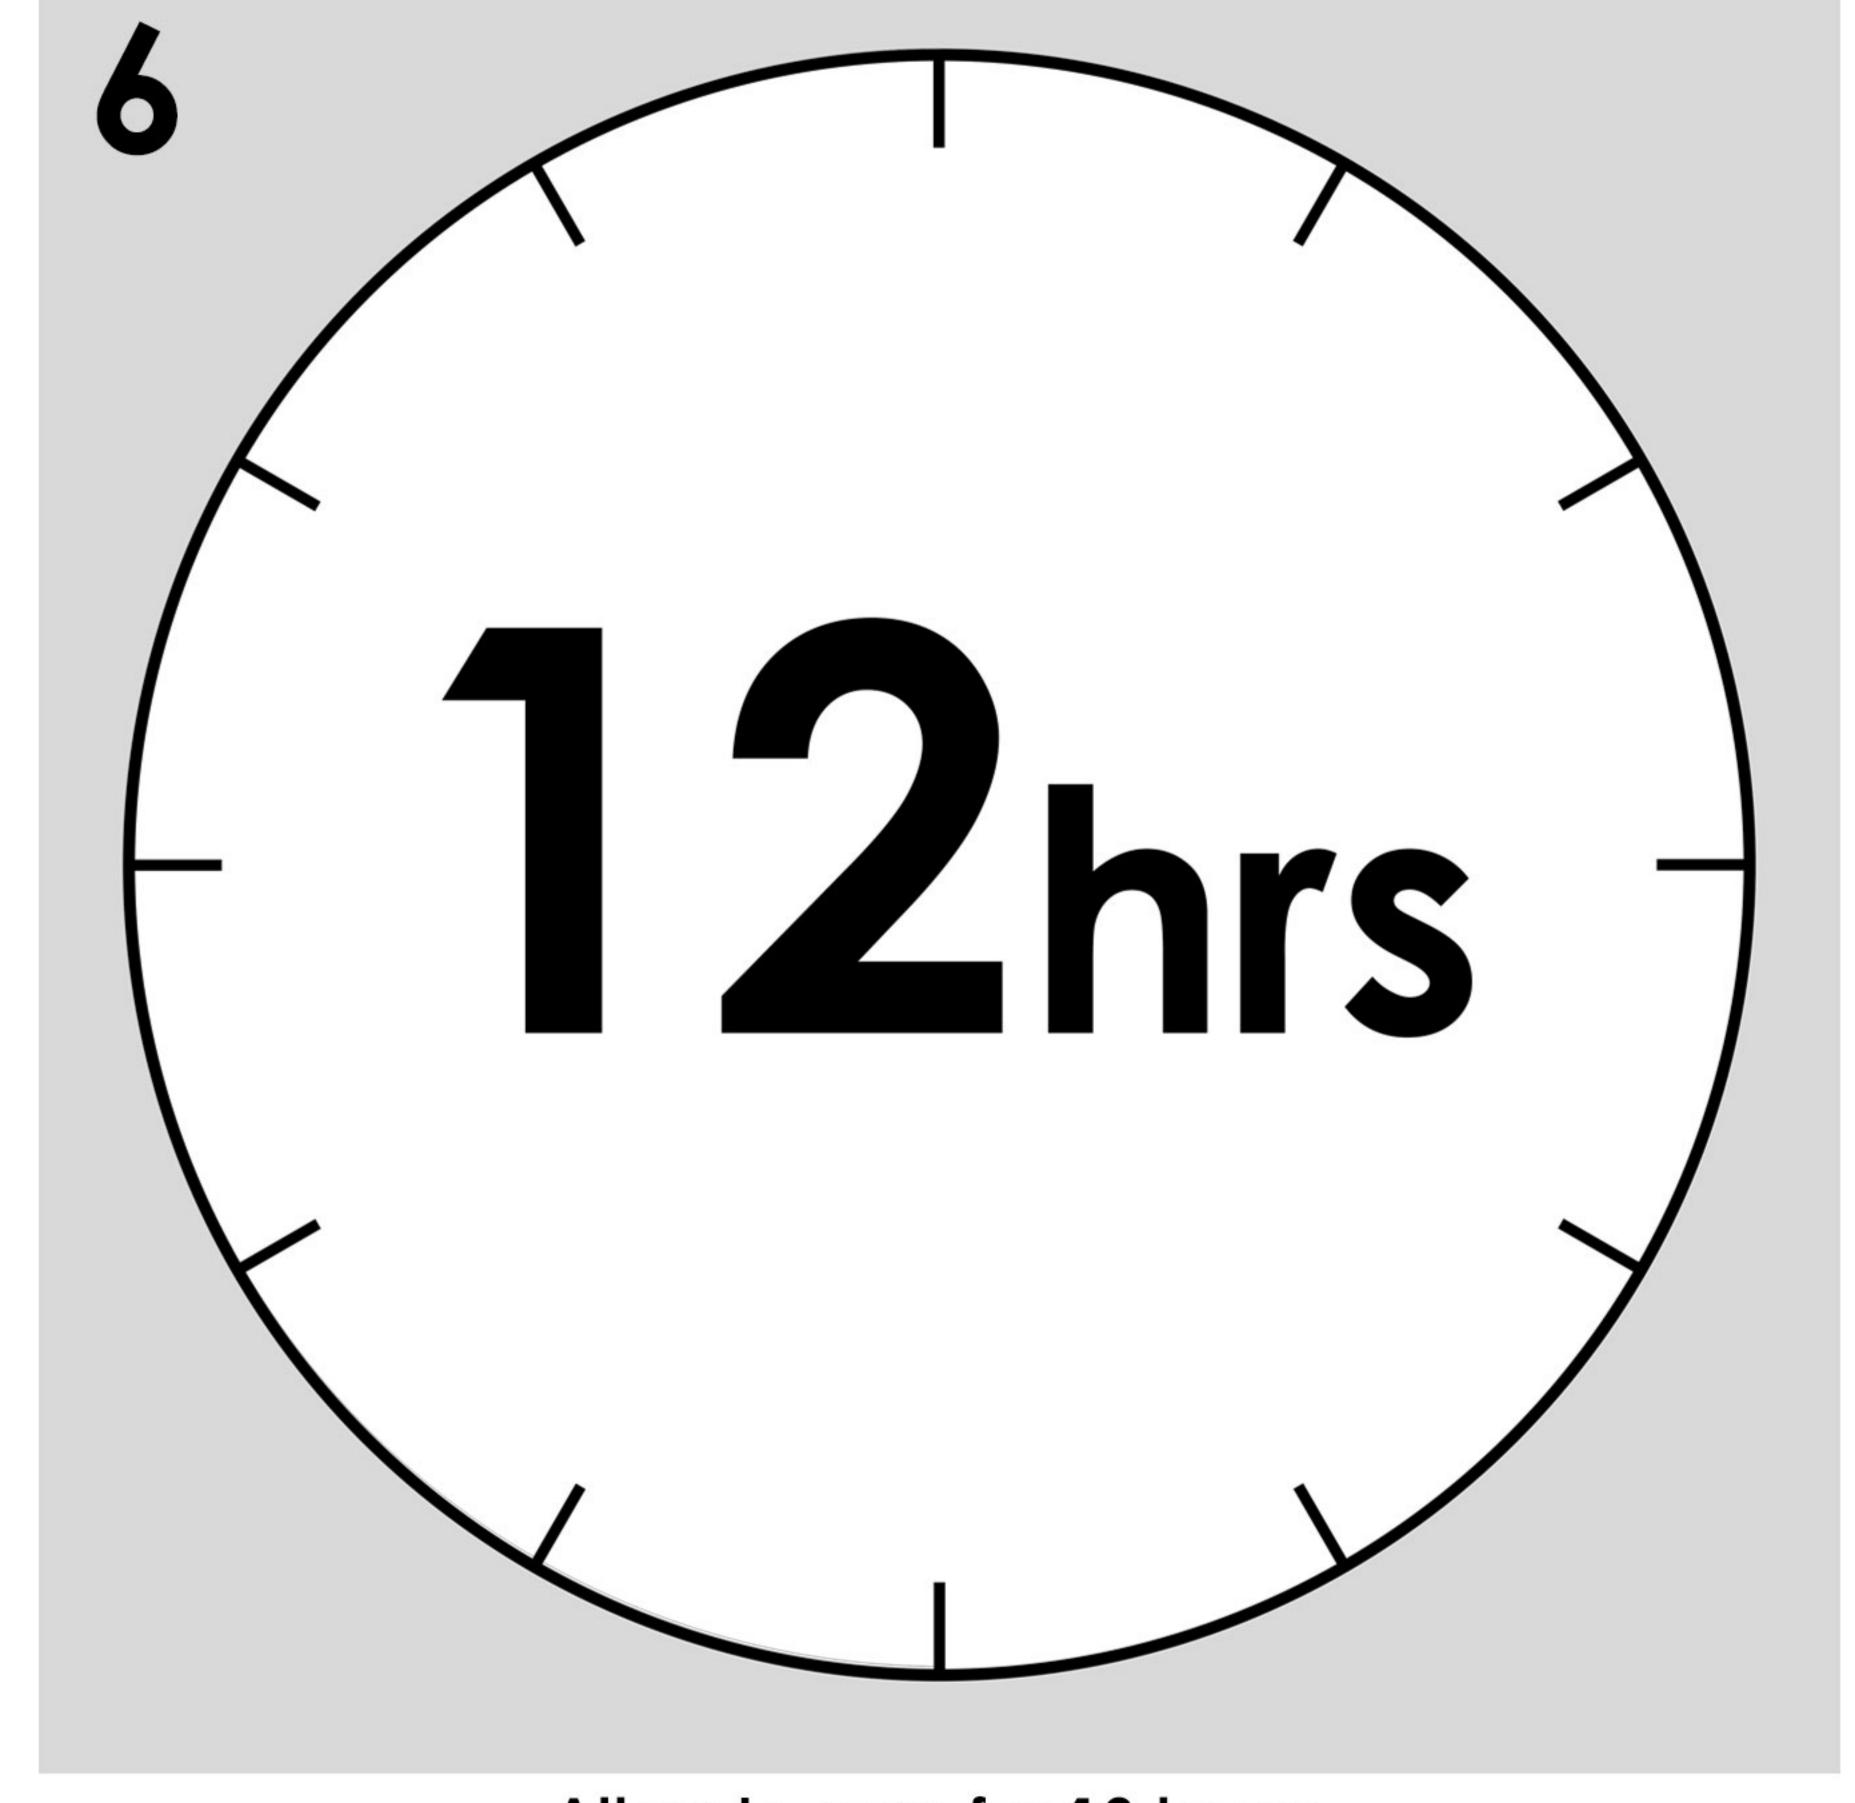

Allow to cure for 12 hours. Re-fit mudguard to bike.

Visit 'youtube.com/pyramidplastix' for our video tutorial on fitting a Stick-Fit Extenda Fenda/Hugger Extension

Alternatively you can contact us: sales@pyramid-plastics.co.uk +44 (0)1427 677990

www.pyramid-plastics.co.uk