

# PYRAMID

## 526600 Triumph Trident 660 Radiator Guard Fitting Instructions

### Kit Includes:

1X	C526600	Radiator Guard
4X	CFOA0001	Foam Strip 50mm
8X	CWAS0201	M6 Stainless Steel Washer

- Remove the radiator cheeks from the Trident 660 (shown in image below).
- The foam strips supplied can be used on the inside of the radiator guard to create a gasket between the radiator and the radiator guard.
- Position the radiator guard on the bike and use the OEM bolts and stainless washers provided (2 under the radiator guard at each mounting point).

Check fixings periodically.

### Any questions?


[sales@pyramid-plastics.co.uk](mailto:sales@pyramid-plastics.co.uk)

+44 (0)1427 677990

[www.pyramid-plastics.co.uk](http://www.pyramid-plastics.co.uk)



Follow us on social media and feel free to leave us a review!

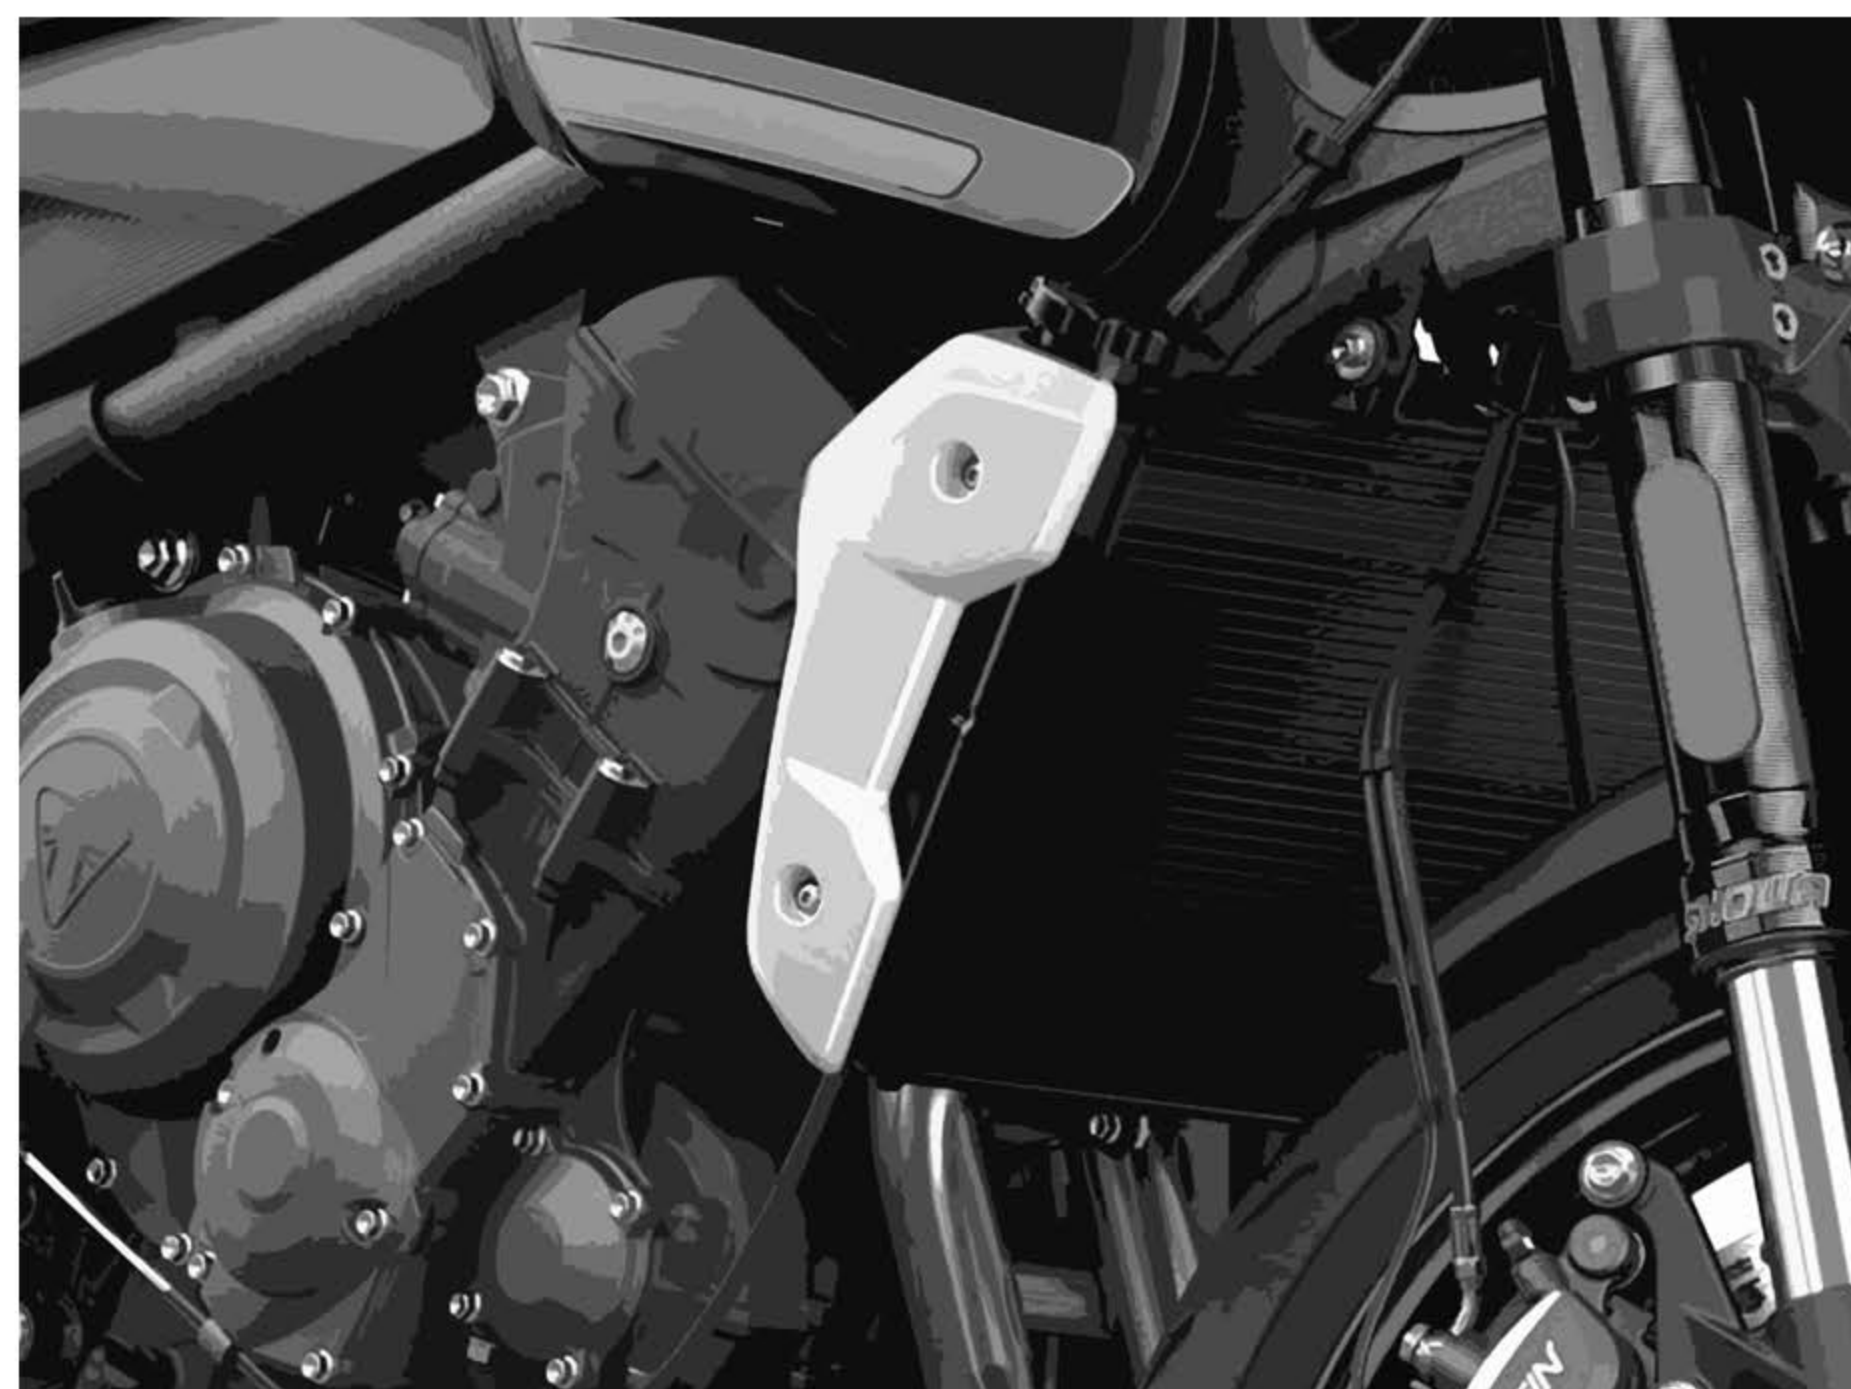

# PYRAMID

## 526600 Triumph Trident 660 Radiator Guard Fitting Instructions

### Kit Includes:

1X	C526600	Radiator Guard
4X	CFOA0001	Foam Strip 50mm
8X	CWAS0201	M6 Stainless Steel Washer

- Remove the radiator cheeks from the Trident 660 (shown in image below).
- The foam strips supplied can be used on the inside of the radiator guard to create a gasket between the radiator and the radiator guard.
- Position the radiator guard on the bike and use the OEM bolts and stainless washers provided (2 under the radiator guard at each mounting point).

Check fixings periodically.

### Any questions?

[sales@pyramid-plastics.co.uk](mailto:sales@pyramid-plastics.co.uk)

+44 (0)1427 677990

[www.pyramid-plastics.co.uk](http://www.pyramid-plastics.co.uk)



Follow us on social media and feel free to leave us a review!

