

26660 Triumph Trident 660 Fly Screen Instructions

Kit Includes:

| | | |
|----|------------|--|
| 1X | C26660 | Fairing |
| 2X | CFK26660 | Brackets (Left and Right) |
| 1X | SMOT*** | Screen Kit (1X Light Smoke Screen, 3X Well Nuts, M5 X 16mm Bolts, Washers + Bolt Caps) |
| 2X | CBOL0305 | M8 X 40mm Bolt |
| 2X | CSPAM80001 | M8 Spacer |
| 4X | CNUT0156 | M5 Well Nut |
| 4X | CBOL0106 | M5 X 12mm Bolt |
| 4X | CWAS0100 | M5 Washer |
| 1X | CBRA08660B | Trident Logo Decal White |
| 1X | CBRA08660C | Trident Logo Decal Black |

- Attach the fairing to the screen (Fig 1).
- Attach the brackets (left and right) to the fairing (Fig 1).
- Remove the OEM yoke pinch bolts and fit the screen assembly using the M8 X 40mm Bolts + M8 Spacers supplied (Fig 2 shows how the brackets attach to the bike).
- Check all fixings periodically.

Fig 1


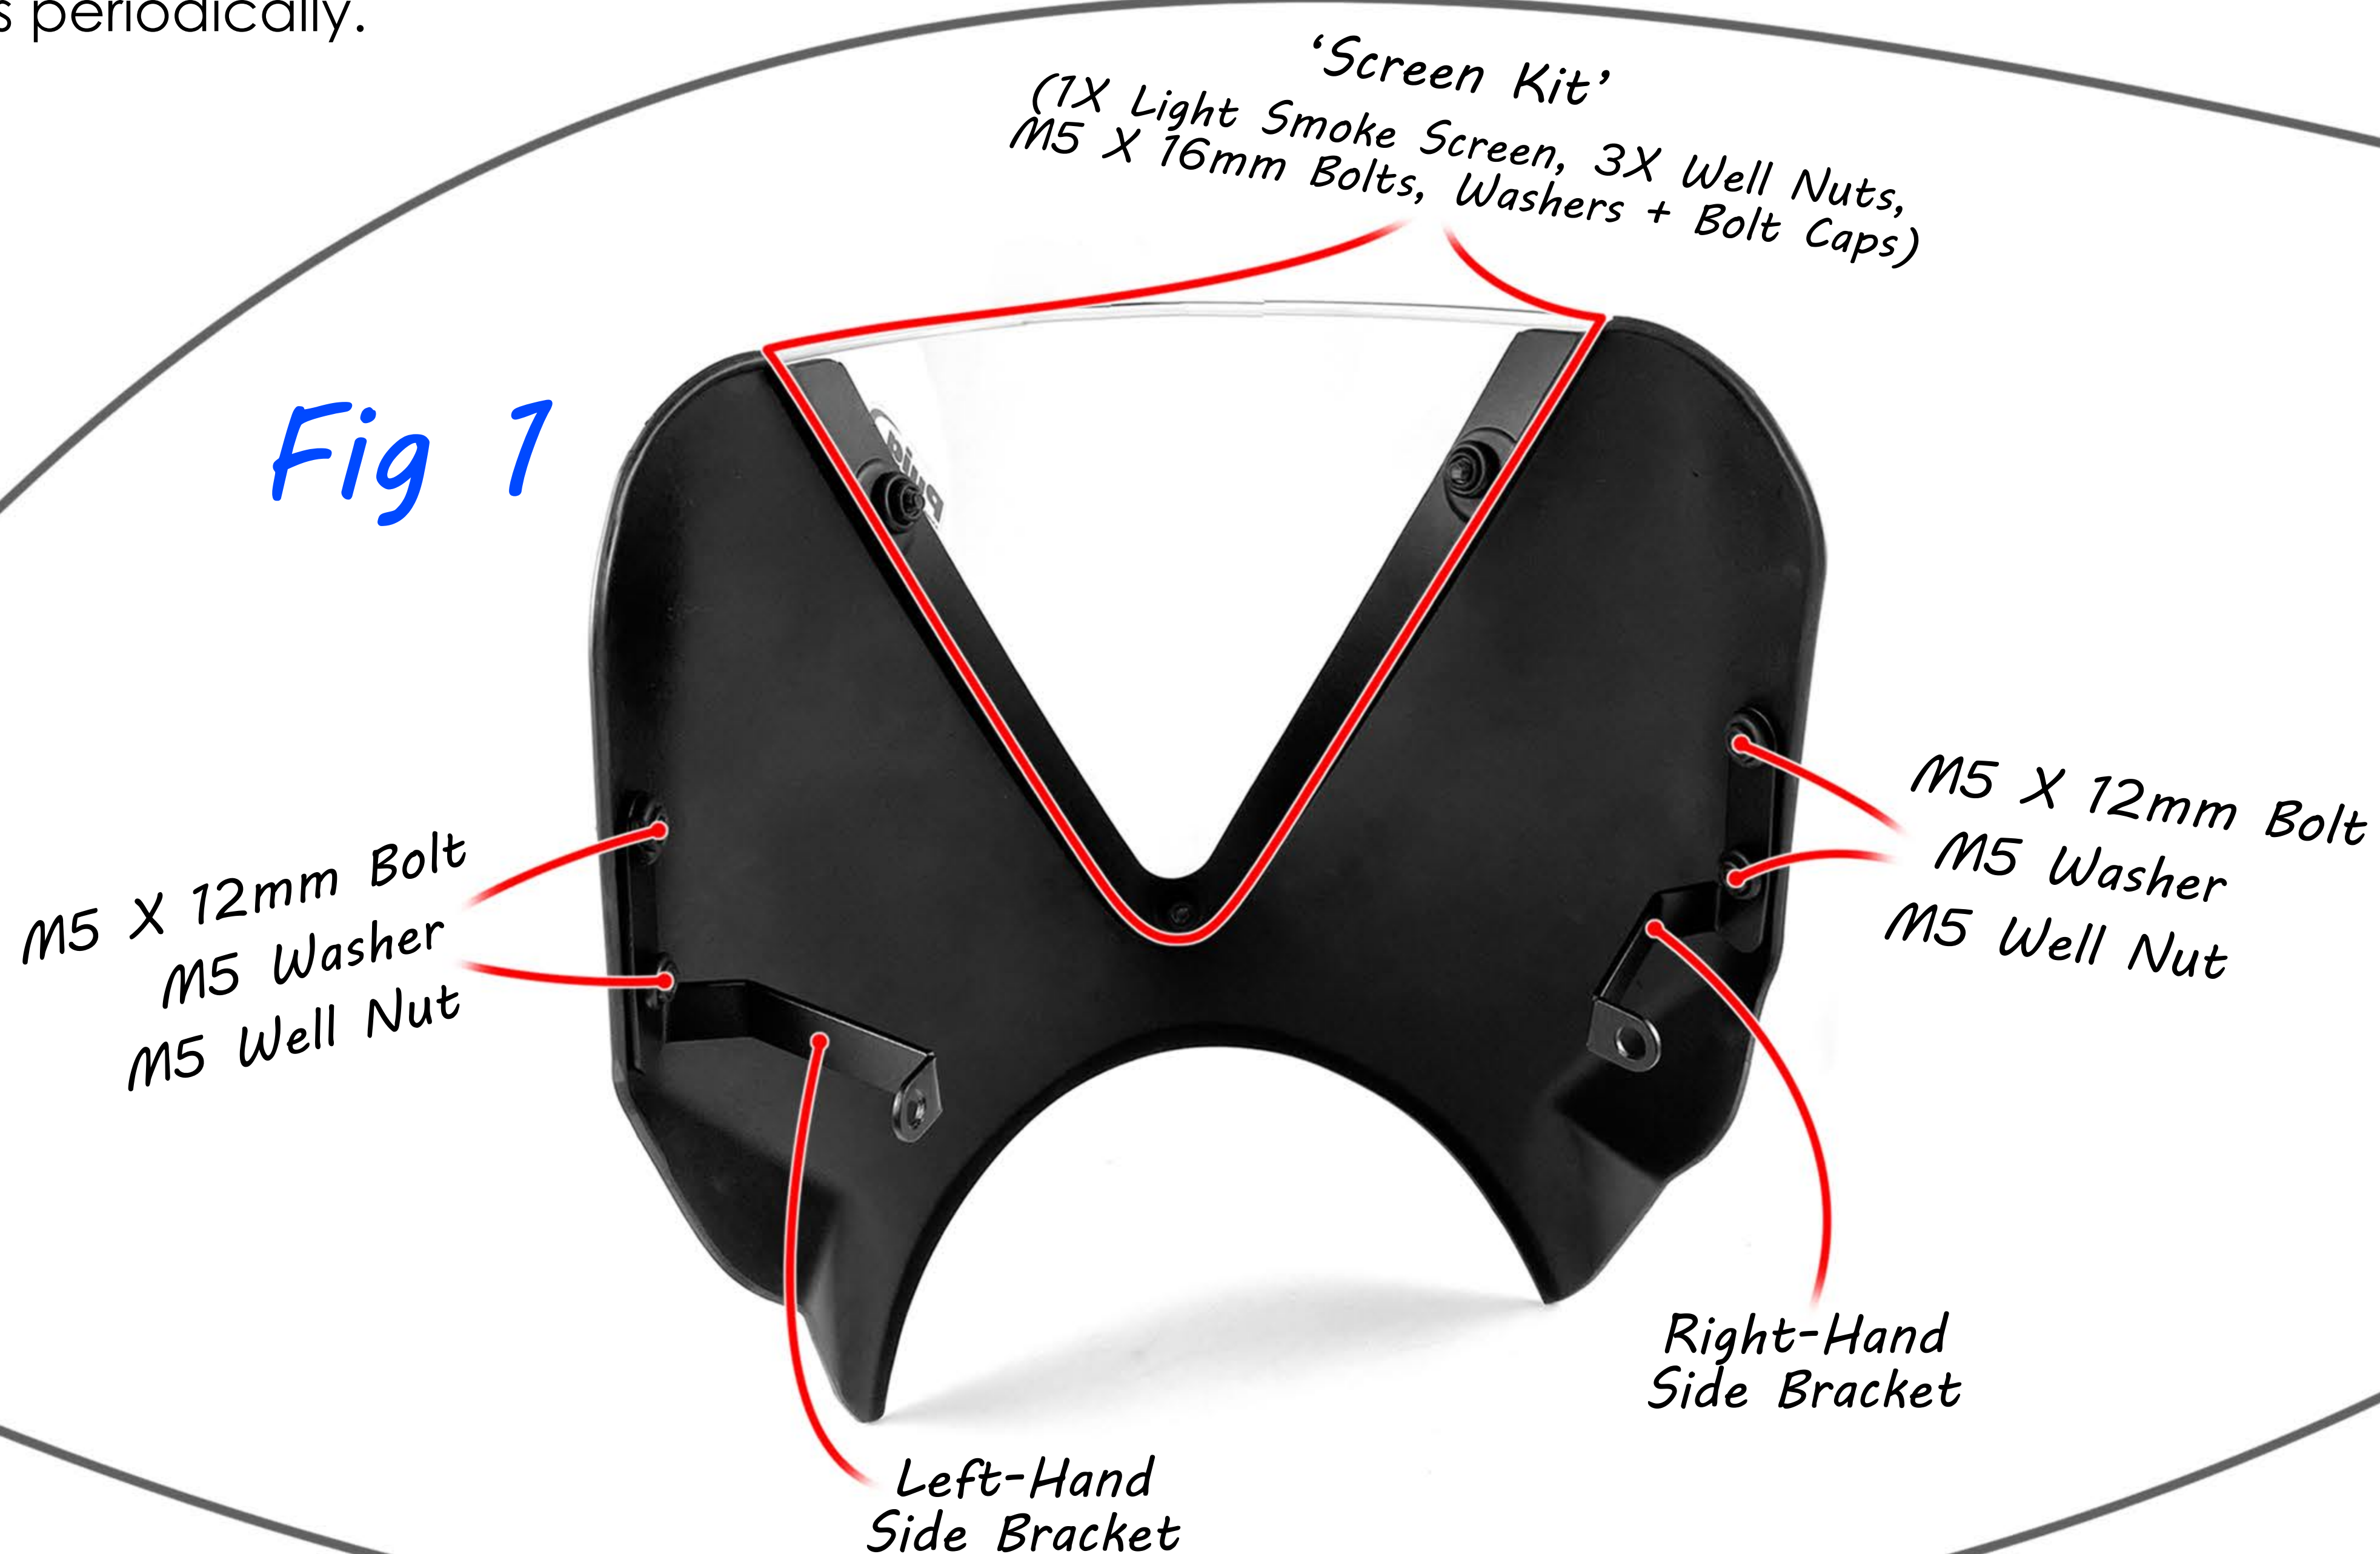


Fig 2



Any questions?
sales@pyramid-plastics.co.uk
 +44 (0)1427 677990
www.pyramid-plastics.co.uk

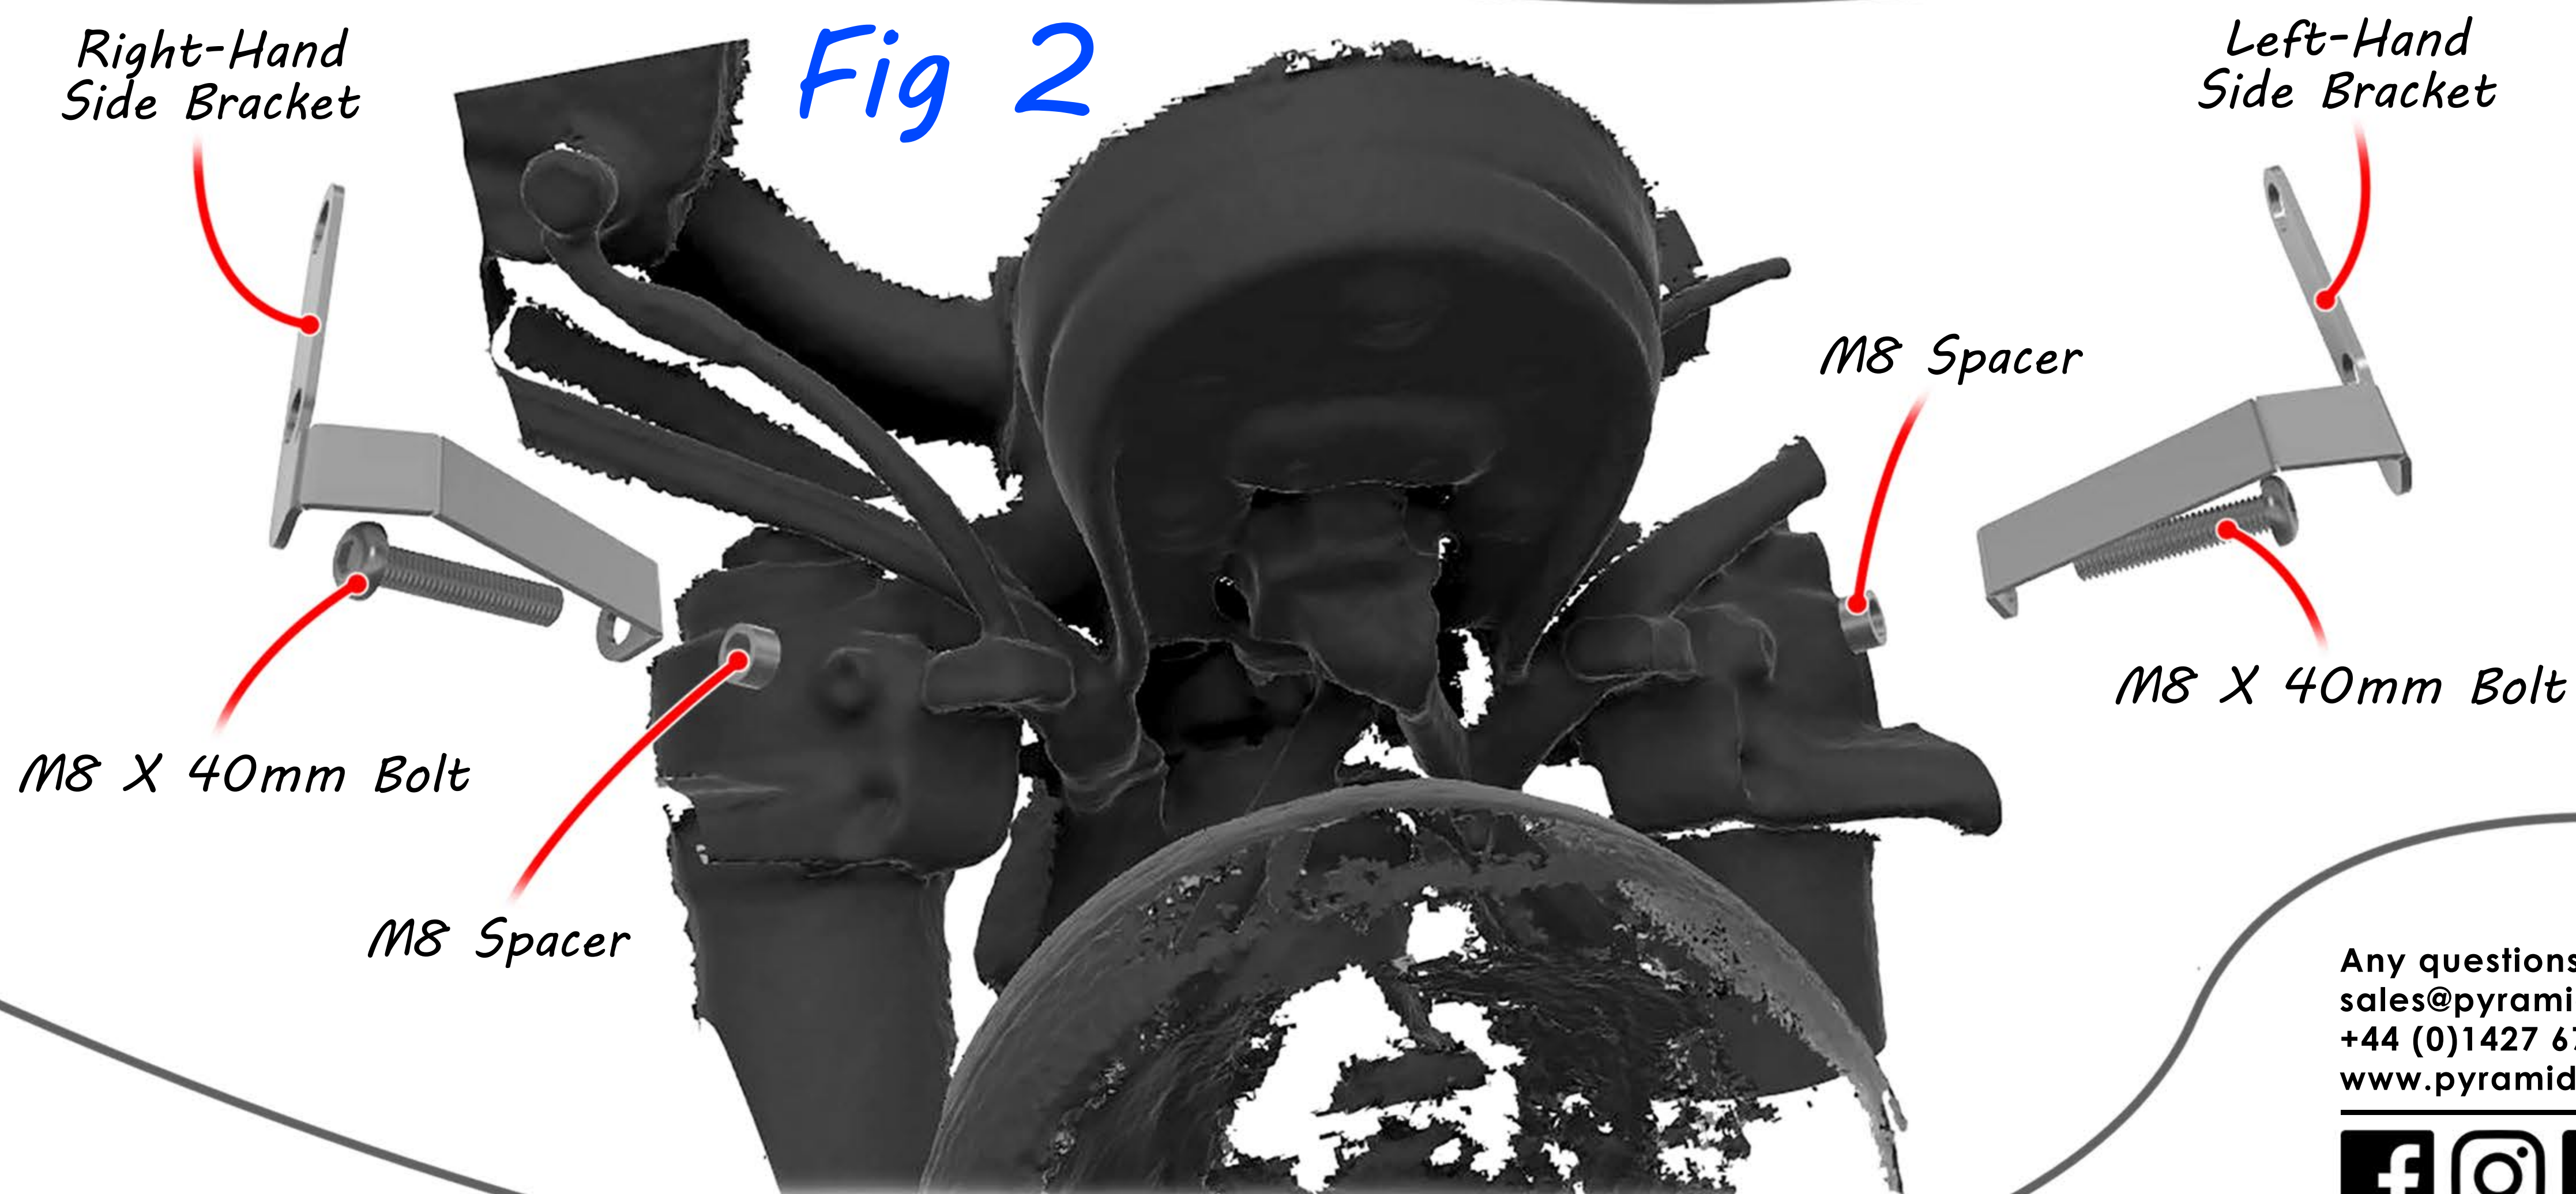

Follow us on social media and feel free to leave us a review!