



059393 KTM 790 / 890 Adventure R Front Mudguard Fitting Instructions

Kit Includes:

1X	C059393	Moulding
2X	CFK059393	Brackets (pair)
4X	CBOL0106	M5 X 12mm Black Stainless Steel Bolt
8X	CWAS0105	M5 Stainless Steel Washer
4X	CNUT0150	M5 Stainless Steel Serrated Nut

Attach the brackets to the brake calipers using the original bolts. We advise removing and refitting each bolt so that the brake caliper is never fully serperated (See **Fig 1**). The Torque settings for these original brake caliper bolts is 45Nm.


Once the brackets are fitted, attach the mudguard to the brackets using the rest of the fittings supplied (see **Fig 2**).

Check fixings periodically.

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

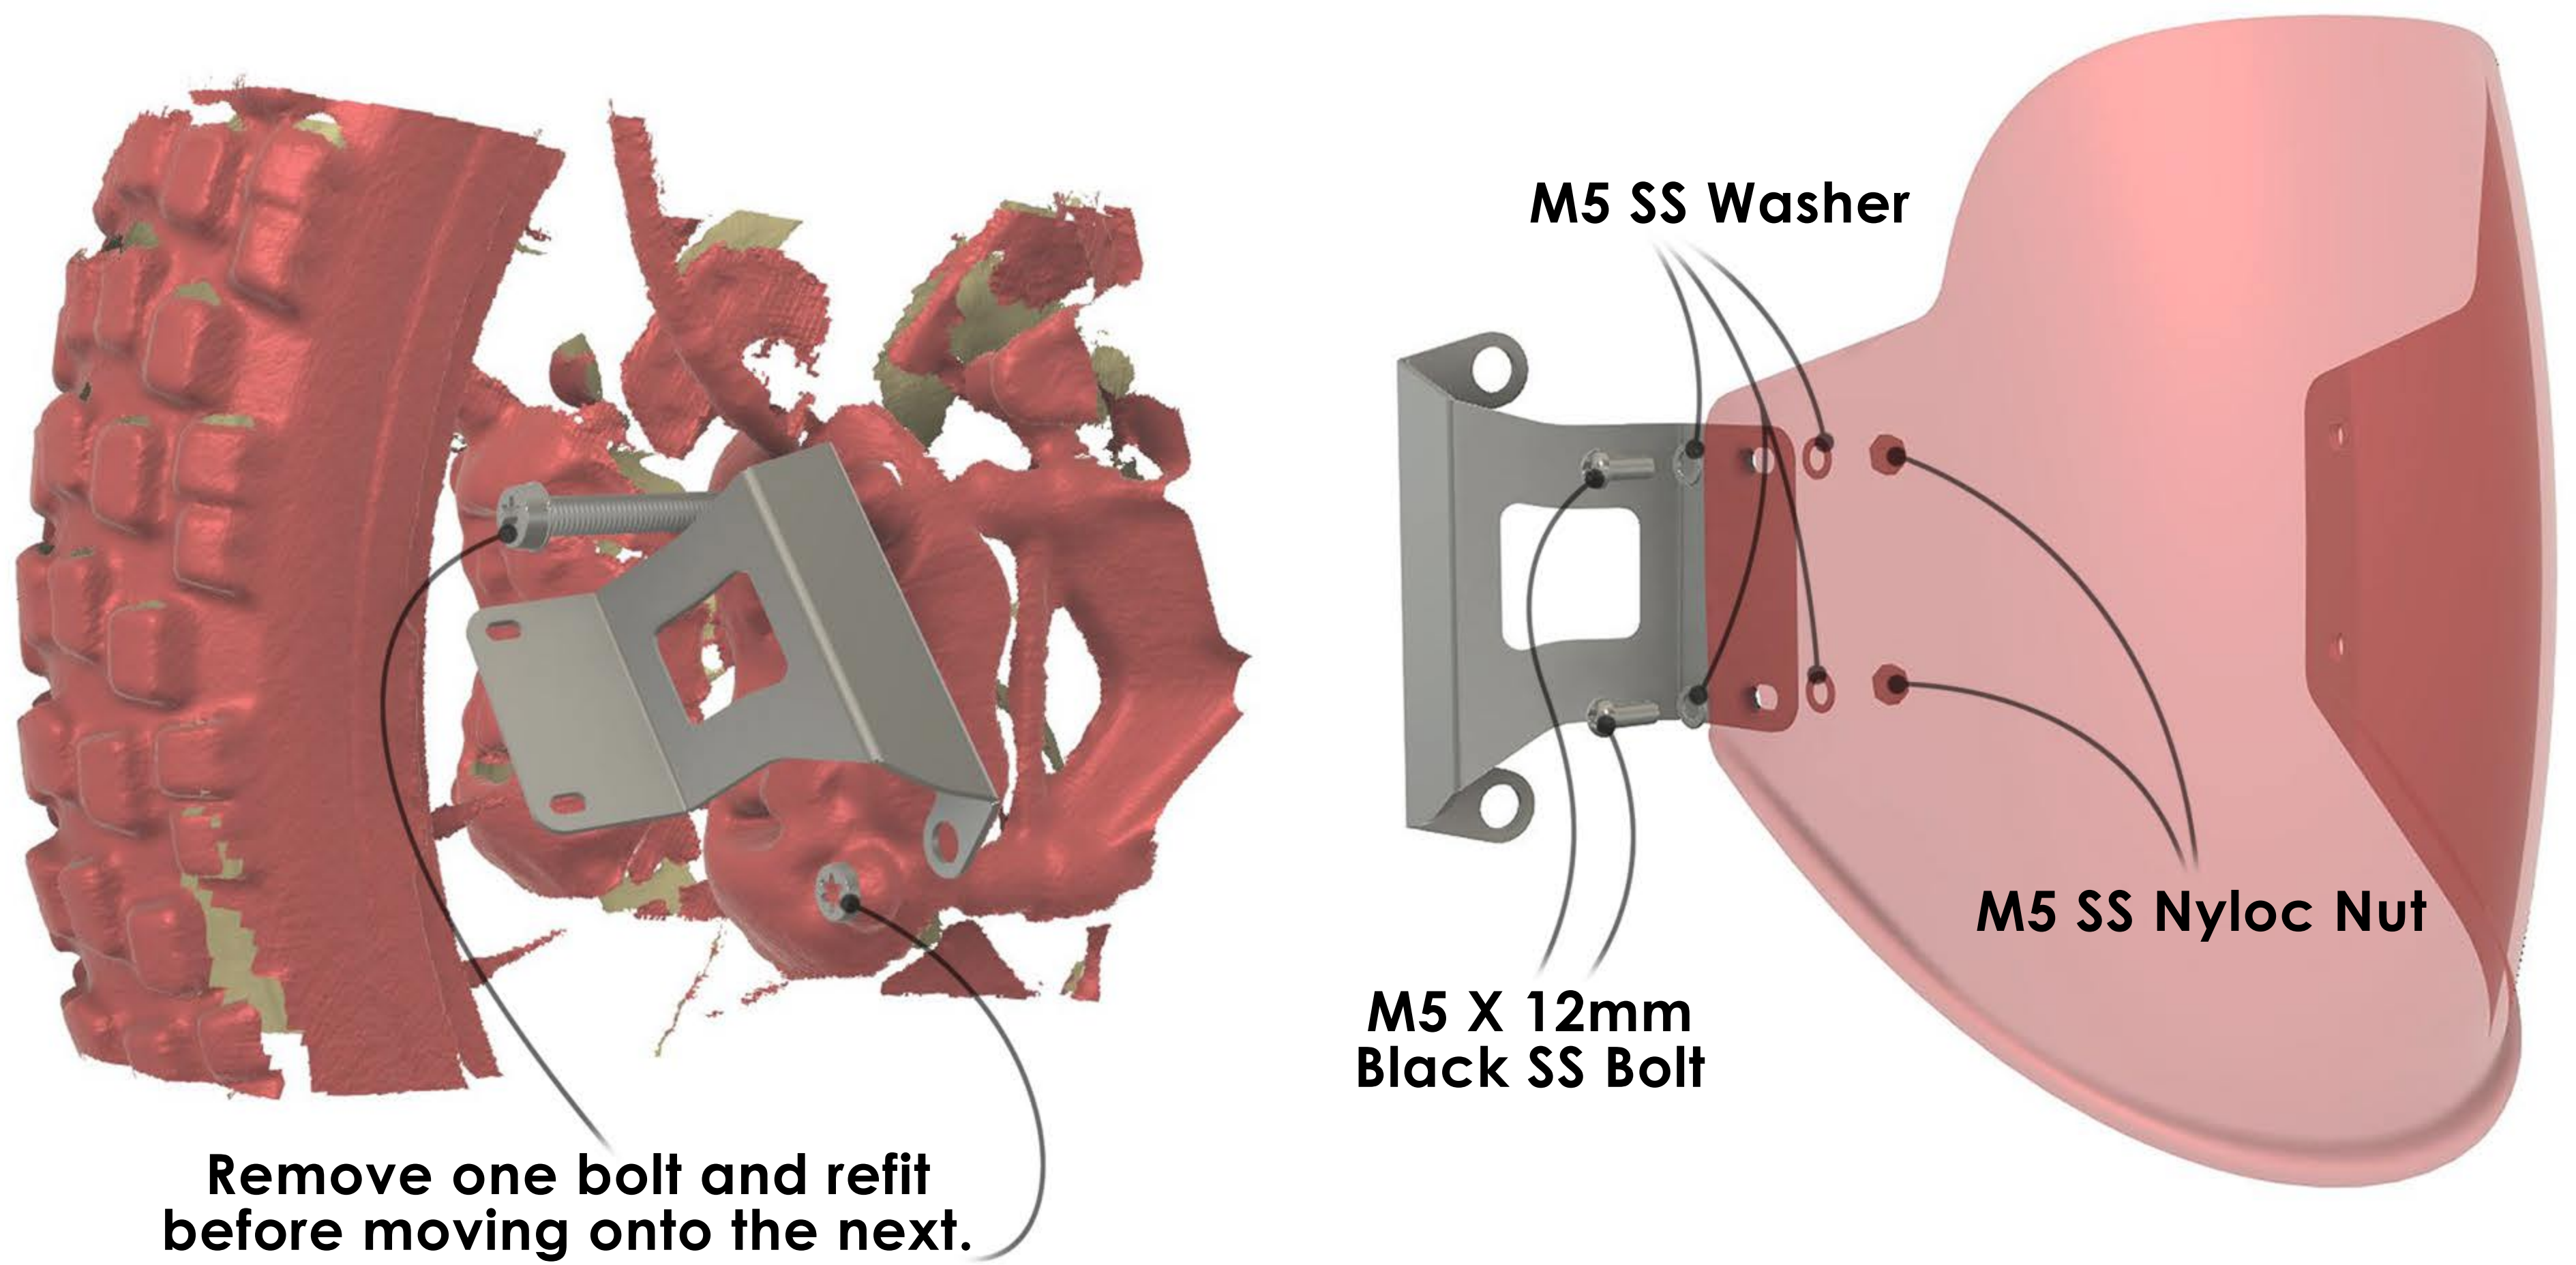

059393 KTM 790 / 890 Adventure R Front Mudguard Fitting Instructions

Kit Includes:

1X	C059393	Moulding
2X	CFK059393	Brackets (pair)
4X	CBOL0106	M5 X 12mm Black Stainless Steel Bolt
8X	CWAS0105	M5 Stainless Steel Washer
4X	CNUT0150	M5 Stainless Steel Serrated Nut

Attach the brackets to the brake calipers using the original bolts. We advise removing and refitting each bolt so that the brake caliper is never fully serperated (See **Fig 1**). The Torque settings for these original brake caliper bolts is 45Nm.

Once the brackets are fitted, attach the mudguard to the brackets using the rest of the fittings supplied (see **Fig 2**).

Check fixings periodically.

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

