

Suzuki GSR 750 Belly pan

Fitting kit contents

3 x Bracket

6 x M6 x 20mm flange headed allen bolt

2 x M6 nyloc nut

Front mounting bracket (A)




Left side bracket (B)



Right side bracket (C)



Fitting instructions

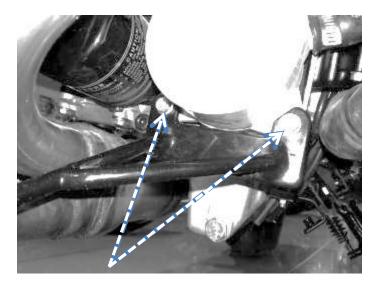

Remove both of the bolts from the oil cooler, place the bracket (A) onto the bike and then replace both of the bolts.

Using the allen bolts, nylocs and both of the side brackets (B,C) mount them onto the bike at these mounting points.





Finally take the belly pan and fit it to the bike.

