

## 38870 Moto Guzzi V100 Mandello Handguards Fitting Instructions

### Kit Includes:

2X	C30203	Handguards (pair)
2X	CFK38870	Brackets (pair)
2X	CBOLM60018	M6 X 50mm Countersunk Bolt
2X	CWASM60005	M6 Countersunk Washer
2X	CWASM60001	M6 Washer
4X	CBOLM50007	M5 X 16mm Bolt
4X	CNUTM50002	M5 Nyloc Nut
4X	CSPAM50003	M5 Collar

Remove the bar ends from both sides of the handlebars.

Remove both mirrors from the bike.

**Note: two spanners of the same size will aid the removal and refitting of the mirrors.**




Loosely attach both brackets (left + right sides respectively) on the mirror mounting points. (See Fig 1 + 2 to see how the brackets should be positioned).

Loosely attach the handguards to the bar ends using the M6 fittings supplied (see Fig 3).

Loosely attach the brackets to the handguards using the M5 fittings supplied (see Fig 4).

Now tighten all the fixing points and adjust the mirror mountings if need be - this can be achieved by adjusting the two nuts on the mounting point of the mirror.

Check all fixings periodically.

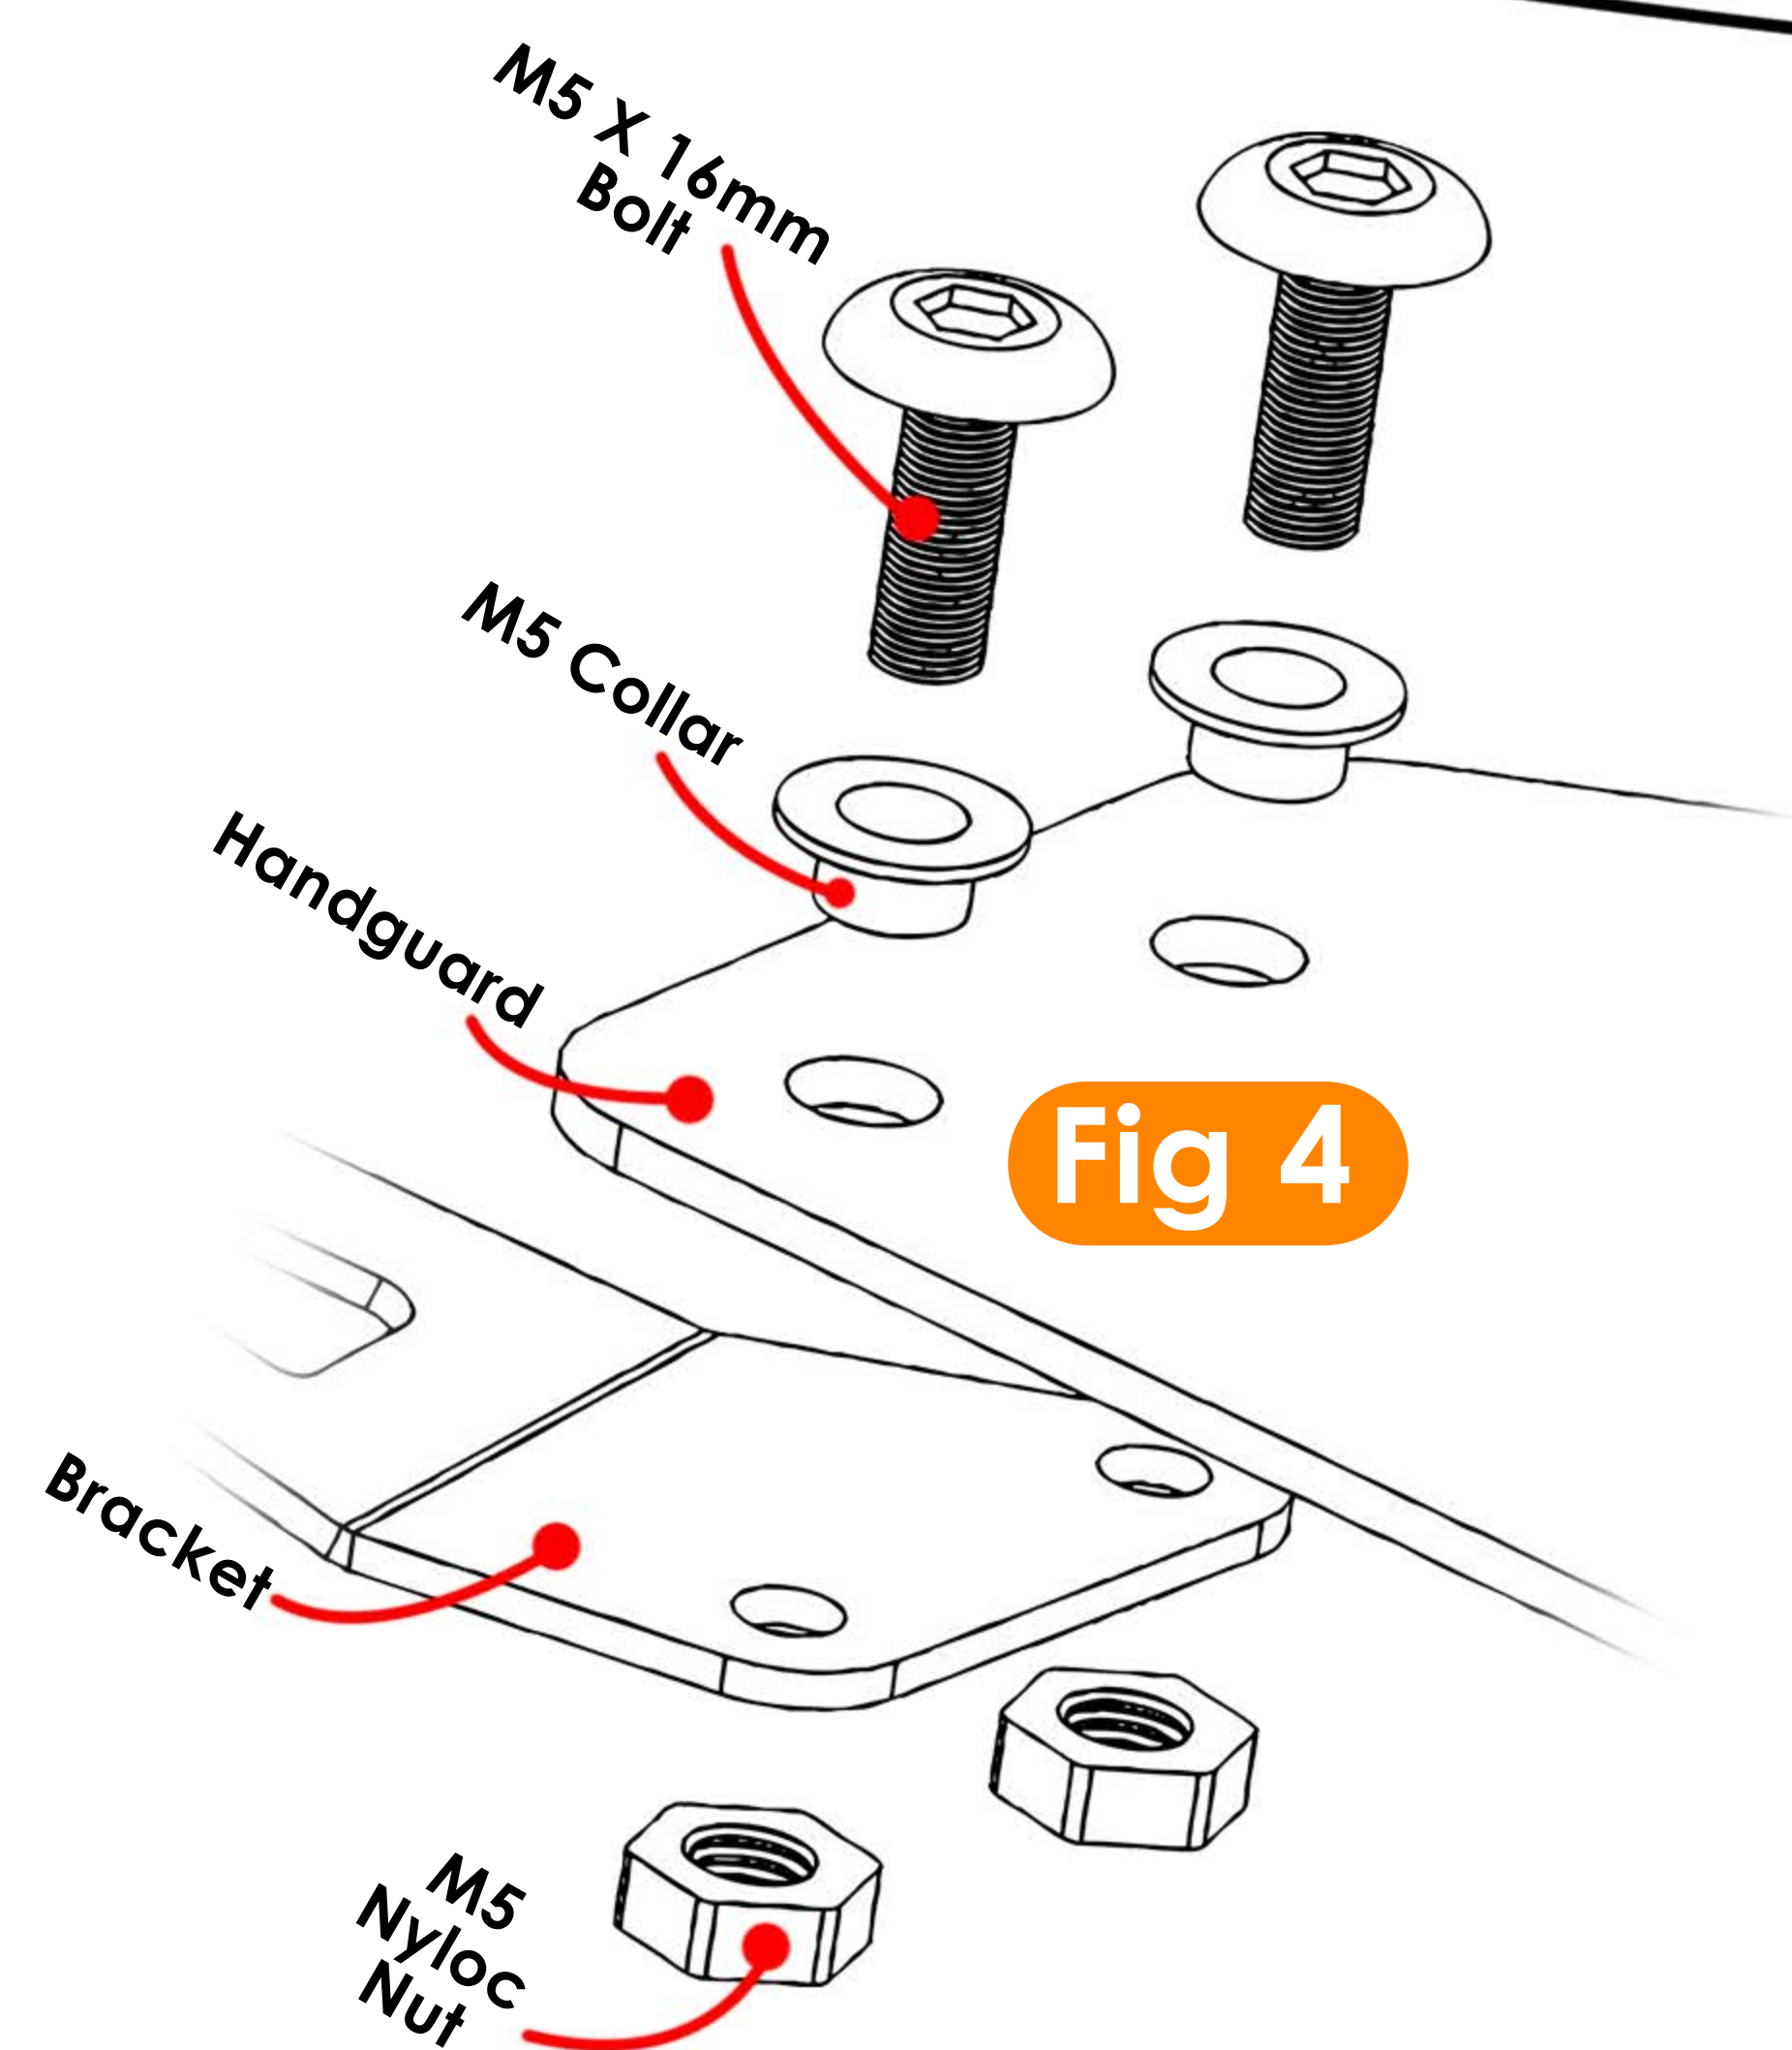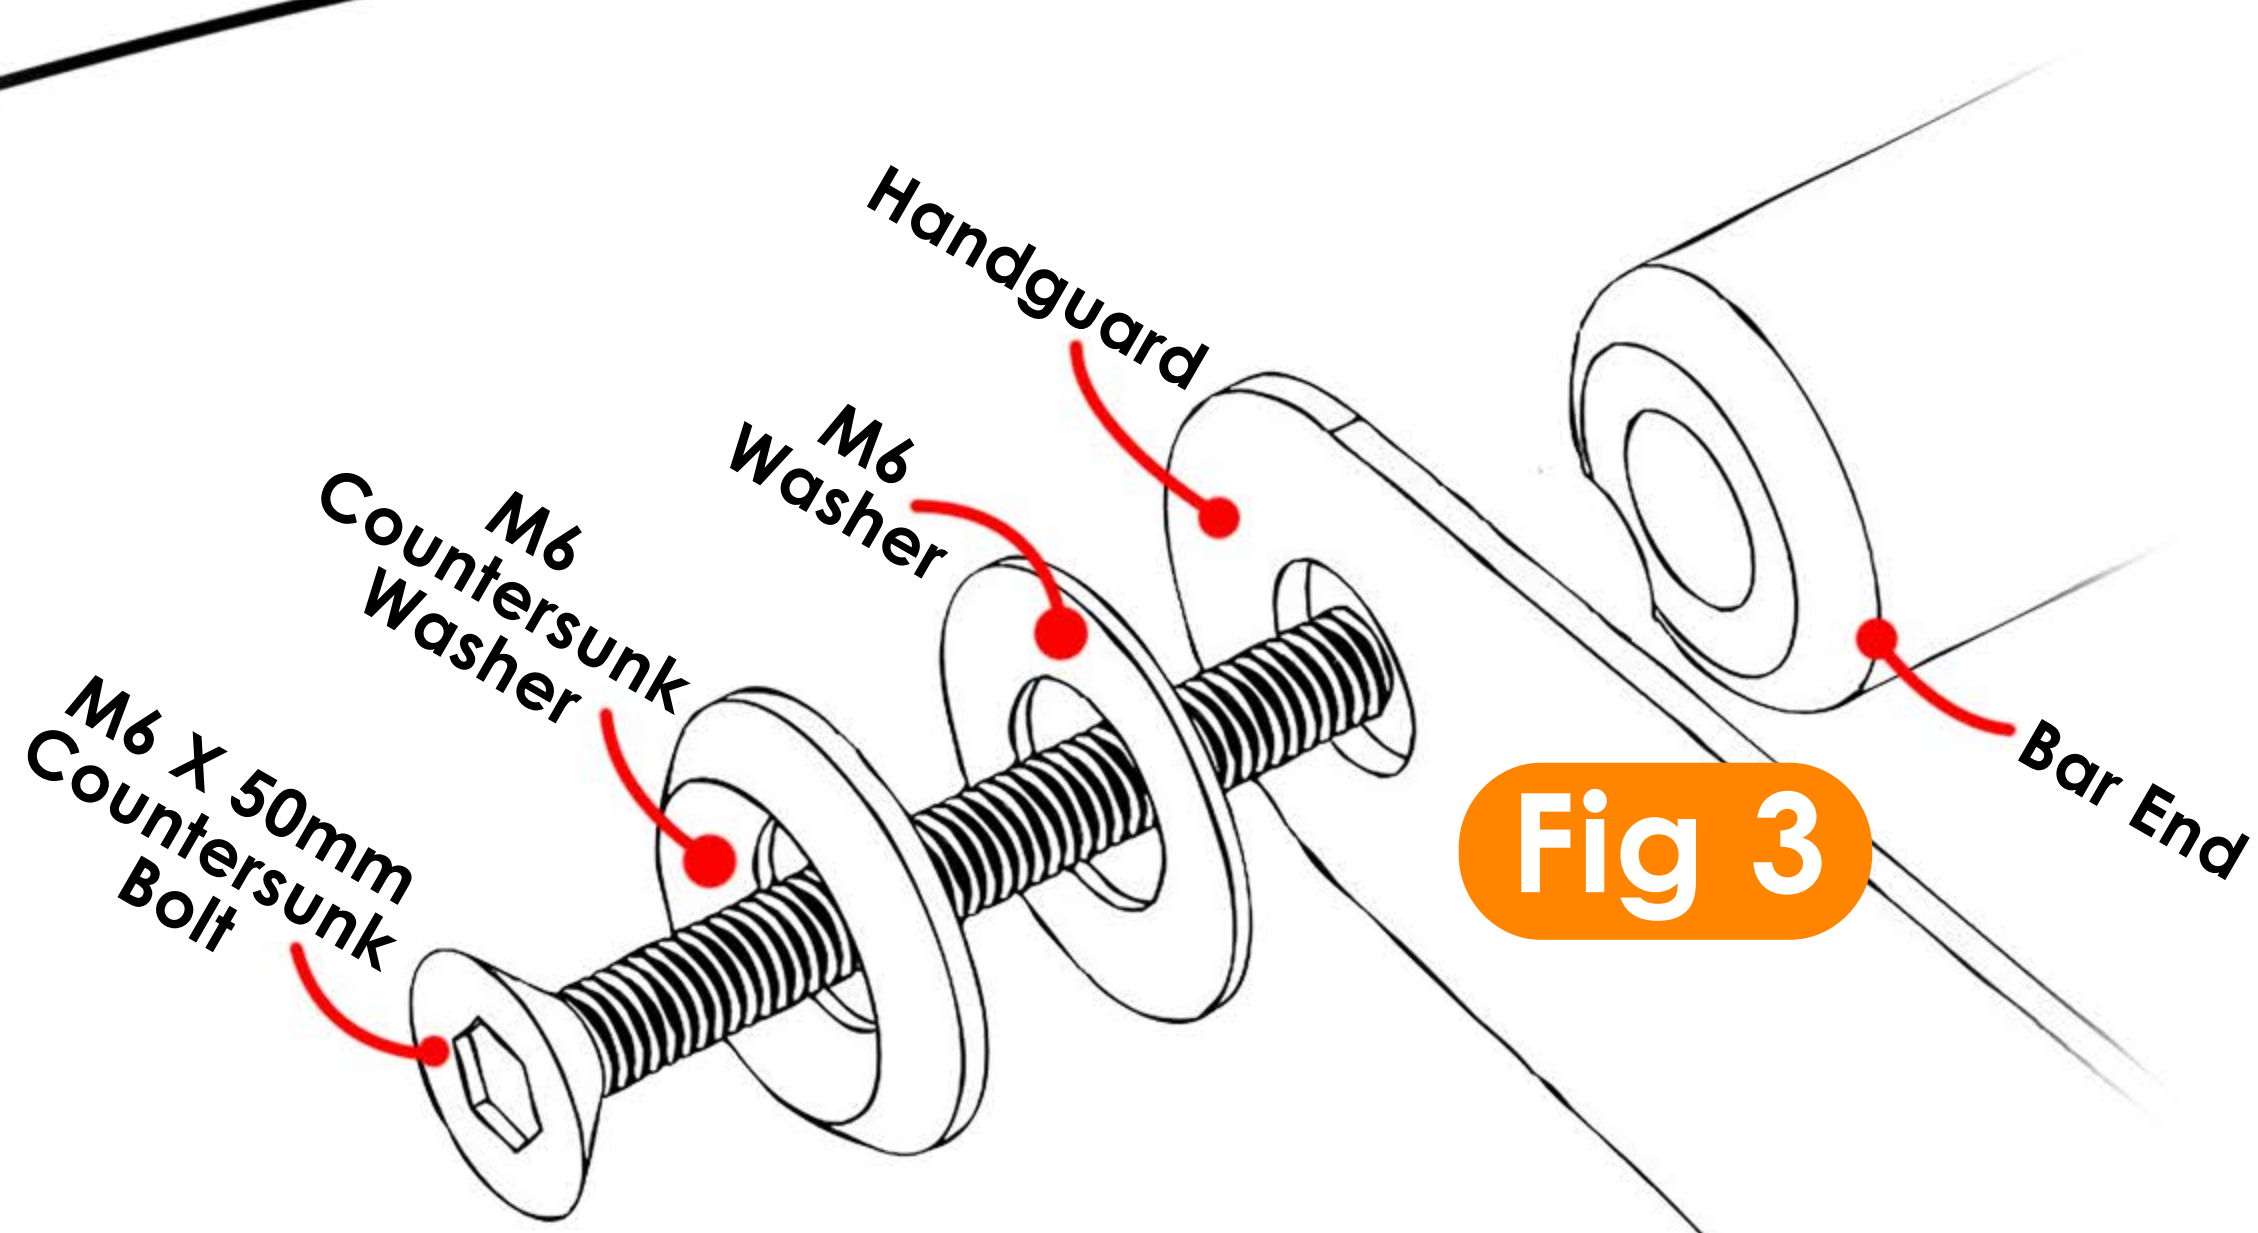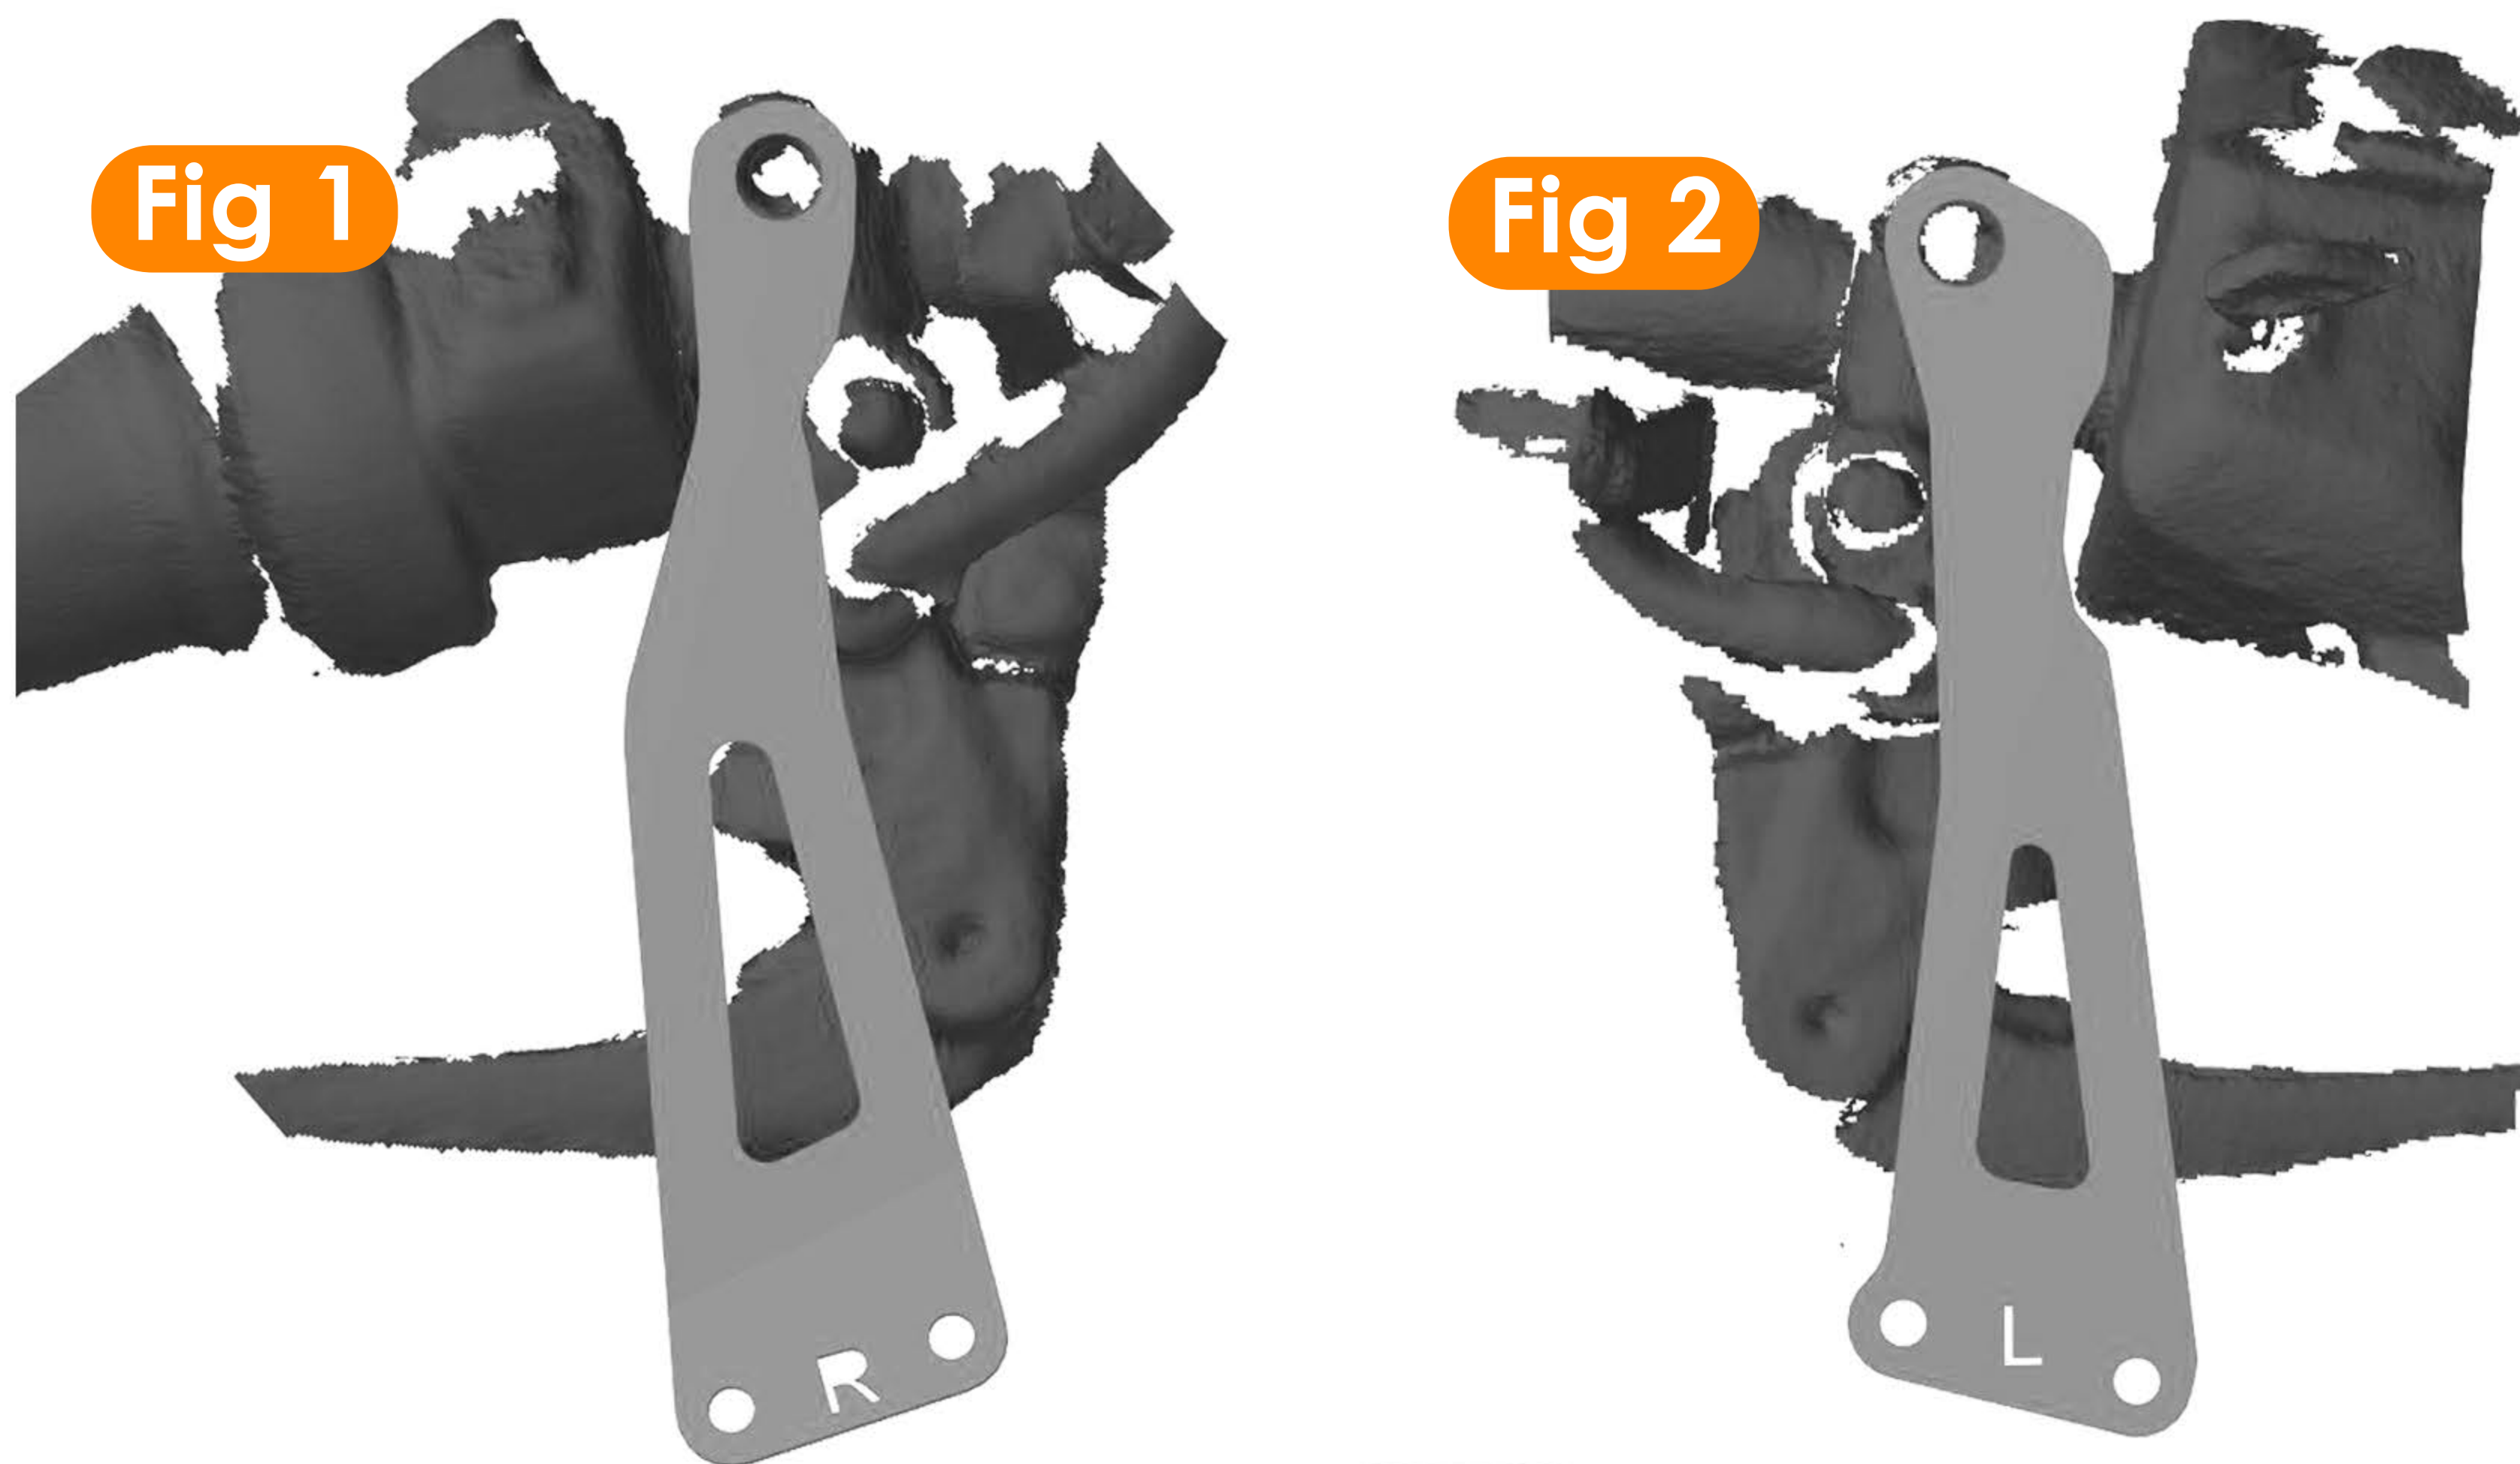

Any questions?  
[sales@pyramid-plastics.co.uk](mailto:sales@pyramid-plastics.co.uk)  
 +44 (0)1427 677990  
[www.pyramid-plastics.co.uk](http://www.pyramid-plastics.co.uk)



Follow us on social media and feel free to leave us a review!