

## 22156 Yamaha Tracer 9/MT-09 Engine Guard Fitting Instructions

### Kit Includes:

5X	C22156	Aluminium Sheet Metal Panels
3X	C22156	Brackets
6X	CBOLM60007	M6 X 12mm Flanged Button Head Bolt
6X	CWASM60003	M6 Plastic Washer
21X	CBOLM50005	M5 X 12mm Button Head Bolt
21X	CWASM50001	M5 Plastic Washer
21X	CNUTM50002	M5 Nyloc Nut


**Helpful notes:** We advise the use of the centre stand where possible for better access when fitting. Place something soft underneath the bike when positioning the engine guard to avoid damage. A small box/block of the appropriate size can be useful for positioning/fitting the engine guard.

Assemble the engine guard using the M5 fittings supplied (fully tighten).

Attach the brackets to the engine using the OEM bolts as shown in the pictures below (fully tighten).

Attach the engine guard assembly to the brackets using the M6 fittings supplied (loosely tightening to begin with is helpful for a successful fit).

Check fixings periodically.

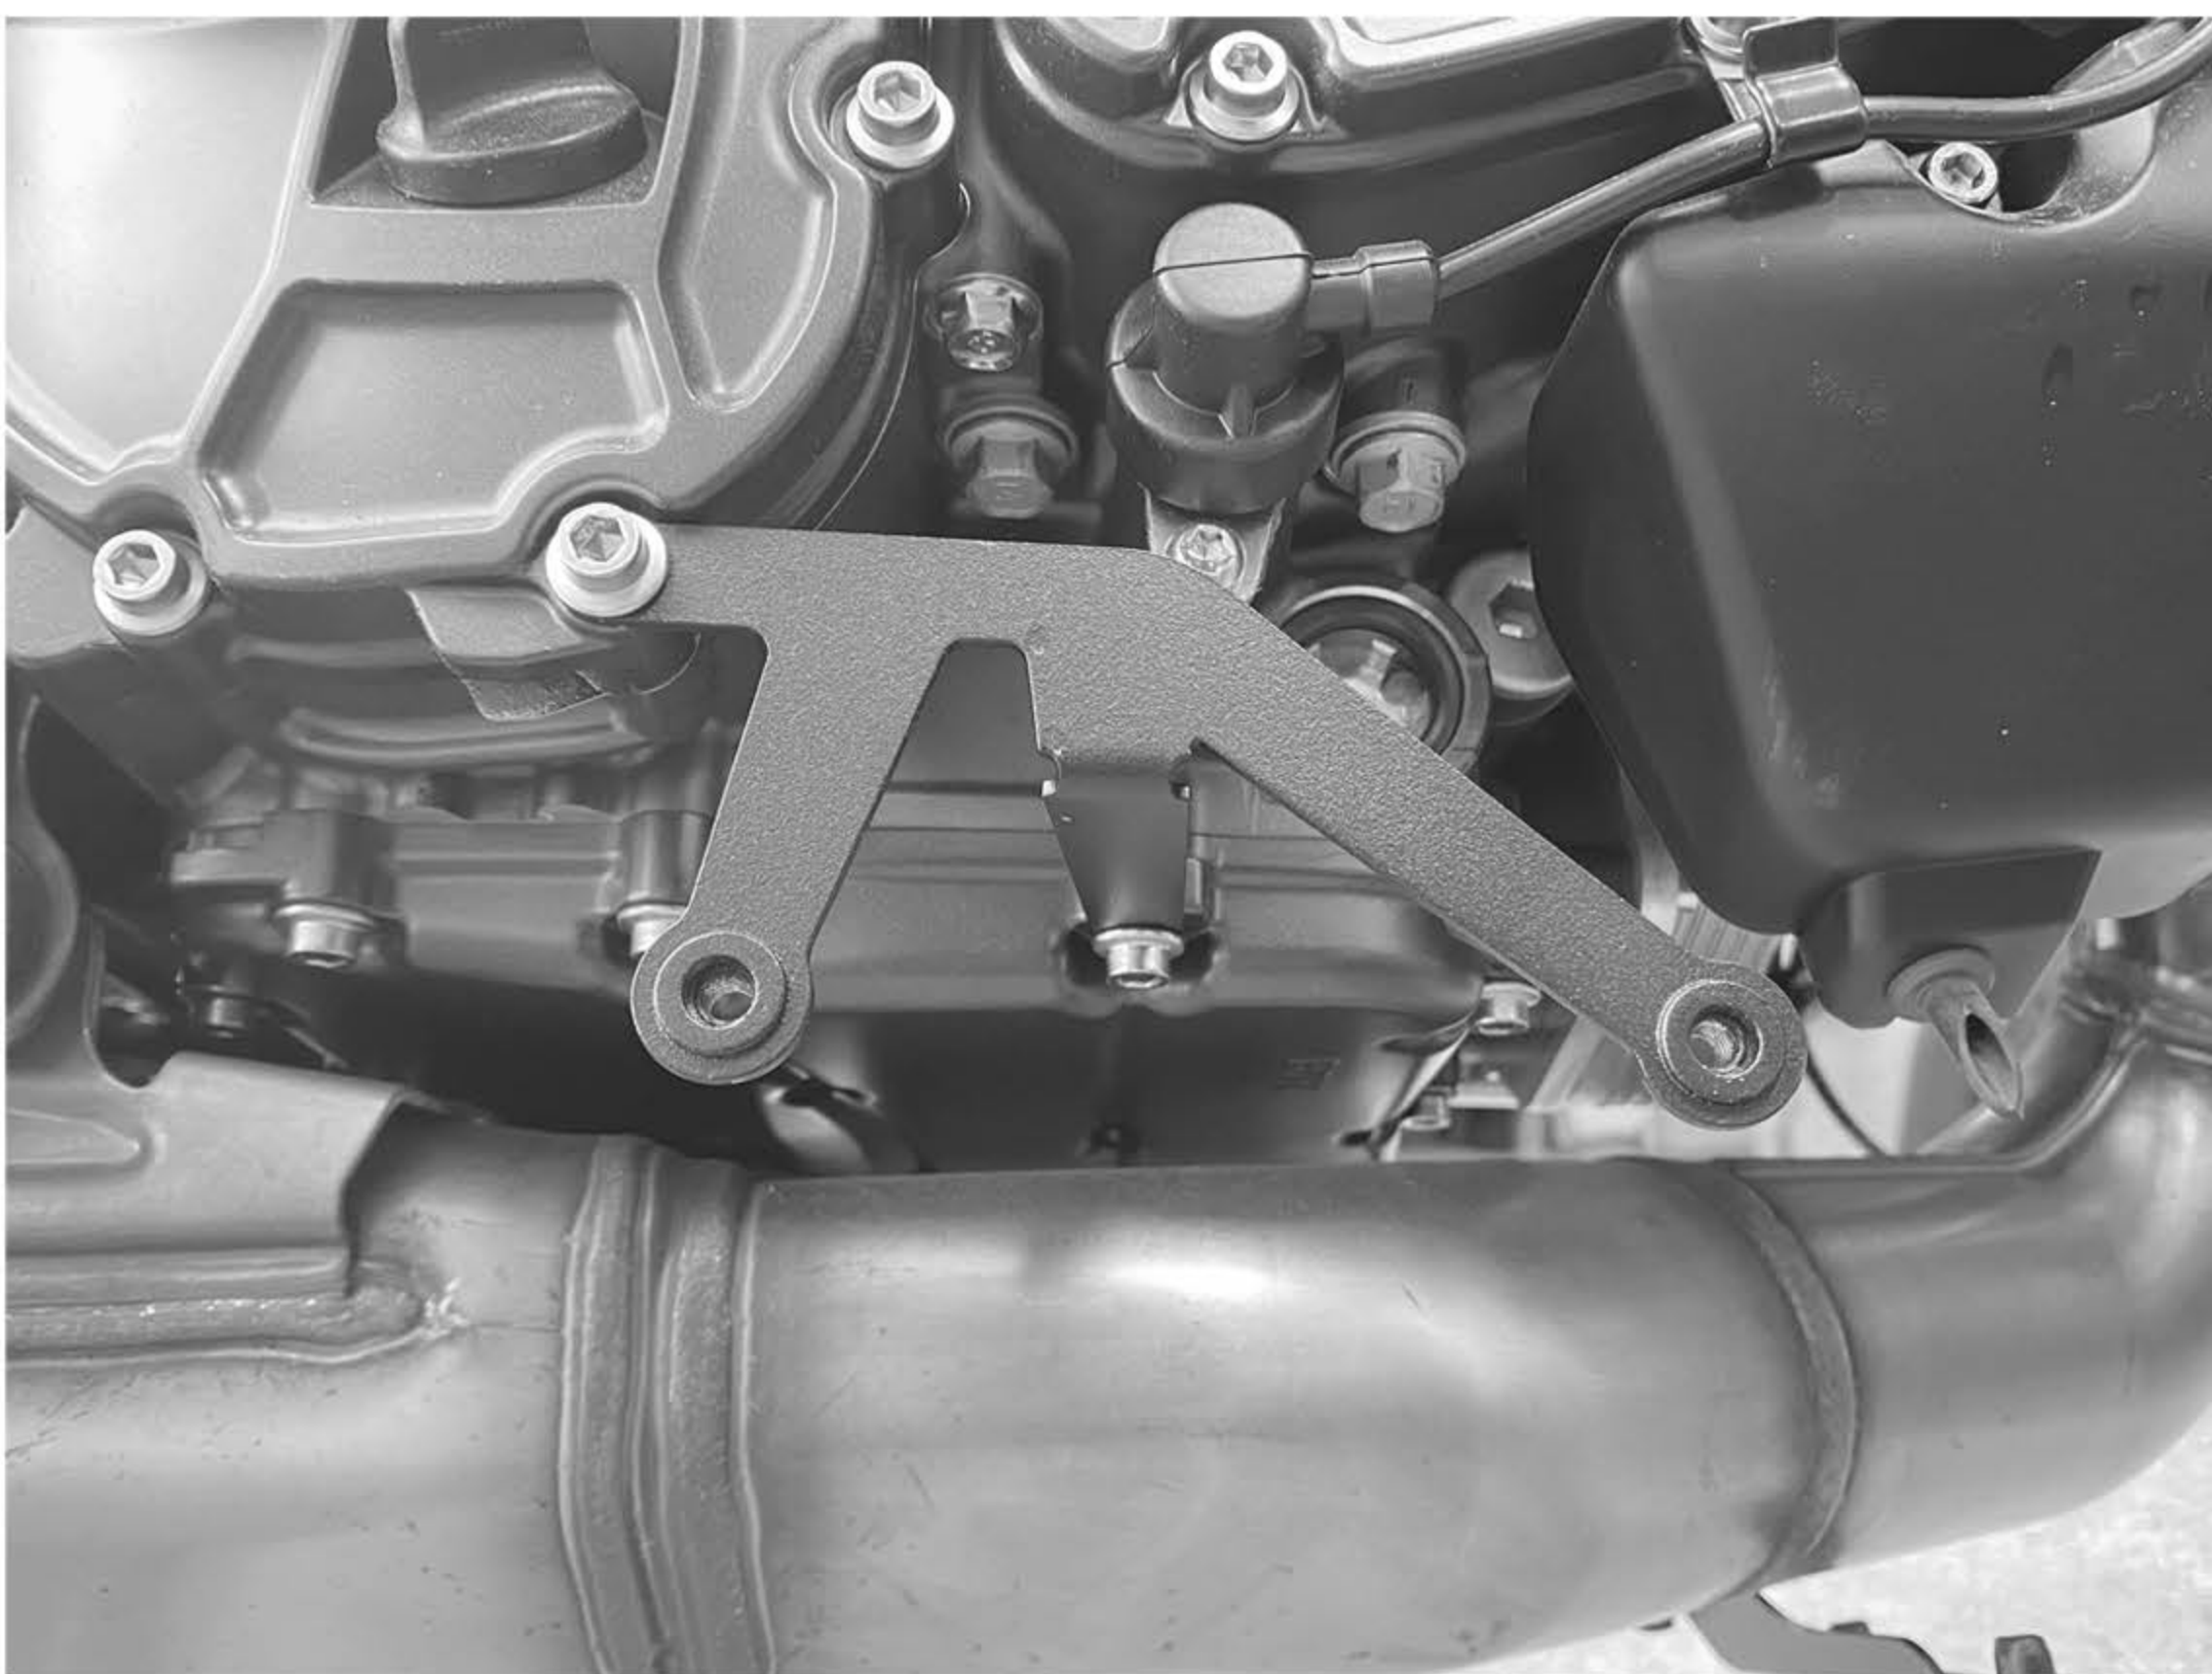

let's  
Ride

Any questions?  
[sales@pyramid-plastics.co.uk](mailto:sales@pyramid-plastics.co.uk)  
+44 (0)1427 677990  
[www.pyramid-plastics.co.uk](http://www.pyramid-plastics.co.uk)



Follow us on social media and  
feel free to leave us a review!