

# 521999 Honda NT1100 Radiator Guard Fitting Instructions

Kit Includes:

1X	C521999	Radiator Guard
3X	CBOLM60011	M6 X 25mm SS Bolt
6X	CFOA0001	Foam Strip 50mm


**PYRAMID** 

- The Pyramid radiator guard is simple to fit - the foam strips provided should be fitted to the rear of the radiator guard to avoid any unnecessary contact between the radiator and the guard.
- Remove the three OEM bolts as shown below and then fit the radiator guard using the three bolts supplied with this product.

**Note:** the bent tabs on the radiator guard slot between the OEM rubber washers and the mounting points on the radiator assembly (**see images below**).

- Ensure fixings are checked periodically.

These images show how the radiator guard slots between the OEM rubber washers and the mounting points on the radiator assembly.

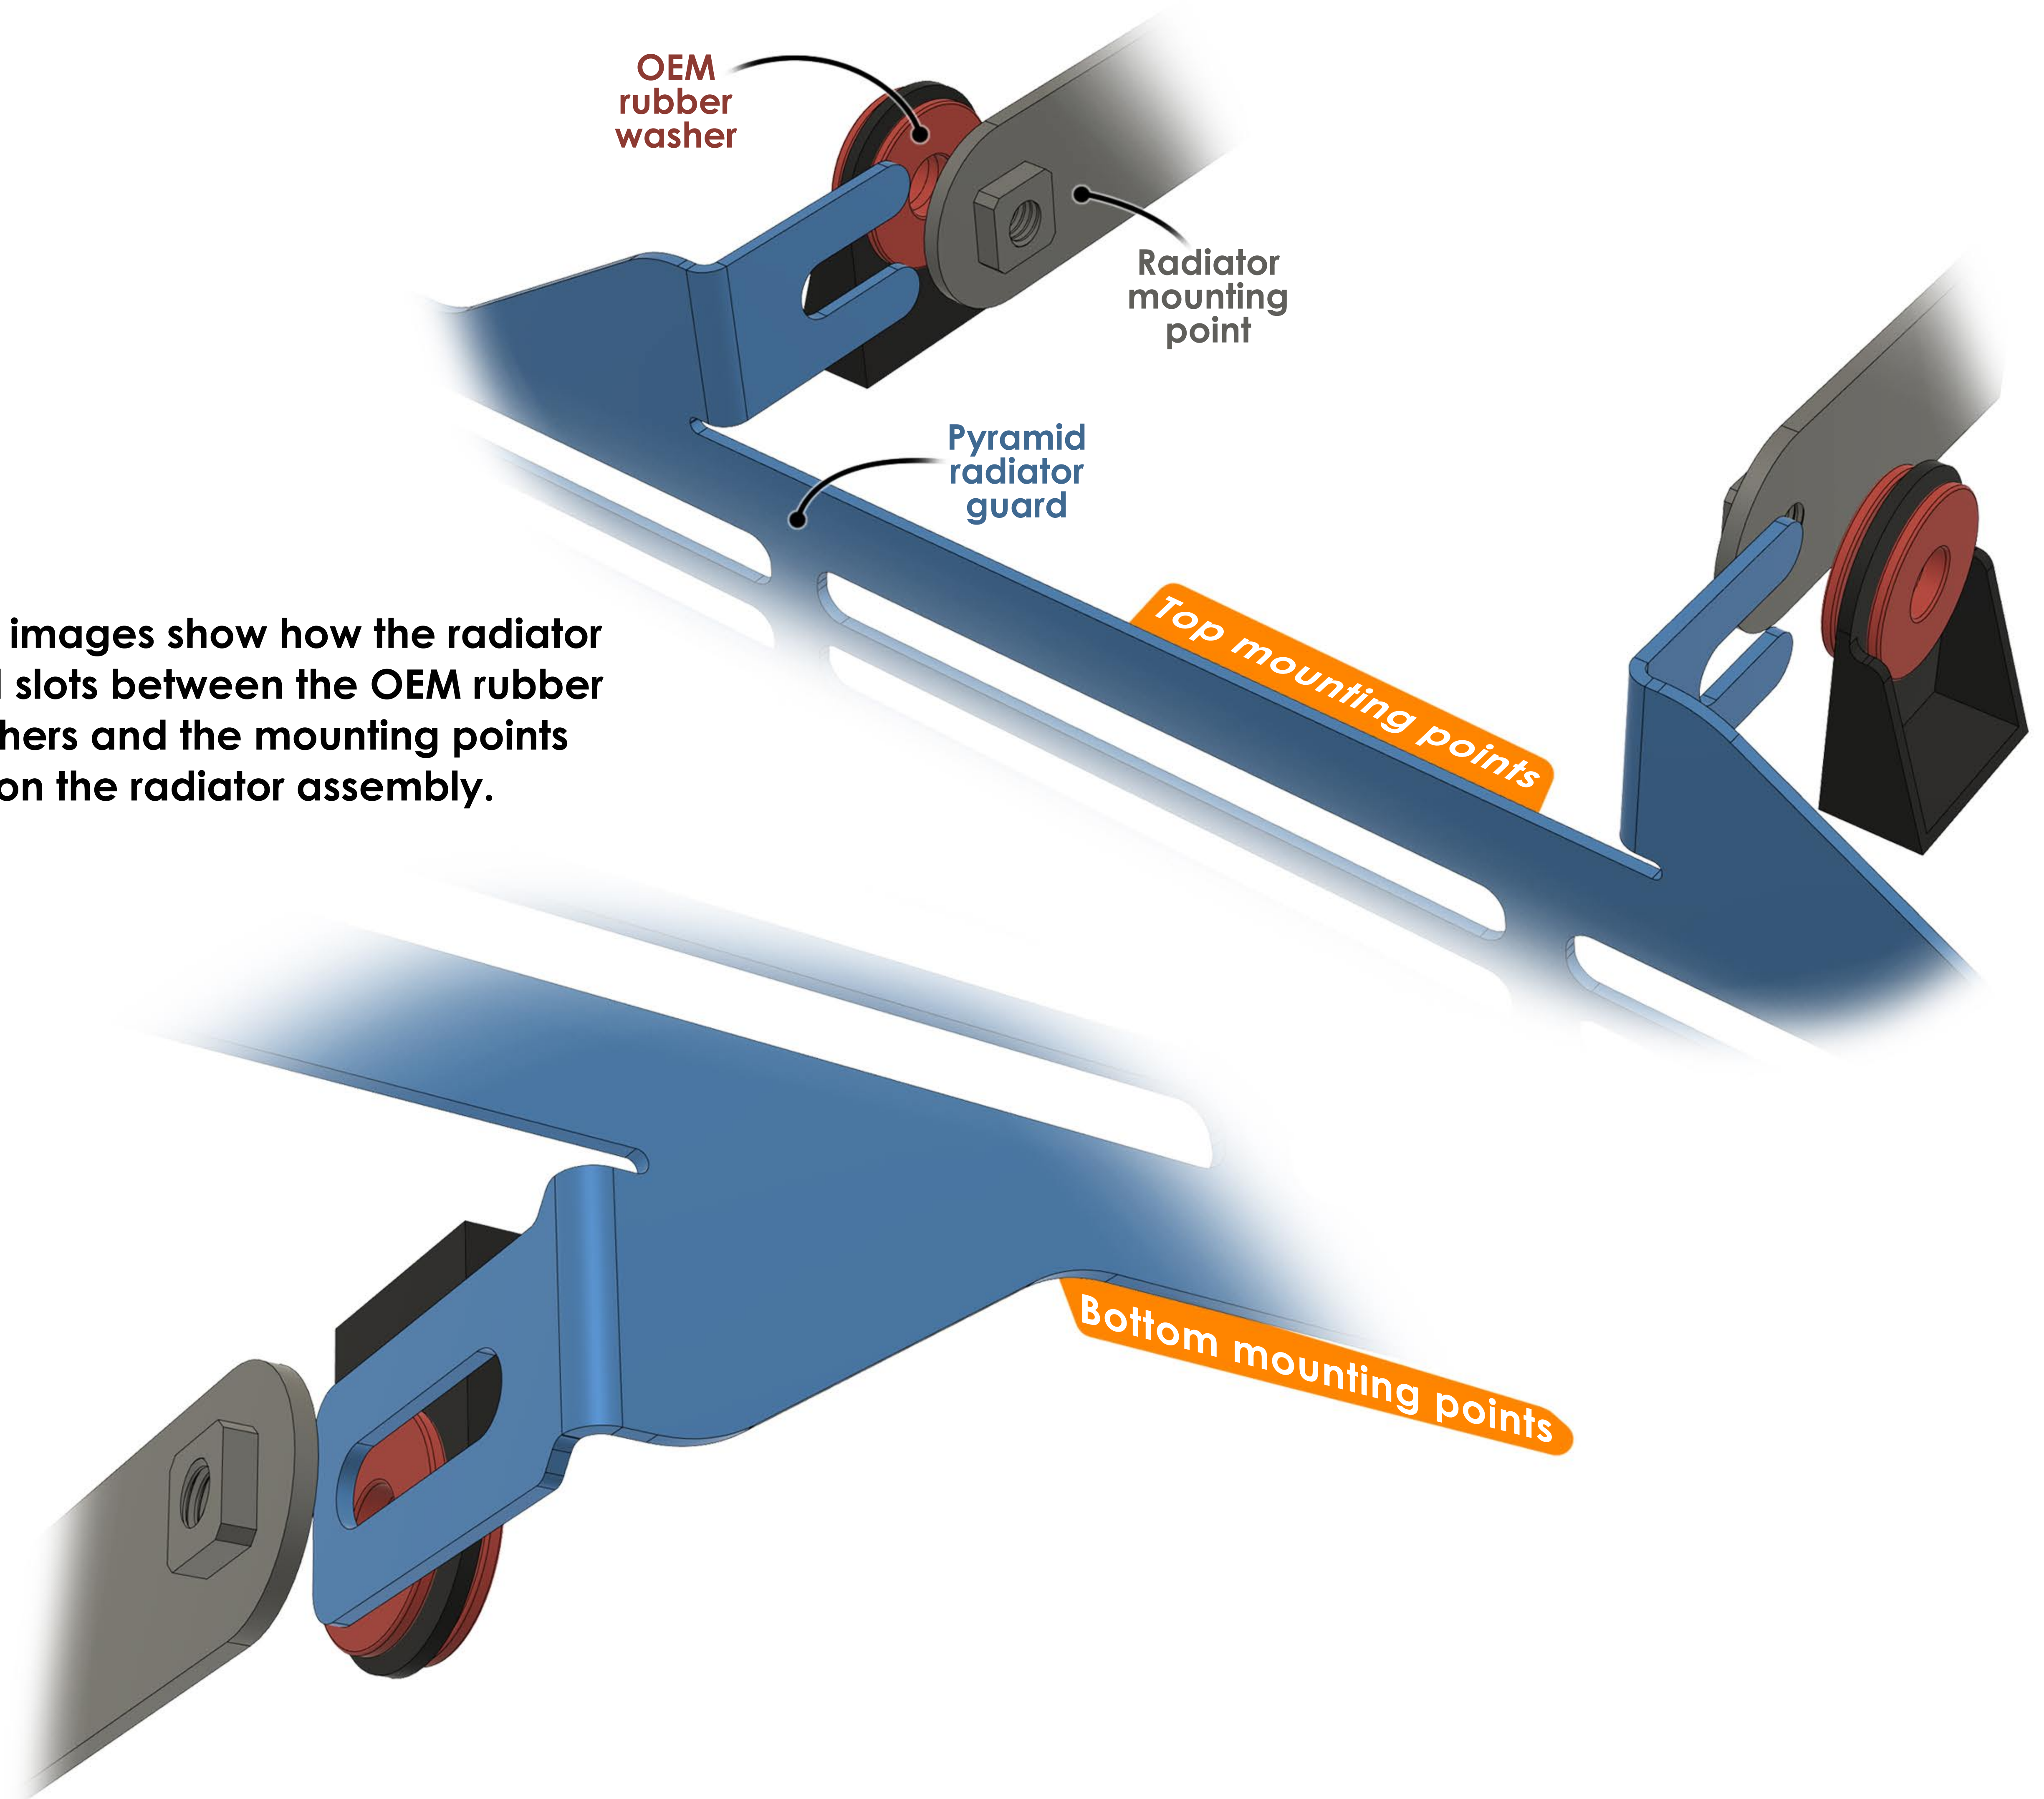

Any questions? We're here to help!  
[sales@pyramid-plastics.co.uk](mailto:sales@pyramid-plastics.co.uk)  
+44 (0)1427 677990  
[www.pyramid-plastics.co.uk](http://www.pyramid-plastics.co.uk)



Follow us on social media and  
feel free to leave us a review!

Illustrations and pictures are always clearer on our website PDF!