

# Barkbusters

www.barkbusters.net


## FITTING INSTRUCTIONS for...

BMW G650GS ('11 on)  
BMW G650GS Sertao ('11 on)  
BMW R100GS/PD - non heated grips (up to 1990)



### Preparation

**R100GS/PD:** If the handlebar grips are not open at the end they will need to be cut open for the handguard to be fitted. Use a sharp knife to cut a hole in the end of each handgrip. On the right side the hole size should be neat and no smaller than the inside diameter of the throttle tube. Loosen the throttle assembly to move it outward about 20mm. Roll back the end of the grip and use a hacksaw to carefully cut off the end cap of the plastic throttle tube. Do not remove more than 3mm and take care not to cut the underlying handlebar. Before refitting, remove any burrs that could restrict throttle movement.


**G650GS:** Remove bolt from bar end weight.

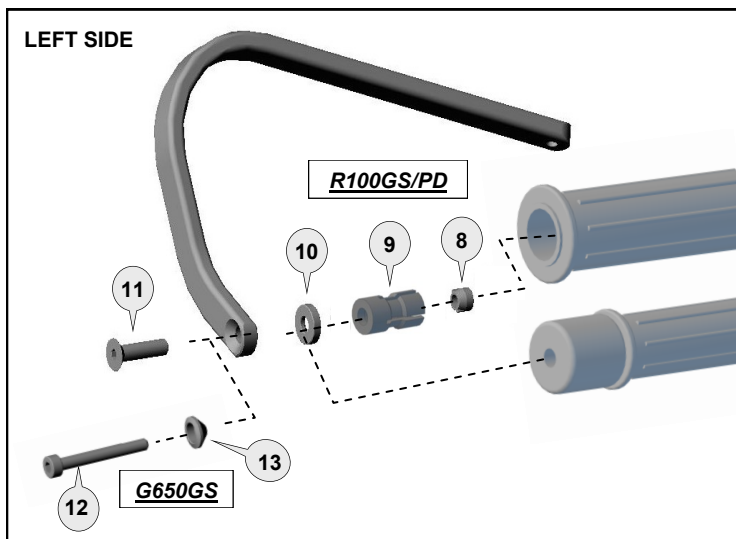

Loosely assemble clamp to the handlebar with applicable parts. Attach the handguard backbone with applicable parts to the handlebar end and also to the clamp connector (7).

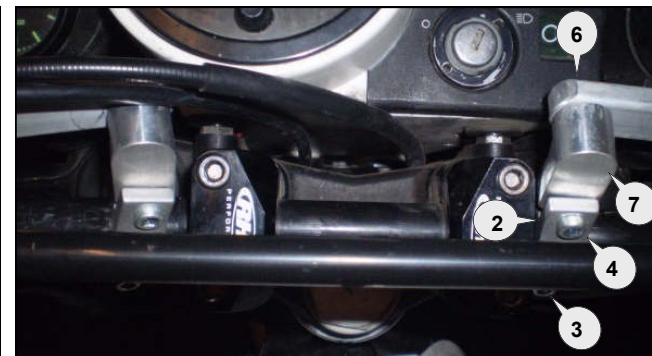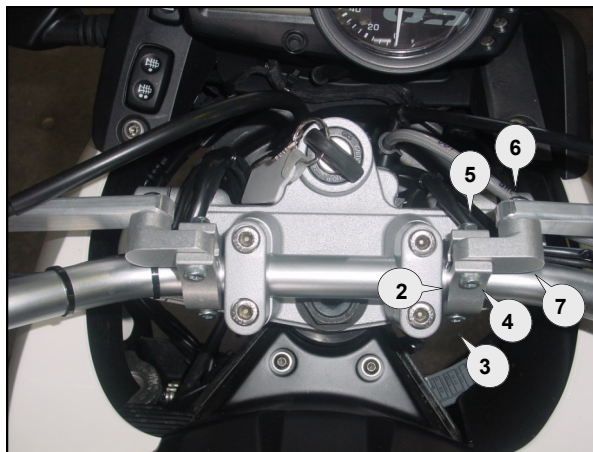

**Important:** Be sure to tighten clamp bolt (4) before bolt (3) to securely lock the clamp connector (7) between the two clamp halves (2).

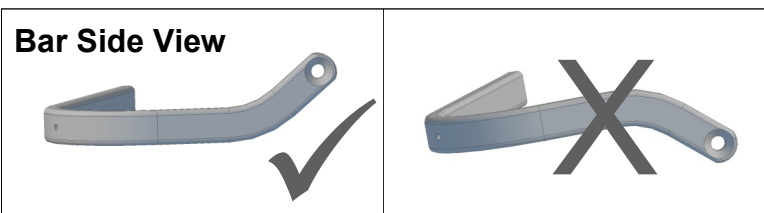

### Personalise Your Protection

Guard options sold separately

<b>JET</b>	JET-003
<b>VPS</b>	VPS-003
<b>Storm</b>	STM-003
<b>CARBON</b>	BCF-003

**RIDEWORX**

<b>1</b> Aluminium Bar  PN: BAR-V-050 Pcs. 1 Left & 1 Right	<b>2</b> Clamp Saddle  PN: CS-STD Pcs. 4 pieces	<b>3</b> Socket Head Bolt 30mm  PN: M6x30SHCSZP Pcs. 2	<b>4</b> Socket Head Bolt 25mm  PN: M6x25SHCSZP Pcs. 2	<b>5</b> Nylock Nut 6mm  PN: M6LN Pcs. 4	<b>6</b> Button Head Bolt 25mm  PN: M8x25BHCSZP Pcs. 2	<b>7</b> Clamp Connector  PN: CP3 Pcs. 2	<b>8</b> Taper Nut  PN: NUT12 Pcs. 2
<b>9</b> Expander  PN: BBE17 Pcs. 2	<b>10</b> Collar  PN: BBEC5m Pcs. 2	<b>11</b> Flat Head Bolt 45mm  PN: M8x45FHCSZP Pcs. 2	<b>12</b> Socket Head Bolt 55mm  PN: M6x55SHCSZP Pcs. 2	<b>13</b> Bolt Adaptor  PN: S7-BA Pcs. 2			

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	20 Nm (14.8 lbf ft)

### CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the below table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

### WARNING:

It is important there is a working clearance (approx 3mm) between the throttle grip end and the handguard to ensure a free closing throttle. Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight.

### Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.


INS-BHG-045-01-NP




Phone: +61 (0)2 4271 8244  
 Email: [info@barkbusters.net](mailto:info@barkbusters.net)  
 Web: [www.barkbusters.net](http://www.barkbusters.net)



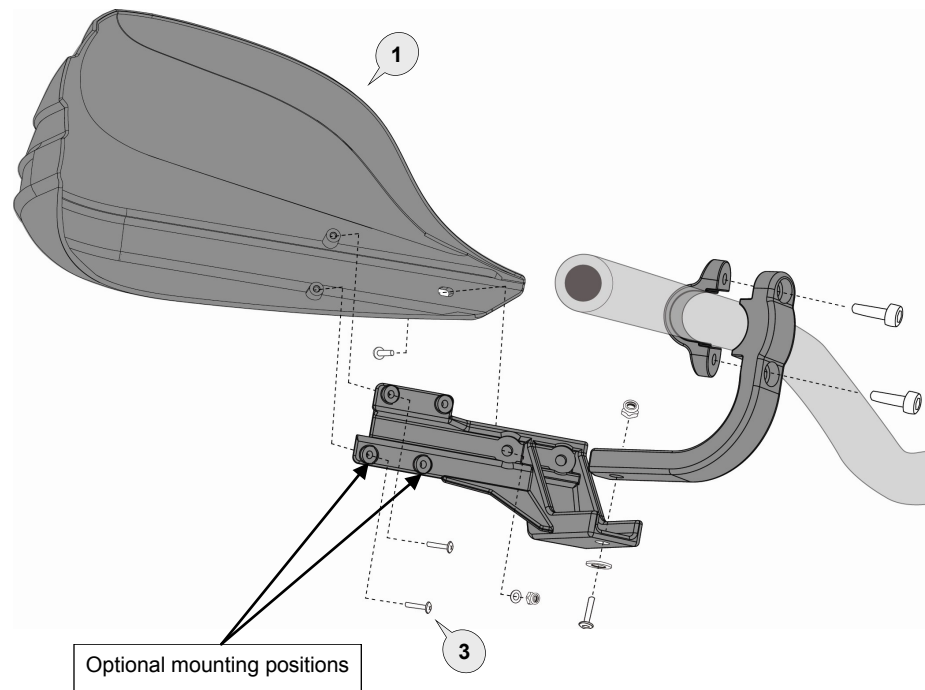

**Barkbusters**

### Option for fitting with **Single Point Handlebar Mount**

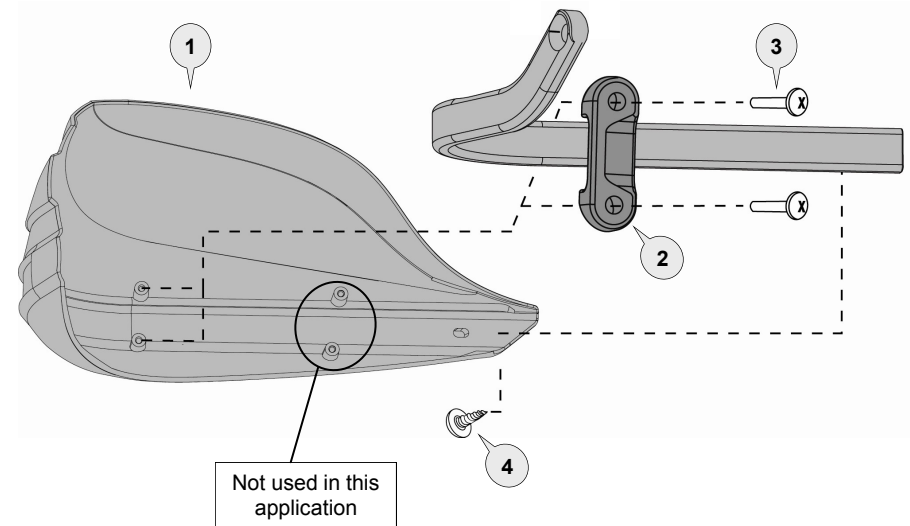

### Option for fitting with **Aluminium Backbone**



<b>1</b> Storm Plastic  PN: SP1 Pcs. 2(L/R)	<b>2</b> Saddle  PN: Storm-Saddle Pcs. 2	<b>3</b> Mush Head Screw  PN: SCREWPT3.5x14 Pcs. 4	<b>4</b> Screw  PN: STSZ811MX11 Pcs. 2
---	--	--	---

### CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the below table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

### WARNING:

Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight.

### Disclaimer:

*A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.*



Phone: +61 (0)2 4271 8244  
 Email: [info@barkbusters.net](mailto:info@barkbusters.net)  
 Web: [www.barkbusters.net](http://www.barkbusters.net)

***Barkbusters***